

DOCENTE

CURSO: MANTENIMIENTO DE PC'S XT/AT
Y PERIFERICOS PARTE II 1992

FECHA: del 19 al 30 de octubre
lunes a viernes de 17 a 21 hrs.

PROMEDIO	PUNTUALIDAD	MANTENIMIENTO DEL INTERES COMUNICACION CON LOS ASISTENTES AMENIDAD, FACILIDAD DE EXPRESION	EFICIENCIA EN EL USO DE AYUDAS AUDIOVISUALES	DOMINIO DEL TEMA
C O N F E R E N C I S T A				
1.-				ING. JUAN MAGAÑA CARRILLO
2.-				ING. SAUL MAGAÑA CISNEROS
3.-				

EVALUACION TOTAL

ESCALA DE EVALUACION: 1 A 10

EVALUACION DE LA ENSEÑANZA

CURSO: MANTENIMIENTO DE PC'S XT/AT
Y PERIFERICOS PARTE II 1992

FECHA: del 19 al 30 octubre
lunes a viernes de 17 a 21 hrs.

		ORGANIZACION Y DESARROLLO DEL TEMA	GRADO DE PROFUNDIDAD LOGRADO EN EL TEMA	GRADO DE ACTUALIZACION LOGRADO EN EL TEMA	UTILIDAD PRACTICA DEL TEMA	PROMEDIO
	T E M A					
1.-	INTRODUCCION					
2.-	REPASO DE LA PARTE I					
3.-	HERRAMIENTAS DE DIAGNOSTICO					
4.-	MICROCONTROLADORES, SISTEMAS MINIM					
5.-	PERIFERICOS Y AJUSTES PRINCIPALES					
6.	MANTENIMIENTO CORRECTIVO BASICO-					
	MEDIO					

EVALUACION TOTAL

ESCALA DE EVALUACION: 1 A 10

EVALUACION DEL CURSO

C O N C E P T O		
1.	APLICACION INMEDIATA DE LOS CONCEPTOS EXPUESTOS	
2.	CLARIDAD CON QUE SE EXPUSIERON LOS TEMAS	
3.	GRADO DE ACTUALIZACION LOGRADO EN EL CURSO	
4.	CUMPLIMIENTO DE LOS OBJETIVOS DEL CURSO	
5.	CONTINUIDAD EN LOS TEMAS DEL CURSO	
6.	CALIDAD DE LAS NOTAS DEL CURSO	
7.	GRADO DE MOTIVACION LOGRADO EN EL CURSO	
EVALUACION TOTAL		

ESCALA DE EVALUACION: 1 A 10

1.- ¿Qué le pareció el ambiente en la División de Educación Continua?

MUY AGRADABLE AGRADABLE DESAGRADABLE

2.- Medio de comunicación por el que se enteró del curso:

PERIODICO EXCELSIOR ANUNCIO TITULADO DE VISION DE EDUCACION CONTINUA	PERIODICO NOVEDADES ANUNCIO TITULADO DE VISION DE EDUCACION CONTINUA	FOLLETO DEL CURSO
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
CARTEL MENSUAL	RADIO UNIVERSIDAD	COMUNICACION CARTA, TELEFONO, VERBAL, ETC.
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
REVISTAS TECNICAS	FOLLETO ANUAL	CARTELERA UNAM "LOS UNIVERSITARIOS HOY"
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
		GACETA UNAM
		<input type="checkbox"/>

3.- Medio de transporte utilizado para venir al Palacio de Minería:

AUTOMOVIL PARTICULAR METRO OTRO MEDIO

4.- ¿Qué cambios haría en el programa para tratar de perfeccionar el curso?

5.- ¿Recomendaría el curso a otras personas? SI NO

5.a. ¿Qué periódico lee con mayor frecuencia?

6.- ¿Qué cursos le gustaría que ofreciera la División de Educación Continua?

7.- La coordinación académica fué:

EXCELENTE

BUENA

REGULAR

MALA

8.- Si está interesado en tomar algún curso INTENSIVO ¿Cuál es el horario más conveniente para usted?

LUNES A VIERNES
DE 9 a 13 H. Y
DE 14 A 18 H.
(CON COMIDAD)

LUNES A
VIERNES DE
17 a 21 H.

LUNES A MIERCOLES
Y VIERNES DE
18 A 21 H.

MARTES Y JUEVES
DE 18 A 21 H.


VIERNES DE 17 A 21 H.
SABADOS DE 9 A 14 H.

VIERNES DE 17 A 21 H.
SABADOS DE 9 A 13 H.
DE 14 A 18 H.

OTRO

9.- ¿Qué servicios adicionales desearía que tuviese la División de Educación Continua, para los asistentes?

10.- Otras sugerencias:

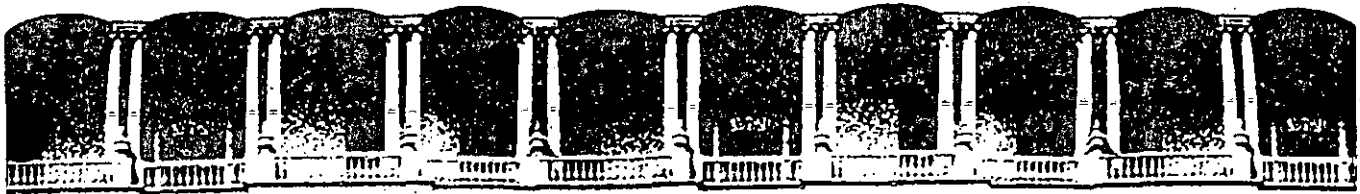

**FACULTAD DE INGENIERIA U.N.A.M.
DIVISION DE EDUCACION CONTINUA**

MANTENIMIENTO DE PC'S XT/AT Y PERIFERICOS AVANZADO

PARTE II

MATERIAL DIDACTICO

OCTUBRE, 1992.




1- INTRODUCTION

PRESENTACION.

Toda persona que de alguna forma está involucrado con las microcomputadoras, seguro sabrá que en nuestro País existen ya aproximadamente millón y medio de estas, y que el número de usuarios aumenta cada día. Es evidente que estas valiosas herramientas para que duren, necesitan de buen trato y un servicio de mantenimiento metódico y bien orientado, no obstante esto, como cualquier otro equipo hecho por el hombre para su servicio, llega a fallar.

La gran necesidad de prolongar la vida útil de las micros y periféricos, obliga a los usuarios (personas físicas y/o morales), a capacitarse para tal efecto. Quienes han dado los primeros pasos después de asistir al curso "MANTENIMIENTO PREVENTIVO DE PC'S Y PERIFERICOS" que se imparte en esta División desde 1988, han encontrado la respuesta positiva a ese requerimiento.

Sin duda alguna, sabiendo que es necesario avanzar en el TEMA, se ha diseñado este curso "MANTENIMIENTO DE PC'S Y PERIFERICOS PARTE II", donde se abundará sobre la parte I, pasando por el mejor conocimiento de los sistemas mínimos y sus funciones, la tendencia y metodología del mantenimiento correctivo-básico, hasta llegar al Ensamblado de micros, mismas que se dejarán funcionando.

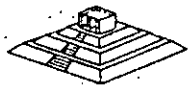

OBJETIVOS.

Reafirmar en el participante lo visto en la PARTE I del tema y elevarar su gradiente con nuevos conocimientos, y tendencias actuales en las metodologías.

Reforzar la confianza del participante con las prácticas de la teoría vista en cada apartado del temario, a efecto de que consolide los hábitos adecuados para el uso y mantenimiento preventivo y correctivo Básico-Medio de sus equipos, sin pretender llegar a detalles de alto nivel en el campo de la Ingeniería del-Hardware para microcomputadoras.

Lograr que los participantes estén ciertos de no abusar de la confianza adquirida y no perderle el respeto a los equipos, a efecto de que en la última fase del curso y en trabajo de grupo, apliquen los conocimientos adquiridos y terminen armando microcomputadoras, mismas que se harán pasar por pruebas de funcionamiento y control de calidad, hasta dejarlas listas para su uso normal.

A QUIEN VA DIRIGIDO

A todas aquellas personas (físicas y/o morales), que manejen, supervisen, y/o administren el uso de las microcomputadoras y sus periféricos, y desde luego que requieran de prolongar la vida útil de sus equipos.

REQUISITOS PARA LA INSCRIPCION:

Tendrán prioridad quienes hayan pasado por el curso de *MANTENIMIENTO PREVENTIVO DE PC'S Y PERIFERICOS.* Es recomendable que el participante cuente por lo menos con un multímetro y maneje ámpliamente MS-DOS.



03

MANTENIMIENTO DE PC'S XT/AT Y PERIFERICOS PARTE II

TEMARIO

1.- INTRODUCCION

2.- REPASO DE LA PARTE I

- 2.1 Arquitectura de una Microcomputadora
- 2.2 Características de los equipos
AT-286, AT-386, AT-486 y sistemas PS/2
- 2.3 Expediente de control
- 2.4 Mantenimiento Preventivo
- 2.4 Sección de Práctica

3.- HERRAMIENTAS DE DIAGNOSTICO

- 3.1 Programas de Diagnóstico
- 3.2 "EPROM'S" de Diagnóstico
- 3.3 Rutinas al "BIOS" como herramientas de
Diagnóstico
- 3.4 Equipos de Diagnóstico
- 3.5 Sección de Práctica

4.- MICROCONTROLADORES PRINCIPALES Y SISTEMAS MINIMOS

- 4.1 Generador de Reloj
- 4.2 Controlador de Bus
- 4.3 Controlador de DMA
- 4.4 Controlador de Periféricos Programable
- 4.5 Controlador de Unidades de Disco
- 4.6 Controlador de Teclado
- 4.7 Sección de Práctica

5.- PERIFERICOS Y AJUSTES PRINCIPALES

- 5.1 Monitores
- 5.2 Unidades de Disco
- 5.3 Impresores
- 5.4 Sección de Práctica

6- MANTENIMIENTO CORRECTIVO BASICO-MEDIO


- 6.1 Diagramas
- 6.2 Tendencia del Servicio y Metodología práctica
- 6.3 Señales de Prueba y Diagnóstico
- 6.4 Microcontroladores, relojes y bases de tiempo
- 6.5 Sección de Práctica

7- DISCOS DUROS

- 7.1 Principales Tecnologías y sus características
- 7.2 Fallas de origen y Mantenimiento Físico
- 7.3 Mantenimiento Lógico
- 7.4 Utillerías y Software de apoyo



8- LABORATORIO DE ENSAMBLE DE MICROS

- 8.1 Catálogo de Partes
- 8.2 Metodología de Ensamble
- 8.3 Taller de Ensamble
- 8.4 Pruebas de Funcionamiento
- 8.5 Control de Calidad

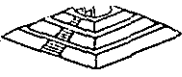

2.- REBASO DE LA PARTE 1

Arquitectura de una computadora

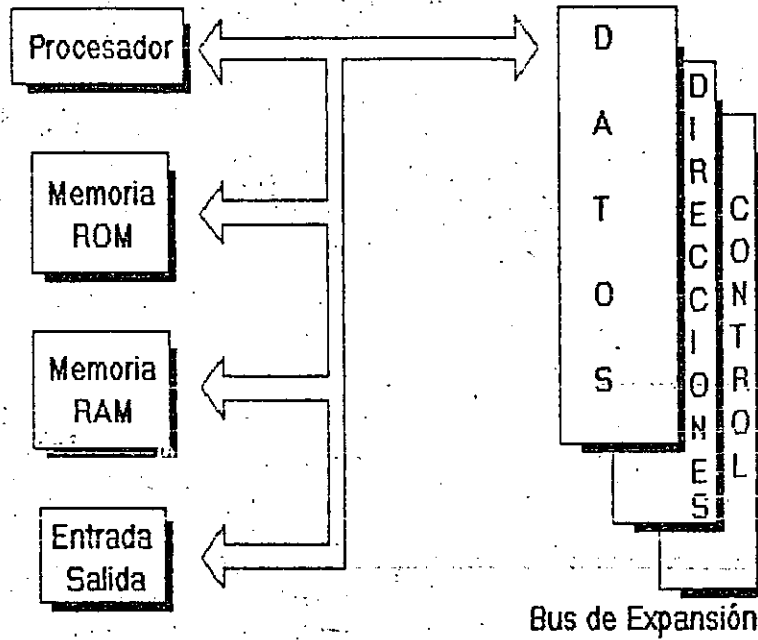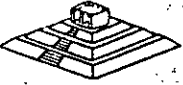

apuntes


Arquitectura de una computadora



B.1 System Block Diagram



ATTACHMENT II

BLOCK DIAGRAM

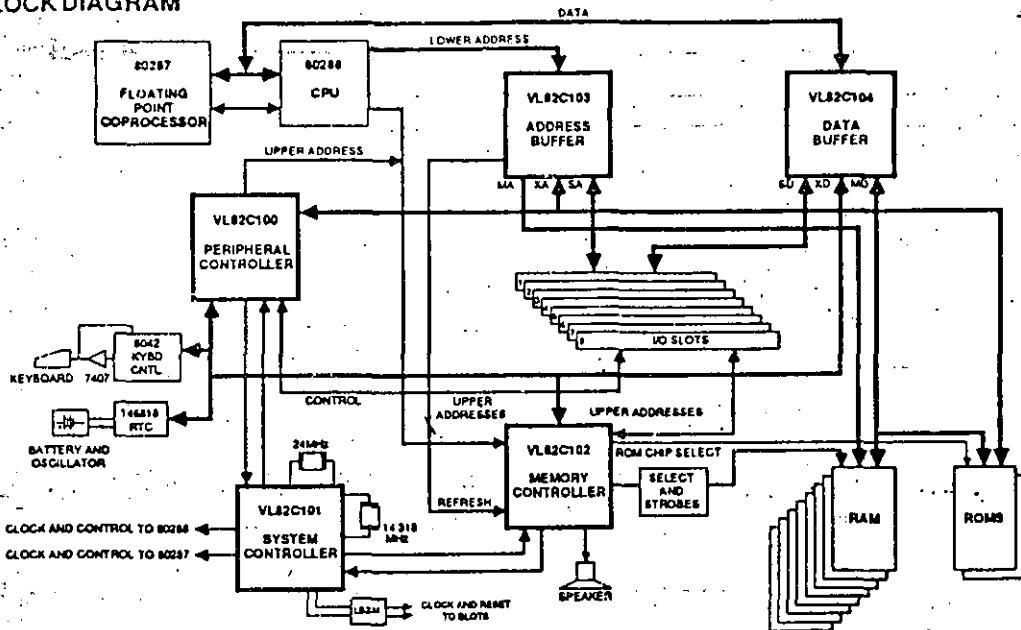


apuntes

Mapa de memoria XT (RAM)

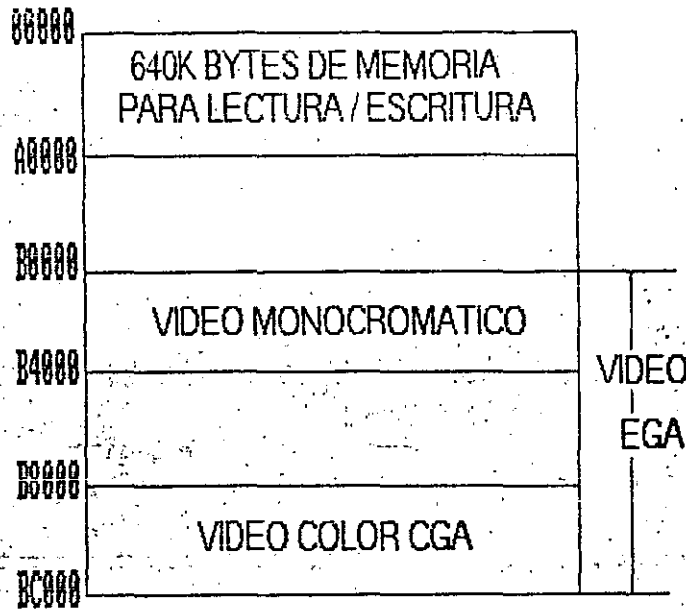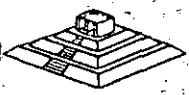

apuntes

Mapa de memoria XT (ROM)

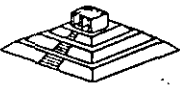

C0000	
C8000	DISCO DURO
CC000	192K PARA EXPANSION DE ROM
F0000	ESPACIO DEL USUARIO
FE000	
FFFFF	AREA DEL BIOS

apuntes

Arquitectura de una computadora



C.1 System Memory Map

Address Range	Start-End	Name	Function
000000-03FFFF	000K-256K	Bank 0	System memory (256K)
040000-07FFFF	256K-512K	Bank 1	System memory (256K)
080000-09FFFF	512K-640K	Bank 2	System memory (128K)
0AFFFF-0BFFFF	640K-768K	Video	Display card buffer (128K)
0C0000-0DFFFF	768K-896K	I/O ROM	Expansion ROM (128K)
0E0000-0EFFFF	896K-960K	ROM	System usage (64K)
0F0000-0FFFFF	960K-1024K	ROM	BIOS (64K)
100000-11FFFF	1024K-1152K	Bank 2	System memory (128K)
120000-15FFFF	1152K-1408K	Bank 3	System memory (128K)
160000-FDFFFF	1408K-16146K	RAM	Expansion RAM (14870K)
FE0000-FEFFFF	16146K-16210K	ROM	System usage (64K)
FF0000-FFFFFF	16210K-16274K	ROM	BIOS (64K)

apuntes

Arquitectura de una computadora


D.1 I/O Address Map




Hex Range	Devices	Usage
000-01F	DMA Controller 1	System
020-03F	Interrupt controller 1	System
040-05F	Timer	System
060-06F	8042 (keyboard)	System
070-07F	Real time clock, NMI mask	System
080-09F	DMA page register	System
0A0-0BF	Interrupt controller 2	System
0C0-0DF	DMA controller 2	System
0F0	Clear math Coprocessor busy	System
0F1	Reset math coprocessor	System
0F8-0FF	Math coprocessor	System
1F0-1F8	Fixed disk	I/O
200-207	Game I/O	I/O
278-27F	Parallel printer port 2	I/O
2F8-2FF	Serial port 2	I/O
300-31F	Prototype card	I/O
360-36F	Reserved	I/O
378-37F	Parallel printer port 1	I/O
380-38F	SDLC, bisynchronous 2	I/O
3A0-3AF	Bisynchronous 1	I/O
3B0-3BF	Monochrome display and printer adapter	I/O
3C0-3CF	Reserved	I/O
3D0-3DF	Color/graphics monitor adapter	I/O
3F0-3F7	Diskette controller	I/O
3F8-3FF	Serial port 1	I/O

apuntes

Arquitectura de una computadora bus XT

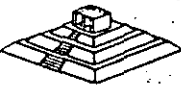

REAR PANEL

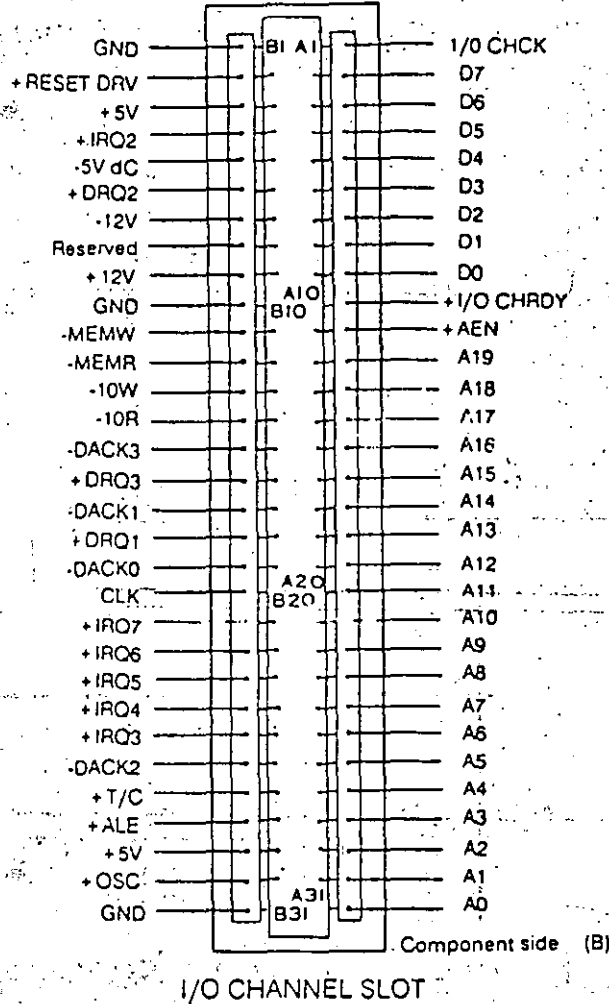

apuntes

Arquitectura de una computadora



D.2 I/O Channel

Rear Panel

GND	B1	A1	-I/O CH CK
RESET DRV	B2	A2	SD7
+5Vdc	B3	A3	SD6
IRQ2	B4	A4	SD5
-5Vdc	B5	A5	SD4
DRQ2	B6	A6	SD3
-12Vdc	B7	A7	SD2
OWS	B8	A8	SD1
+12Vdc	B9	A9	SD0
GND	B10	A10	-I/O CH RDY
-SMEMW	B11	A11	AEN
-SMEMR	B12	A12	SA19
-IOW	B13	A13	SA18
-IOR	B14	A14	SA17
-DCK3	B15	A15	SA16
DRQ3	B16	A16	SA15
-DACK1	B17	A17	SA14
DRQ1	B18	A18	SA13
-REFRESH	B19	A19	SA12
CLK	B20	A20	SA11
IRQ7	B21	A21	SA10
IRQ6	B22	A22	SA9
IRQ5	B23	A23	SA8
IRQ4	B24	A24	SA7
IRQ3	B25	A25	SA6
-DACK2	B26	A26	SA5
T/C	B27	A27	SA4
BALE	B28	A28	SA3
+5Vdc	B29	A29	SA2
OSC	B30	A30	SA1
GND	B31	A31	SA0

slot 1 - slot 8.

apuntes

Arquitectura de una computadora



-MEMCS16	D1	C1	SBHE
I/O CS16	D2	C2	LA23
IRQ16	D3	C3	LA22
IRQ11	D4	C4	LA21
IRQ12	D5	C5	LA20
IRQ15	D6	C6	LA19
IRQ14	D7	C7	LA18
-DACK0	D8	C8	LA17
DRQ0	D9	C9	-MEMR
-DACK5	D10	C10	MEMW
DRQ5	D11	C11	SD08
-DACK6	D12	C12	SD09
DRQ6	D13	C13	SD10
-DACK7	D14	C14	SD11
DRQ7	D15	C15	SD12
+5Vdc	D16	C16	SD13
-MASTER	D17	C17	SD14
GND	D18	C18	SD15

slot 10 - slot 15

apuntes

Arquitectura de una computadora



E.1 DMA Channels

Channel	Function
0	Spare (8-bit transfer)
1	SDLC (8-bit transfer)
2	Floppy disk (8-bit transfer)
3	Spare (8-bit transfer)
4	Cascade for DMA controller
5	Spare (16-bit transfer)
6	Spare (16-bit transfer)
7	Spare (16-bit transfer)

E.2 DMA Controller Registers

Hex Address	Command Codes
0C0	CH0 base and current address
0C2	CH0 base and current word count
0C4	CH1 base and current address
0C6	CH1 base and current word count
0C8	CH2 base and current address
0CA	CH2 base and current word count
0CC	CH3 base and current address
0CE	CH3 base and current word count
0D0	Read status register/Write command register
0D2	Write mode register
0D4	Read temporary registers/write command register
0D6	Write mode register
0D8	Clear byte pointer flip-flop
0DA	Read temporary register/Write mask clear
0DC	Clear mask register
0DE	Write all mask register bits

apuntes

particular

Arquitectura de una computadora



E.3 Page Register Addresses

Page Register	I/O Hex Address
DMA Channel 0	0087
DMA Channel 1	0083
DMA Channel 2	0081
DMA Channel 3	0082
DMA Channel 5	008B
DMA Channel 6	0069
DMA Channel 7	008A
Refresh	008F

E.4 Interrupts

Level	Function
0	System timer output 0
1	Keyboard output buffer full
2	Interrupt from controller 2 (level 8-15)
3	Serial port 2
4	Serial port 1
5	Parallel port 2
6	Diskette controller
7	Parallel port
8	Real-time clock
9	Software redirected to INT 0AH
10	Reserved
11	Reserved
12	Reserved
13	30287
14	Hard disk drive
15	Reserved

apuntes

Arquitectura de una computadora



E.5 Timers


Channel	Function
0	System timer
1	Refresh request generator
2	Tone generation for speaker

apuntes


Características de los Procesadores



* Modo REAL * Modo PROTEGIDO


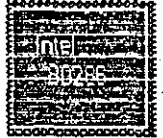




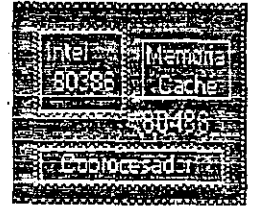

apuntes


Características de las distintas arquitecturas

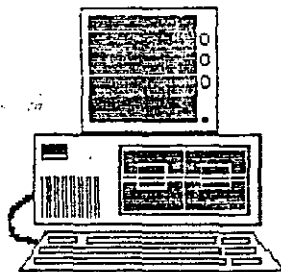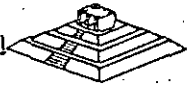

XT 8088

- Liberación: 1982
- Direccionamiento: 1MB
- Memoria Usuario: 640KB
- Almacenamiento:
32MB (MS-DOS 2.xx)
70MB (MS-DOS 3.xx)
- Velocidad: de 4.77 a 10 Mhz.

* \$:

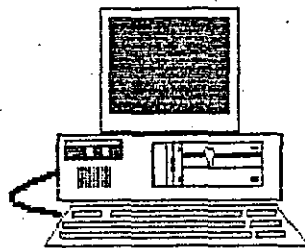



AT 80286

- Liberación: 1986
- Direccionamiento: 16MB
- Memoria Usuario: 15MB
- Almacenamiento: 2GB
- Velocidad: de 8 a 16 Mhz.

* \$:


apuntes

Características de las distintas arquitecturas

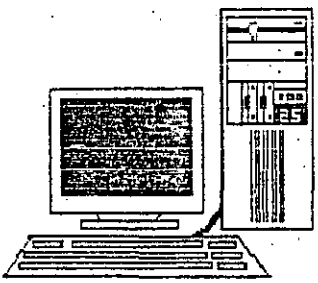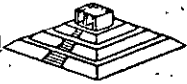

AT 80386-80386/SX

- * Liberación: 1982
- * Direccionamiento: 4GB
- * Memoria Usuario:
Limitante Tecnológica
- * Almacenamiento: en TB
- * Velocidad: de 16 a 30 Mhz.
- * \$:

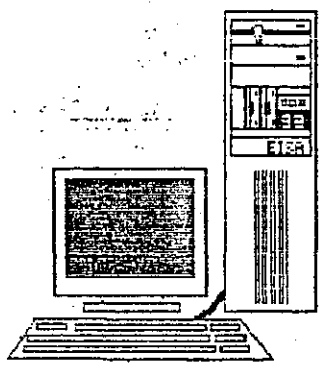


AT 60486

- * Liberación: 1990
- * Características
Similares al 386
- * Incluye Memoria Caché
y Coprocesador
- * Tecnología: RISC
- * Velocidad: de 25 a 55 Mhz.
- * \$:

apuntes

Principales Periféricos

Características

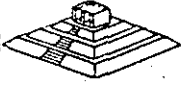

IMPRESORES

Paralelo / Serial
Impacto / No Impacto
Vel. de impresión (c.p.s.)
Tipo de Alimentación
Buffer



MODEMS

Homologados
Internos / Externos
Vel. de Transmisión (B.p.s.)
Protocolo
Inteligentes
Niveles de M.P.N.



CONTROLADORES

Dependiendo del tipo, se ponderan varios puntos.



UNIDADES DE ALMACENAMIENTO Y/O RESPALDO

Capacidad
Tecnología
Velocidad
Costo

apuntes

Configuración switches XT




A.3 Descriptions of the corresponding DIP Switches

1) SW1 -- DIP Switch One

Switch No.	Default Setting	Function
SW1-1	OFF	Enables disk drive.
SW1-2	ON	Disables 8087 interrupt.
SW1-3	*	(SW1-3 and SW1-4 determine the amount of RAM installed on the system board.)
SW1-4	*	
SW1-5	*	Determines display type.
SW1-6	*	Determines display type.
SW1-7	*	(SW1-7 and SW1-8 determine the number of disk drive(s) installed to the system unit.)
SW1-8	*	

Configuración switches XT

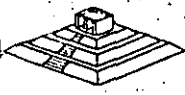

2) SW2 -- DIP Switch Two

Switch No.	Default Setting	Function
SW2-1		Reserved.
SW2-2		Reserved.
SW2-3		Reserved.
SW2-4		Reserved.
SW2-5		Reserved.
SW2-6	*	Determines the maximum amount of RAM which can be installed to the system board without using a memory expansion adapter.
SW2-7	ON	Enables the built-in RS-232C port.
SW2-8	ON	Enables the built-in parallel port.

apuntes

Configuración switches XT



A.5 Quick reference for Switch Settings involved with the memory size

SW2-6 ON - indicates the 640KB version.
OFF - indicates the 256KB version.

SW1-3	SW1-4	Enabled Bank	256K Version	640K Version
ON	ON	1	64K	256K
OFF	ON	1,2	128K	512K
ON	OFF	1,2,3	192K	576K
OFF	OFF	1,2,3,4	256K	640K

apuntes

Configuración switches AT




Quick Guide

■ ON (for closed) □ OFF (for open)

FUNCTION SELECTION	SW1				SW2				SW3				SW4		JPT									
	1	2	3	4	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	COLOR	MONO	A	B
RAM SIZE	256KB																							
	512KB																							
	640KB																							
DISPLAY TYPE	DISABLE																					COLOR	A	
	COLOR																					COLOR	B	
	MONOCHROME																					MONO	B	
SYSTEM SPEED	HIGH SPEED (10 MHz)																							
	LOW SPEED (4.77 MHz)																							
DRIVE NUMBER	4 DISK DRIVE																							
	1 DISK DRIVE																							
	2 DISK DRIVE																							
BOP-1	ENABLE																							
	DISABLE																							
COM1	ENABLE																							
	DISABLE																							
COM2	ENABLE																							
	DISABLE																							

* RTC BANK WINDOW ADDRESS ON BOARD DISPLAY DISABLE | please refer to manual for

Switch Position

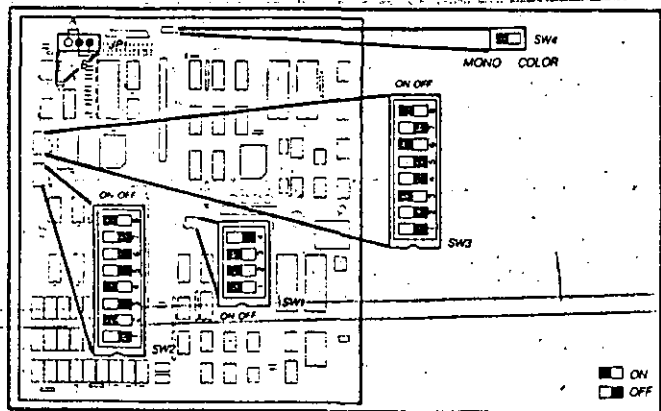

40.71003.011

apuntes

Configuración switches AT




SW1 - SWITCH ONE

Switch No.	Setting	Function
SW1-1	OFF	Disable COM1
	ON (DEFAULT)	Enable COM1
SW1-2	OFF	Disable COM2
	ON (DEFAULT)	Enable COM2
SW1-3	OFF	Enable real time clock (RTC1)
	ON (DEFAULT)	Enable real time clock (RTC0)
SW1-4	OFF (DEFAULT)	Disable IRQ2
	ON	Enable IRQ2

apuntes

Que es un jumper ?

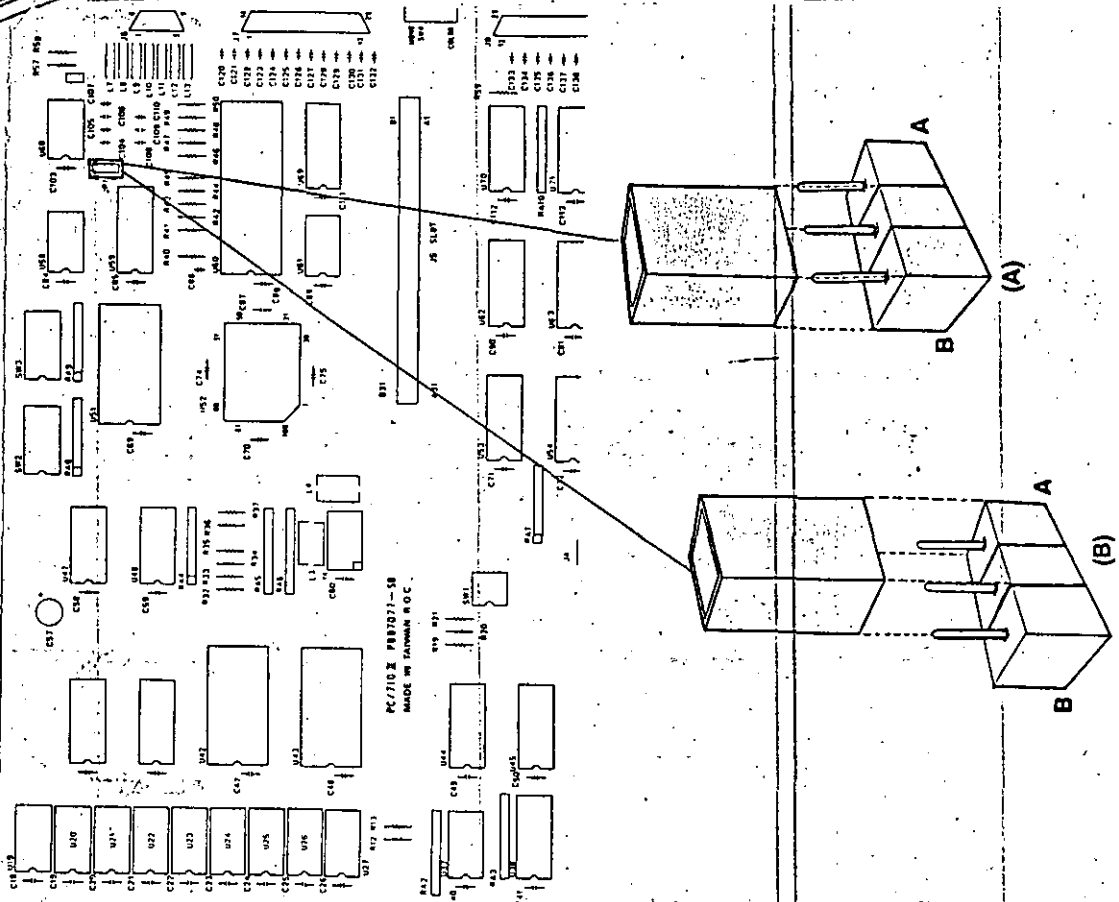

apuntes

Jumpers AT



JUMPER SETTING FOR DISPLAY AT JP1

The built-in display interface supports flicker free scrolling for the following display types:

- IBM monochrome compatibility
- IBM color graphics compatibility
- Hercules monochrome graphics compatibility
- Plantronics color plus compatibility

You may enable or disable the built-in display adapter by setting the JP1 jumper.

When using EGA card, the build-in display interface should be disabled by closing jumper JP1 at position A and setting SW2-6 to ON. The slide switch SW4 must be set to COLOR or MONOCHROME respectively when using color or monochrome monitor. Set SW4 to color if EGA mode is used.

apuntes

Configuración switches AT



Refer to the table on the floppy disk driver bracket. Adjacent to 768 KB and under SW2 you will see two small rectangles. The rectangles indicate how the switches are set. The third switch on switch block SW2 (SW2-3), and the fifth switch on switch block SW3 (SW3-5) are both set to OFF; and the fourth switch on the switch block SW2 (SW2-4), and the sixth switch on switch block SW3 (SW3-6) are both set to ON.

Again referring to the table, the two diskette drive configuration requires you to set the switches SW2-1, SW2-7 and SW2-8 to OFF, OFF and ON respectively.

apuntes

BIOS AMERICAN MEGATRENDS



CMOS SETUP (C) Copyright 1985-1989, American Megatrends Inc.,

Date (mn/date/year) : Wed, Mar 15 1989
 Time (hour/min/sec) : 13 : 29 : 34
 Floppy drive A: : 1.44 MB, 3 1/2"
 Floppy drive B: : 1.2 MB, 5 1/4"

Base memory size : 640 KB
 Ext. memory size : 384 KB
 Numeric processor : Not installed

Hard disk C: type : 47 = USER TYPE
 Hard disk D: type : 40
 Primary display : VGA or EGA
 Keyboard : Installed

Cyln	Head	WPcom	LZone	Sec	Size
1224	16	1224	1224	36	330 MB
820	6	820	820	17	42MB

Scratch RAM option : 1

FIXED type = 01....46, USER defined type = 47.
 For type 47 Enter: Cyln,Head,WPcom,LZone,Sec,
 (WPcom is 0 for ALL, 65535 for NONE)

Sun	Mon	Tue	Wed	Thu	Fri	Sat
26	27	28	1	2	3	4
5	6	7	8	9	10	11
12	13	14	15	16	17	18
19	20	21	22	23	24	25
26	27	28	29	30	31	1
2	3	4	5	6	7	8

ESC = Exit, ↓ ← ↑ → = Select, PgUp/PgDn = Modify

apuntes



BIOS AMERICAN MEGATRENDS



Use the ↓ ← ↑ → keys to highlight the parameters you want to change.
Use the <PgUp> and <PgDn> keys to modify the values.

Date and Time

Use the ↓ ← ↑ → keys to select the parameters you want to change.
Use the <PgUp> and <PgDn> keys to cycle through the available settings.

Floppy Disk Drives

Select the Floppy drive field. Press the <PgUp> and <PgDn> keys to cycle through the available settings. Available floppy disk drives are 5 1/4" (360KB, 1.2MB) and 3 1/2" (720KB, 1.44MB). If your system does not have a floppy drive B, be certain to specify "Not installed".

Primary Display

Select the Primary display field to establish the primary video display adapter type. Press the <PgUp> and <PgDn> keys to cycle through the available settings:

- Monochrome (Monochrome adapter, including MDA and Hercules)
- Color 40x25 (Color Graphics Adapter initialized in 40-column mode)
- EGA (Enhanced Graphics Adapter) or VGA (Video Graphic Array).
- Color 80x25 (Color Graphics Adapter initialized in 80-column mode).



BIOS AMERICAN MEGATRENDS



Hard Disk Drives

For hard disk drives, use the <PgUp> and <PgDn> keys to cycle through the 46 types of disk drives supported. Type 47 is given to help the user defined its own drive type which will be stored in the CMOS. See Table 3.2 for a printed list of these drive types.

Bypassing Keyboard Error

To configure the system for non dedicated file servers, you can set the keyboard "Not installed" in the SETUP menu so that BIOS will not report any "Keyboard error" and will not wait for "F1" key to be pressed during system boot.

apunttes

BIOS AMERICAN MEGATRENDS



Bypassing Video Error

To configure the system for non dedicated file servers, you can set the video "Not installed" in the SETUP menu if you do not have a display connected. The BIOS will not report any "Video error" and will not wait for any "F1" key to be pressed during system boot.

Bypassing Floppy Error

To configure the system without floppy controller, you can set both the BIOS supported floppy drives (A and B) as "Not installed". In that case BIOS will not check for the floppy controller and will not report any error.

After you have finished with the SETUP program, press the <Esc> key. A prompt will then appear:

Write data into CMOS and exit (Y/N)

Type "Y" and press the <Enter> key. The computer performs a cold boot (equivalent to turning the power off and back again), followed by memory test, and then tries to boot from the disk drive. If your hard disk has not yet been initialized, be sure that you have a bootable DOS diskette.



Table 3.2 Supported Hard Disk Drives

Type	Cylinders	Heads	Write Precomp	Landing Zone	Capacity
1	306	4	128	305	10MB
2	615	4	300	615	20MB
3	615	6	300	615	31MB
4	940	8	512	940	62MB
5	940	6	512	940	47MB
6	615	4	None	615	20MB
7	462	8	256	511	31MB
8	733	5	None	733	30MB
9	900	15	None	901	112MB
10	820	3	None	820	20MB
11	855	5	None	855	35MB
12	855	7	None	855	50MB
13	306	8	128	319	20MB
14	733	7	None	733	43MB
15	Reserved				
16	612	4	All	663	20MB
17	997	5	300	977	41MB
18	977	7	None	997	57MB
19	1024	7	512	1023	60MB
20	733	5	300	732	30MB
21	733	7	300	732	43MB
22	733	5	300	733	30MB
23	306	4	All	336	10MB
24	925	7	All	925	54MB
25	925	9	None	925	69MB
26	754	7	754	754	44MB
27	754	11	None	754	69MB
28	699	7	256	699	41MB
29	823	10	None	823	68MB
30	918	7	918	918	53MB
31	1024	11	None	1024	94MB
32	1024	15	None	1024	128MB

Continue on next page ...

BIOS AMERICAN MEGATRENDS



Table 3.2 Supported Hard Disk Drives

Type	Cylinders	Heads	Write Precomp	Landing Zone	Capacity
33	1024	5	1024	1024	43MB
34	612	2	128	612	10MB
35	1024	9	None	1024	77MB
36	1024	8	512	1024	68MB
37	615	8	128	615	41MB
38	987	3	987	987	25MB
39	987	7	987	987	57MB
40	820	6	820	820	41MB
41	977	5	977	977	41MB
42	981	5	981	981	41MB
43	830	7	512	830	48MB
44	830	10	None	830	69MB
45	917	15	None	918	114MB
46	1224	15	None	1223	152MB

apuntes

BIOS AWARD



The SETUP program lets you specify your system's configuration of diskette drives, hard disk drives, video display, memory, date and time. The SETUP program is built-in, you do not need a diskette to use it.

Note

The following procedures assume your system has the Award 286 Modular BIOS installed. If your system has a different BIOS installed, these procedures will not work.

To run SETUP program, simultaneously press the < Ctrl > < Alt > < Esc > keys. The SETUP screen appears on your display:

AWARD SOFTWARE CMOS SETUP					
DATE (MM/DD/YY)	6/15/89				
TIME (HH:MM:SS)	11:08:14				
DISKETTE 1	1.2M				
DISKETTE 2	360K				
		CYLS	HEADS	SECTORS	PRECOME
DISK 1	22	733	5	17	300
DISK 2	NONE				
VIDEO	EGA				
BASE MEMORY	512				
EXTENDED MEMORY	0				
ERROR HALT	NO DISK ERROR HALT				
SPEED SELECT	NO CHANGE				
↓ ↑ moves between items, ← → selects values					
F10 records changes, F1 exits, F2 for color toggle					

apuntes

BIOS AWARD



Table 3.3 Supported Hard Disk Drives

Type	Cylinders	Heads	Write Precomp	Landing Zone	Specific Disk
0	306	4	128	305	
1	615	4	300	615	Seagate 225
2	615	6	300	615	
3	940	8	512	940	
4	940	6	512	940	
5	615	4	0	615	
6	462	8	256	511	
7	733	5	0	733	Seagate 4038
8	900	15	0	901	
9	820	3	0	820	
10	855	5	0	855	
11	855	7	0	855	
12	855	7	0	855	
13	306	8	128	319	Seagate 225
14	733	7	0	733	
15	Reserved				
16	612	4	0	663	
17	997	5	300	997	
18	997	7	0	997	
19	1024	7	512	1023	
20	733	5	300	732	
21	733	7	300	732	
22	733	5	300	733	Seagate 4038
23	306	4	0	336	
24	Reserved				
25	1024	9	0	1023	Seagate 4096
26	1224	7	0	1223	Maxtor 2085
27	1224	11	0	1223	Maxtor 2140
28	1224	15	0	1223	Maxtor 2190
29	1024	8	0	1023	Maxtor 1085
30	1024	11	0	1023	Maxtor 1105
31	918	11	0	1023	Maxtor 1170

Continue on next page ...

BIOS AWARD



Table 3.3 Supported Hard Disk Drives

Type	Cylinders	Heads	Write Precomp	Landing Zone	Specific Disk
32	925	9	0	926	CDC 9415
33	1024	10	0	1023	Generic 10hd
34	1024	12	0	1023	Generic 12hd
35	1024	13	0	1023	Generic 13hd
36	1024	14	0	1023	Generic 14hd
37	1024	2	0	1023	Generic 2hd
38	1024	16	0	1023	Generic 16hd
39	918	15	0	1023	Maxtor 1140
40	820	6	0	820	Seagate 251
41	1024	5	512	1024	Miniscribe 6053
42	988	5	128	988	Core In'tl AT 43
43	1024	5	124	1023	CMS-K40
44	1024	8	512	1024	Miniscribe 6085

Setting the Video Display Configuration

Select the VIDEO field to establish the primary video display adapter type. Press the ← → keys to cycle through the available settings:

- EGA (Enhanced Graphics Adapter)
- 40 Color (Color Graphics Adapter initialized in 40-column mode)
- 80 Color (Color Graphics Adapter initialized in 80-column mode)
- MONO (Monochrome adapter, including MDA and Hercules)

Select the settings that suits your display adapter.

Registros de Reloj



D.4 Real-Time CLock Information

(Addresses 00-0D)


Byte	Function	Address
0	Seconds	00
1	Second alarm	01
2	Minutes	02
3	Minute alarm	03
4	Hours	04
5	Hour alarm	05
6	Day of week	06
7	Date of month	07
8	Month	08
9	Year	09
10	Status register A	0A
11	Status register B	0B
12	Status register C	0C
13	Status register D	0D

apuntes



3.- HERRAMIENTAS DE DIAGNOSTICO

PROGRAMAS DE DIAGNOSTICO

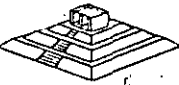

TM

CheckIt

PC DIAGNOSTIC SOFTWARE


Serial Number: 00-000000

COPYRIGHT (c) 1990, 1991 TouchStone Software Corporation
 COPYRIGHT (c) 1989, 1990 Diagsoft, Inc.
 ALL RIGHTS RESERVED.

Press Any Key to Continue

apuntes

PROGRAMAS DE DIAGNOSTICO

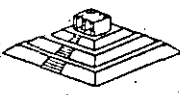

CheckJit 2.1

LOADING

INVESTIGATING SYSTEM CONFIGURATION.


- Local ↓ Check for Remote Operation
- AMI ↓ Identify BIOS Manufacturer
- Complete ↓ Determine System Components
- Complete ↓ Look for RAM (Base, Extended, Expanded)
- Not Present ↓ Look for Math Co-processor
- Not Present ↓ Look for Mouse

System Configuration Checks Complete.

Press Any Key to Continue

apuntes

PROGRAMAS DE DIAGNOSTICO

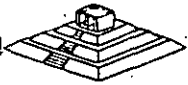

CheckIt 3.20

SysInfo Tests Benchmarks Tools Setup Exit

Configuration
Interrupts
CMOS Table
Device Drivers

Displays information about the hardware and firmware on this PC.

Use Arrows to Point • Return to Select • F1 - Help • ESC - Cancel

apuntes

PROGRAMAS DE DIAGNOSTICO



CheckIt 3.20

SysInfo Tests Benchmarks Tools Setup Exit

Configuration Information

DOS Version: 3.31

ROM BIOS: Unknown

BIOS Date: Unknown

Processor Type: 80286 XT Machine

Math Coprocessor: Not Present

Base Memory: 640K

Largest Free Block: 200K

Extended Memory: None

EXPANDED Memory: None

Video Adapter: CGA

Video Address: B800h

Video RAM Size: 16K

Hard Drive(s): Drive 0 (C:) = 33M

Floppy Drive(s): A:Present

Clock/Calendar: None

Parallel Port(s): LPT1=3BCh, LPT2=378h


Serial Port(s): COM1=3F8h

Joystick(s): None

Mouse: None

F2 - Copy to Activity Log • Press Any Other Key to Continue

PROGRAMAS DE DIAGNOSTICO

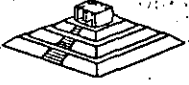

CheckIt 2.1

<u>SysInfo</u>	Tests	Benchmarks	Tools	Setup	Exit
----------------	-------	------------	-------	-------	------

Configuration Information

```

DOS Version: 3.31
ROM BIOS: AMI
BIOS Date: 04/09/90


Processor Type: 80386 AT Machine
Math Coprocessor: Not Present
Base Memory: 640K
Available: 436K
Extended Memory: 1024K
Available: 0K
EXPANDED Memory: No EMS driver installed
Video Adapter: EGA
EGA Switches: 0110
Video Address: A000h
Video RAM Size: 256K
Hard Drive(s): Drive 0 (Non-DOS) = 43M
Floppy Drive(s): A:1.2M(5 1/4"), B:1.44M(3 1/2")
Clock/Calendar: CMOS Clock
Parallel Port(s): LPT1=3BCh, LPT2=278h
Serial Port(s): COM1=3F8h, COM2=2F8h
Mouse: None
Joystick(s): None

```

F2 - Copy to Activity Log ■ Press Any Other Key to Continue

apuntes

PROGRAMAS DE DIAGNOSTICO

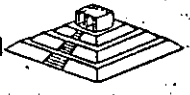

CheckIt 3.20


SysInfo Tests Benchmarks Tools Setup Exit

Configuration
Interrupts
CMOS Table
Device Drivers

Displays information about the hardware and firmware on this PC.

Use Arrows to Point ■ Return to Select ■ F1 - Help ■ ESC - Cancel

PROGRAMAS DE DIAGNOSTICO

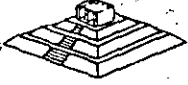

CheckIt 3.20

SysInfo Tests Benchmarks Tools Setup Exit

Interrupt Usage

INTERRUPT ASSIGNMENTS:

IRQ 0 System Timer,SK
IRQ 1 Keyboard,SK
IRQ 2 Available
IRQ 3 Available
IRQ 4 COM1
IRQ 5 Hard Disk
IRQ 6 Floppy Disk
IRQ 7 LPT1,LPT2

DEVICES WITH NO IRQ

None


STANDARD DMA ASSIGNMENTS:

DMA 0 RAM Refresh
DMA 1
DMA 2 Floppy Disk
DMA 3 Fixed Disk

F2 - Copy to Activity Log • Press Any Other Key to Continue

apuntes

PROGRAMAS DE DIAGNOSTICO

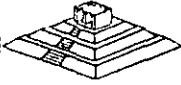

CheckIt 2.1

SysInfo Tests Benchmarks Tools Setup Exit

Interrupt Usage

INTERRUPT ASSIGNMENTS:

- IRQ 0 System Timer,SK
- IRQ 1 Keyboard,SK
- IRQ 2 [Cascade]
- IRQ 3 COM2,NET#0S
- IRQ 4 COM1
- IRQ 5 Available
- IRQ 6 Floppy Disk
- IRQ 7 LPT1
- IRQ 8 Clock/Calendar
- IRQ 9 Available
- IRQ 10 Available
- IRQ 11 Available
- IRQ 12 Available
- IRQ 13 Reserved for NPU
- IRQ 14 Hard Disk
- IRQ 15 NET#0S

DEVICES WITH NO IRQ

LPT2


STANDARD DMA ASSIGNMENTS:

- DMA 0
- DMA 1
- DMA 2 Floppy Disk
- DMA 3
- DMA 4 [Cascade]
- DMA 5
- DMA 6
- DMA 7

F2 - Copy to Activity Log ■ Press Any Other Key to Continue

apuntes

PROGRAMAS DE DIAGNOSTICO

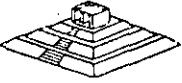

CheckIt 2.1

SysInfo Tests Benchmarks Tools Setup Exit


Configuration
Interrupts
CMOS Table
Device Drivers

Displays the current settings of the non-volatile CMOS setup memory, if present.

Use Arrows to Point • Return to Select • F1 - Help • ESC - Cancel

apuntes

PROGRAMAS DE DIAGNOSTICO

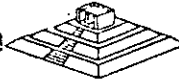

CheckIt 2.1

- SysInfo Tests Benchmarks Tools Setup Exit

Display CMOS Table

Current Date & Time: 11/01/1990 18:34:49

Floppy Drive A: 1.2M(5 1/4")

Floppy Drive B: 1.44M(3 1/2")

Base Memory Size: 640K

Extended Memory Size: 1024K


Primary Display: EGA, PGA, VGA, etc.

DRIVE TYPE	CYLS	HEADS	SECTS	WRITE PRECOMP	PARK PLACE	STEP RATE	CTRL BYTE	TOTAL BYTES
0:	40	820	6	17	620	820	0	42,823,680
1:	0	No Drive, ESDI Drive, or SCSI Drive.						

F2 - Copy to Activity Log • Press Any Other Key to Continue

apuntes

PROGRAMAS DE DIAGNOSTICO

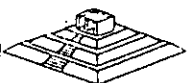

CheckJit 2.1

Sysinfo Tests Benchmarks Tools Setup Exit


- Test Everything
- Memory
- Hard Disk
- Floppy Disk
- System Board
- Real-Time Clock
- Serial Ports
- Parallel Ports
- Printers
- Video
- Input Devices
- Select Batch...

Tests the random access memory on the PC.





Use Arrows to Point • Return to Select • F1 - Help • ESC - Cancel

apuntes

PROGRAMAS DE DIAGNOSTICO

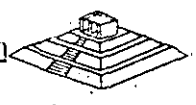

Memory Test

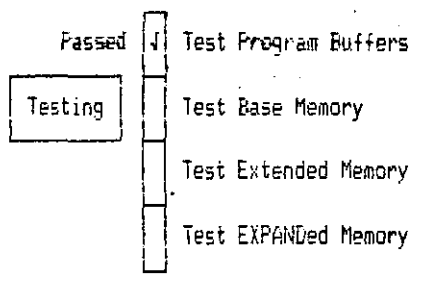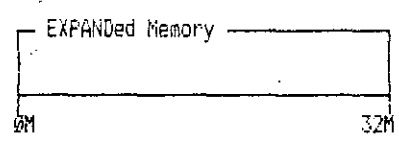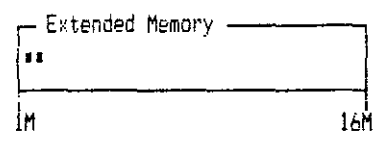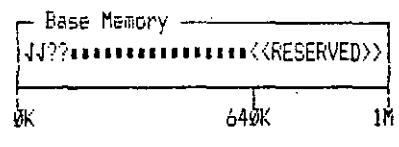

Will Test: 0000000h to 009FFFFh
 Now Testing: 0010000h to 001FFFFh

Using: Pseudo-Random Test

Quick Memory Test Only: Y


Number of Test Passes: 1

Total: 640K Base + 1.000M Extended + 0K EXPANDED (1.625M in all).
 Testing: 640K Base + 1.000M Extended + 0K EXPANDED (1.625M in all).

ESC - Interrupt (Might Not Be Immediate)

apuntes

PROGRAMAS DE DIAGNOSTICO

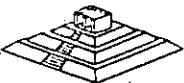


System Board Test

Passed	J	CPU General Functions
Passed	J	CPU Interrupt Bug
Passed	J	CPU 32-bit Multiply Bug (80386 only)
Passed	J	CPU Protected Mode (50286 and 80386 only)
Skipped	-	NPU Arithmetic Functions
Skipped	-	NPU Trigonometric Functions
Skipped	-	NPU Comparison Functions
Passed	J	DMA Controller(s)
Passed	J	Interrupt Controller(s)

Press Any Key to Continue

apuntes

PROGRAMAS DE DIAGNOSTICO

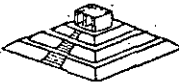

Check-It 2.1

SysInfo	<u>T</u> ests	Benchmarks	Tools	Setup	Exit
---------	---------------	------------	-------	-------	------


<ul style="list-style-type: none"> Test Everything Memory <u>H</u>ard Disk Floppy Disk System Board Real-Time Clock Serial Ports Parallel Ports Printers Video Input Devices Select Batch... 	<ul style="list-style-type: none"> Drive 0 (Non-DOS) Drive 1 (Not Found)
--	--

Selects all of the partitions of the primary hard disk.


Use Arrows to Point • Return to Select • F1 - Help • ESC - Cancel

apuntes

PROGRAMAS DE DIAGNOSTICO

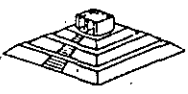

Hard Disk Test

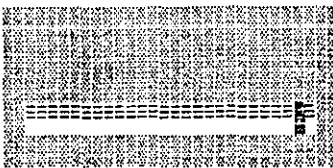

Drive: 0 (Non-DOS)
 Cylinders: 819
 Heads: 6
 Sectors/Track: 17
 Total Bytes: 42,771,456


Testing: Cyl. 3, Head 2
 To Go: 815

Passed	↓	Controller Diags	Errors <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 30%;">Cyl</th> <th style="width: 30%;">Hd</th> <th style="width: 40%;">Notes</th> </tr> </thead> <tbody> <tr><td> </td><td> </td><td> </td></tr> <tr><td> </td><td> </td><td> </td></tr> <tr><td> </td><td> </td><td> </td></tr> </tbody> </table>	Cyl	Hd	Notes									
Cyl	Hd	Notes													
Passed	↓	Linear Read													
Passed	↓	Butterfly Read													
Passed	↓	Random Read													

Press Any Key to Continue

apuntes

PROGRAMAS DE DIAGNOSTICO

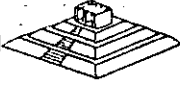

CheckNIt 2.1

SysInfo	Tests	<u>Benchmarks</u>	Tools	Setup	Exit
---------	-------	-------------------	-------	-------	------



<u>Main System</u>
Hard Disk

Measures video speed, numerical calculation speed, and overall system performance.

Use Arrows to Point • Return to Select • F1 - Help • ESC - Cancel


apuntes

PROGRAMAS DE DIAGNOSTICO

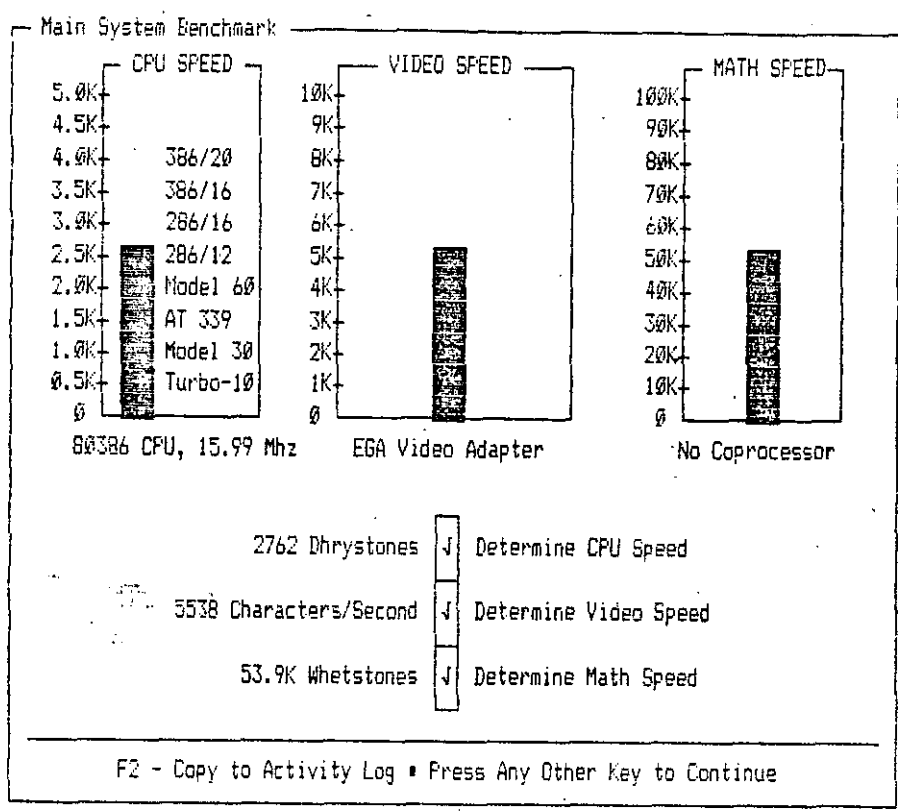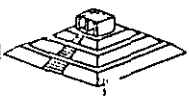

apuntes

PROGRAMAS DE DIAGNOSTICO

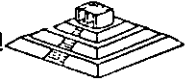

CheckJit 2.1


SysInfo Tests Benchmarks Tools Setup Exit

Color On/Off
Activity Log
RAM Layout

Used to describe this system's memory boards to CheckIt so that "Locate RAM Chips" can display pictures of them.


Use Arrows to Point • Return to Select • F1 - Help • ESC - Cancel

apuntes

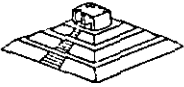

MICROCONTROLADORES PRINCIPALES
Y SISTEMAS MÍNIMOS

PROGRAMAS DE DIAGNOSTICO

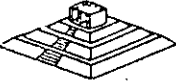


RAM Layout

Sample Board	32 Bits:	640K Base	(Address 000000h to 009FFFFh)
		384K Extended	(Address 0100000h to 015FFFFh)
Slot 1	16 Bits:	2.000M EXPANDED	(Address 0000000h to 01FFFFFFh)
Slot 2	Undefined.		
Slot 3	Undefined.		
Slot 4	Undefined.		

Select Activity: C
 V-View C-Change D-Delete -Select Board ESC-Cancel

apuntes

PROGRAMAS DE DIAGNOSTICO

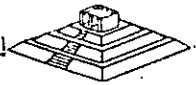

RAM Layout

Sample Board

Name: Sample Board Word Size: 32 Bits
Bank 0 on Top? Y Parity on Right? Y

Slot 1

RAM Chips:	Bank Size	Bank Size	Bank Size	Bank Size
0	256K	4 None	8 None	12 None
1	256K	5 None	9 None	13 None
2	None	6 None	10 None	14 None
3	None	7 None	11 None	15 None

Slot 2

Slot 3

Base? Y Amount: 640K Start: 0K (0000000h)
 Extended? Y Amount: 384K Start: 1.000M (01000000h)
 EXPANDED? N Amount: Start: (h)

Slot 4


Total RAM on Board: 2.000M

Enter a name to identify the board you are modifying.

- Select Field • ESC - Cancel

apuntes

PROGRAMAS DE DIAGNOSTICO

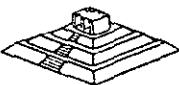

CheckJit 2.1

SysInfo	Tests	Benchmarks	<u>T</u> ools	Setup	Exit
---------	-------	------------	---------------	-------	------


Locate RAM Chips
Set Real-Time Clock
Hard Disk Formatter

After a memory test, can be used to display a picture of the system's memory boards showing the chip or chips that need replacing.

Use Arrows to Point ■ Return to Select ■ F1 - Help ■ ESC - Cancel

apuntes

PROGRAMAS DE DIAGNOSTICO

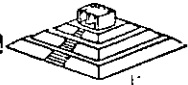

Locate RAM Chips

Sample Board

Bank 0	0	1	2	3	4	5	6	7	=> P	256K
	8	9	10	11	12	13	14	15	=> P	256K
	16 =>17	18	19	20 =>21	22	23	=> P	256K		
	24	25	26	27	28	29	30	31	=> P	256K
	MORE									

32 Bit Words



- 640K Base (Address 0000000h to 009FFFFh)
- 384K Extended (Address 0100000h to 015FFFFh)

This is the memory layout for the motherboard.

- View Board • F2 - Copy to Activity Log • ESC - Cancel


apuntes

Sistemas Mínimos

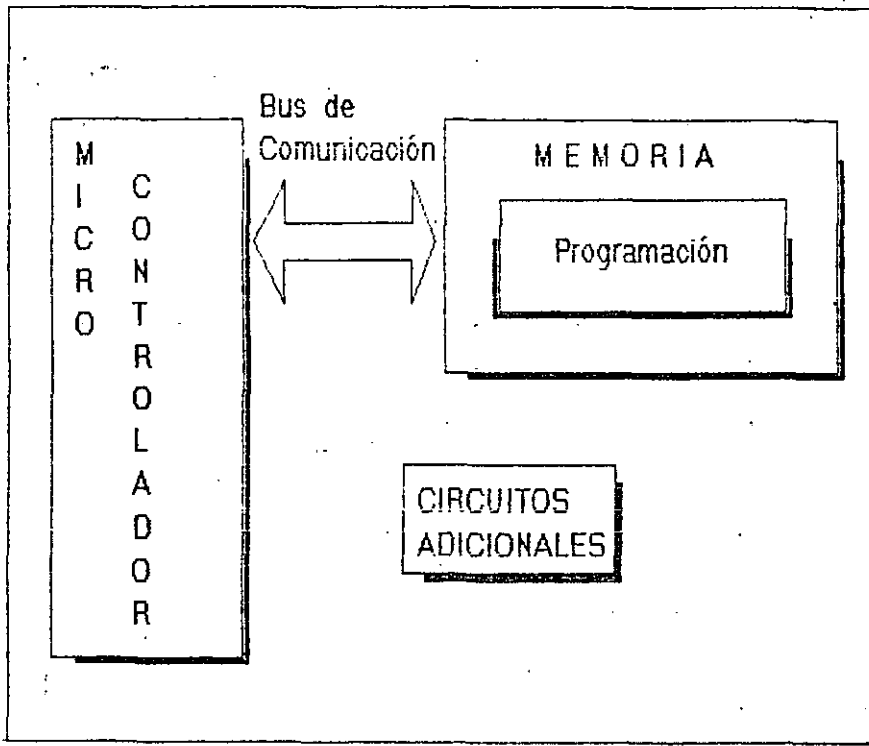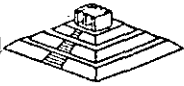

apuntes

Microcontroladores Principales y Sistemas Mínicos

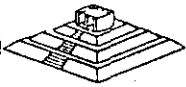


Generador de Reloj: 82284 - 82384 - 8284

Controlador de DMA: 8257 - 8237

Controlador de
Periféricos Programable: 8255

Controlador de
Unidades de Disco: 82064 - 82062

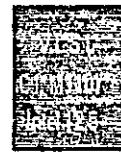

Controlador de Teclado: 8040 - 8248

Controlador de
Interrupciones Programable: 8259




Controlador de Puerto Serie: 8250

Controlador Programable
de "Interval Timer:" 8253

apuntes

CPU 8088

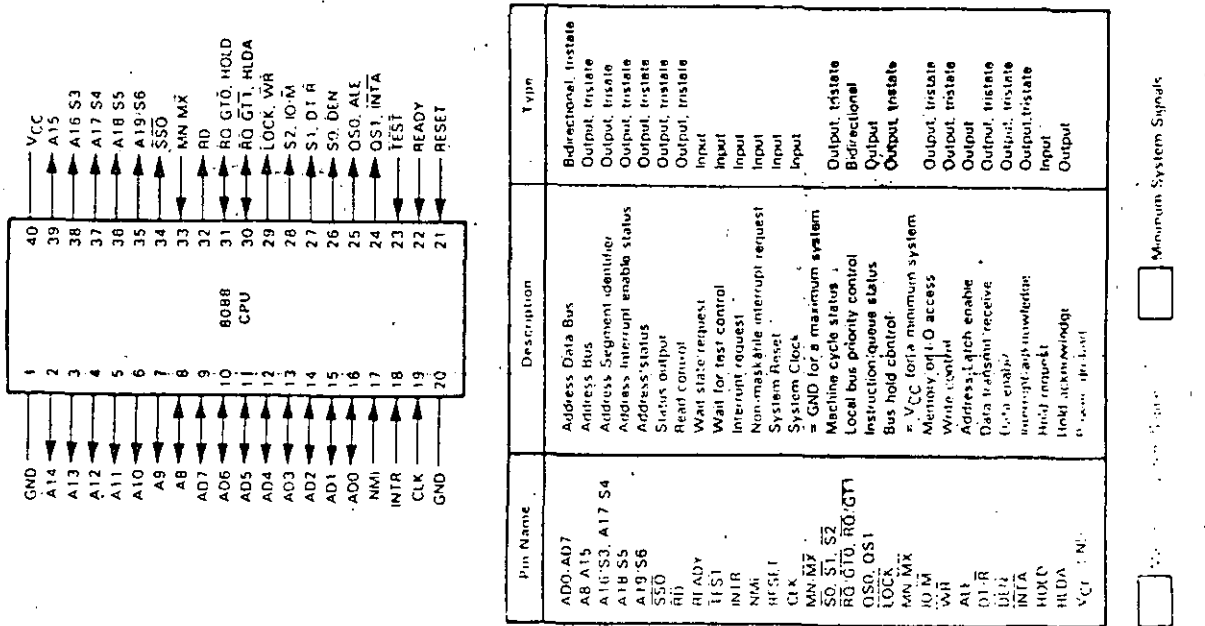

8088 Pin and Signal Assignments

apuntes

CPU 8088



Instruction	Object Code	Bytes	Clock Periods
CBW	9B	1	2
CLC	F8	1	2
CLD	FC	1	2
CLI	FA	1	2
CMC	F5	1	2
CMP	0011110w kk ljl	2 or 3	4
CMP	100000sw mod 111 r/m [DISP] [DISP]	3, 4, 5 or 6	reg: 4 mem: 10 + EA
CMP	001110dw, mod rr r/m + [DISP] [DISP]	2, 3 or 4	reg to reg: 3 mem to reg: 9 + EA reg to mem: 9 + EA
CMPS	1010011w	1	22 9 + 22/repetition*
CWD	99	1	5
DAA	27	1	4
DAS	2F	1	4
DEC	1111111w mod 001 r/m [DISP] [DISP]	2, 3 or 4	reg: 3 mem: 15 + EA
DEC	01001rrr	1	2
DIV	1111011w mod 110 r/m [DISP] [DISP]	2, 3 or 4	8-bit reg: 80 — 90 16-bit reg: 144 — 162 8-bit mem: 186 — 961 + EA 16-bit mem: 1150 — 1681 + EA mem: 8 + EA reg: 2
ESC	11011xxx mod xxx r/m [DISP] [DISP]	2, 3 or 4	
HLT	F4	1	2
IDIV	1111011w mod 111 r/m [DISP] [DISP]	2, 3 or 4	8-bit reg: 101 — 112 16-bit reg: 165 — 184 8-bit mem: 1107 — 11181 + EA 16-bit mem: 1171 — 1901 + EA
IMUL	1111011w mod 101 r/m [DISP] [DISP]	2, 3 or 4	8-bit reg: 80 — 98 16-bit reg: 128 — 154 8-bit mem: 186 — 1041 + EA 16-bit mem: 1134 — 1601 + EA
IN	1110110w	1	8
IN	1110010w	2	10

CPU 8088



Instruction	Object Code	Bytes	Clock Periods
INC	1111111w mod 000 r/m {DISP} {DISP}	2, 3 or 4	reg: 3 mem: 15 + EA
INC	01000rrr	1	2
INT	11001100*	1	52
	11001101	2	51
INTO	type CE	1	interrupt: 53 no interrupt: 4
IRET	CF	1	24
JA	77	2	4/No Branch 16/Branch
JNBE	disp	2	16/Branch
JAE	73	2	4/No Branch
JNB	disp	2	16/Branch
JB	72	2	4/No Branch 8/Branch
JNAE	disp	2	4/No Branch
JBE	76	2	16/Branch
JNA	disp	2	4/No Branch
JCXZ	E3	2	6/No Branch 16/Branch
JE	disp	2	16/Branch
JZ	74	2	4/No Branch
JG	disp	2	16/Branch
JNLE	7F	2	4/No Branch
JGE	7D	2	16/Branch
JNL	disp	2	4/No Branch
JL	7C	2	16/Branch
JNGE	disp	2	4/No Branch
JLE	7E	2	16/Branch
JNG	disp	2	4/No Branch
JMP	EA	5	16/Branch
	kk		15
	ll		
	hh		
	00		
JMP	disp	2	15
JMP	disp16	3	15
JMP	mem	2, 3 or 4	mem ptr: 32 24 + EA
JMP	mem/reg	2, 3 or 4	reg ptr: 16, 11
JNE	disp	2	mem ptr: 16: 18 + EA
JNZ	disp	2	4/No Branch 16/Branch
JNO	disp	2	4/No Branch 16/Branch
JNP	disp	2	4/No Branch
JPO	disp	2	16/Branch
JNS	disp	2	4/No Branch
JO	disp	2	16/Branch 16/Branch

*Implied type = 3

apuntes

CPU 8088



Instruction	Object Code	Bytes	Clock Periods
AAA	37	1	4
AAD	D5, DA	2	80
AAM	D4, DA	2	83
AAS	3F	1	4
ADC	0001010w kk ll ij	2 or 3	4
ADC	100000sw mod 010 r/m DISP DISP kk ll ij	3, 4, 5 or 6	reg: 4 mem: 17 + EA
ADC	mem/reg, mem/reg	2, 3 or 4	reg to reg: 3 mem to reg: 9 + EA reg to mem: 16 + EA
ADD	sc.data	2 or 3	4
ADD	mem/reg, data	3, 4, 5 or 6	reg: 4 mem: 17 + EA
ADD	mem/reg, mem/reg	2, 3 or 4	reg to reg: 3 mem to reg: 9 + EA reg to mem: 16 + EA
AND	sc.data	2 or 3	4
AND	mem/reg, data	3, 4, 5 or 6	reg: 4 mem: 17 + EA
AND	mem/reg, mem/reg	2, 3 or 4	reg to reg: 3 mem to reg: 9 + EA reg to mem: 16 + EA
CALL	addr	5	28
CALL	disp16	3	19
CALL	mem	2, 3 or 4	32-bit mem pointer: 37 + EA
CALL	mem/reg	2, 3, or 4	16-bit reg pointer: 16 16-bit mem pointer: 21 + EA

apuntes



82284 CLOCK GENERATOR AND READY INTERFACE FOR iAPX 286 PROCESSORS

(82284-10, 82284-8, 82284-6)

- Generates System Clock for iAPX 286 Processors
- Uses Crystal or TTL Signal for Frequency Source
- Provides Local READY and MULTIBUS[®]* READY Synchronization
- Available in 18-Lead Cerdip Package (See Packaging Spec, Order #231369)
- Single +5V Power Supply
- Generates System Reset Output from Schmitt Trigger Input
- Available in EXPRESS
 - Standard Temperature Range
 - Extended Temperature Range

The 82284 is a clock generator/driver which provides clock signals for iAPX 286 processors and support components. It also contains logic to supply READY to the CPU from either asynchronous or synchronous sources and synchronous RESET from an asynchronous input with hysteresis.

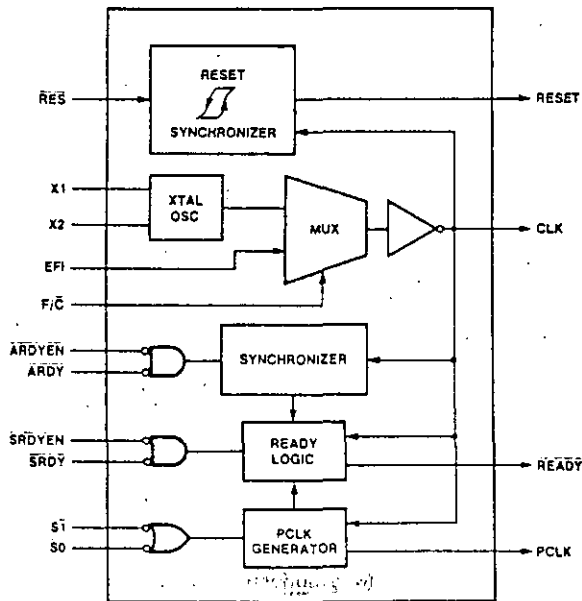


Figure 1. 82284 Block Diagram

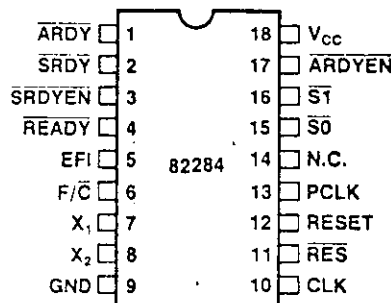


Figure 2.
82284 Pin Configuration


*MULTIBUS is a patented bus of Intel.

Intel Corporation Assumes No Responsibility for the Use of Any Circuitry Other Than Circuitry Embodied in an Intel Product. No Other Circuit Patent Licenses are implied.




82284

Waveforms

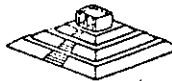


CLK as a Function of EFI (82284-6 only)

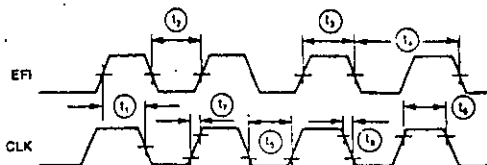


NOTE: The EFI input LOW and HIGH times as shown are required to guarantee the CLK LOW and HIGH times shown.

RESET and READY Timing as a Function of RES with S1, S0, ARDY to ARDYEN, and SRDY + SRDYEN HIGH

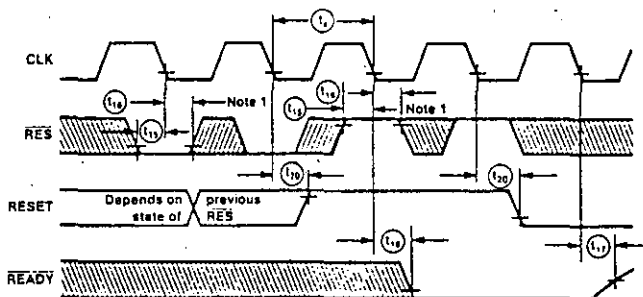

NOTE 1: This is an asynchronous input. The setup and hold times shown are required to guarantee the response shown.

READY and PCLK Timing with RES HIGH

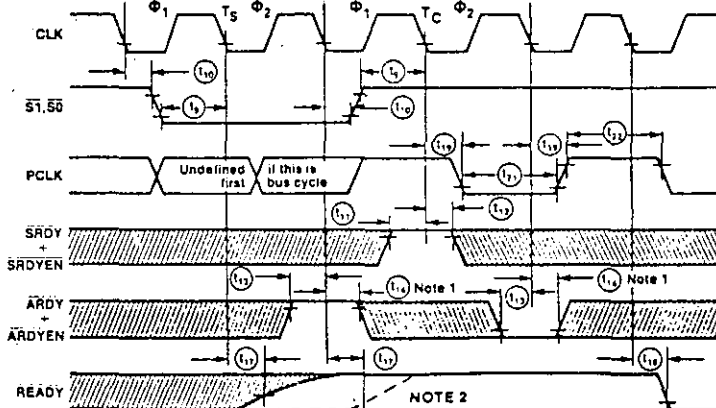


NOTE 1: This is an asynchronous input. The setup and hold times shown are required to guarantee the response shown.


NOTE 2: If SRDY + SRDYEN or ARDY - ARDYEN are active before and/or during the first bus cycle after RESET, READY may not be deasserted until after the falling edge of phi2 of T2.




82284

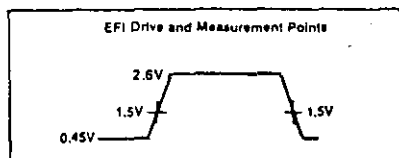


NOTE 9:

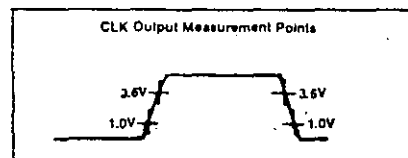


NOTE 10:

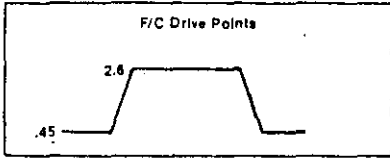

NOTE 11:

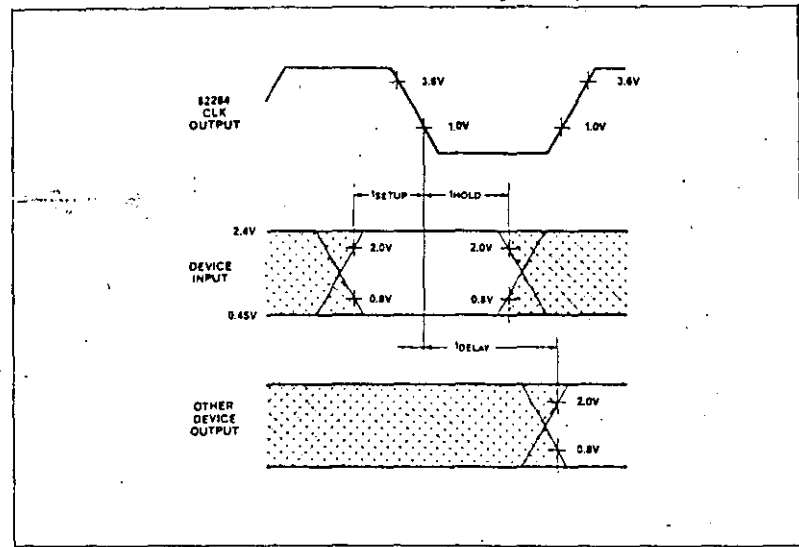

NOTE 12: AC Setup, Hold and Delay Time Measurement -- General

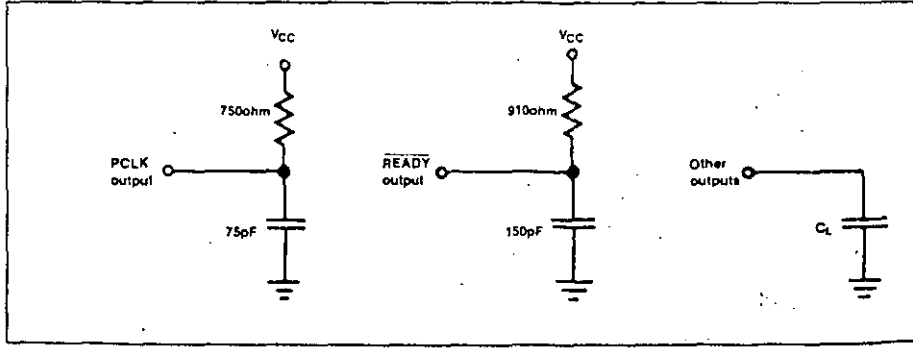


NOTE 13: AC Test Loading on Outputs



8284A/8284A-1 CLOCK GENERATOR AND DRIVER FOR iAPX 86, 88 PROCESSORS

- Generates the System Clock for the iAPX 86, 88 Processors:
5 MHz, 8 MHz with 8284A
10 MHz with 8284A-1
- Uses a Crystal or a TTL Signal for Frequency Source
- Provides Local READY and MULTIBUS® READY Synchronization
- 18-Pin Package
- Single +5V Power Supply
- Generates System Reset Output from Schmitt Trigger Input
- Capable of Clock Synchronization with Other 8284As
- Available in EXPRESS
 - Standard Temperature Range
 - Extended Temperature Range

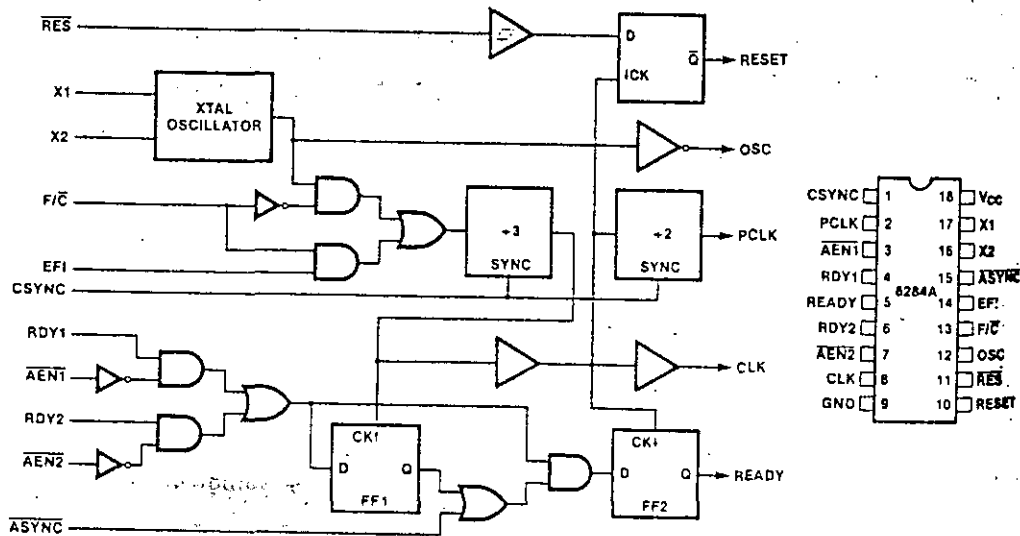

8284A/8284A-1 Block Diagram

8284A/8284A-1 Pin Configuration

3-346

GENERADOR DE RELOJ



8237A/8237A-4/8237A-5 HIGH PERFORMANCE PROGRAMMABLE DMA CONTROLLER

- Enable/Disable Control of Individual DMA Requests
 - Four Independent DMA Channels
 - Independent Autoinitialization of all Channels
 - Memory-to-Memory Transfers
 - Memory Block Initialization
 - Address Increment or Decrement
 - High performance: Transfers up to 1.6M Bytes/Second with 5 MHz 8237A-5
 - Directly Expandable to any Number of Channels
 - End of Process Input for Terminating Transfers
 - Software DMA Requests
 - Independent Polarity Control for DREQ and DACK Signals
 - Available in EXPRESS - Standard Temperature Range
 - Available in 40-Lead Cerdip and Plastic Packages
- (See Packaging Spec, Order #231369)

The 8237A Multimode Direct Memory Access (DMA) Controller is a peripheral interface circuit for microprocessor systems. It is designed to improve system performance by allowing external devices to directly transfer information from the system memory. Memory-to-memory transfer capability is also provided. The 8237A offers a wide variety of programmable control features to enhance data throughput and system optimization and to allow dynamic reconfiguration under program control.

The 8237A is designed to be used in conjunction with an external 8-bit address register such as the 8282. It contains four independent channels and may be expanded to any number of channels by cascading additional controller chips.

The three basic transfer modes allow programmability of the types of DMA service by the user. Each channel can be individually programmed to Autoinitialize to its original condition following an End of Process (EOP).

Each channel has a full 64K address and word count capability.

The 8237A-4 and 8237A-5 are 4 MHz and 5 MHz selected versions of the standard 3 MHz 8237A respectively.


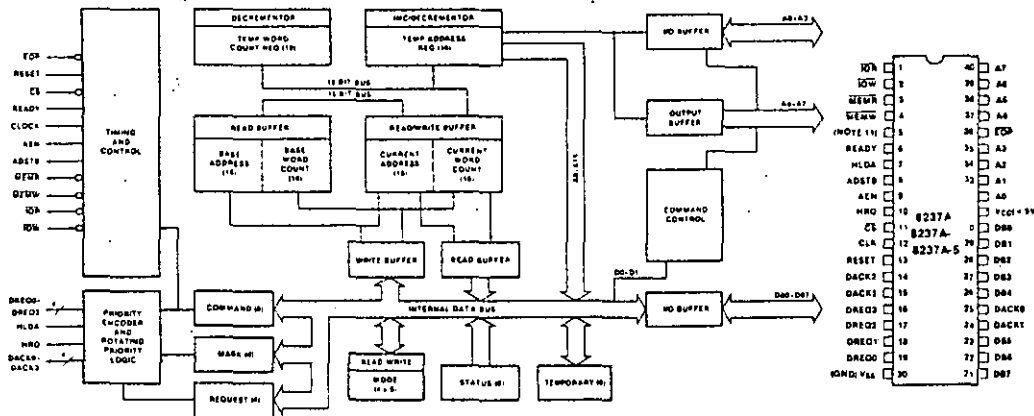


Figure 1. Block Diagram

Figure 2. Pin Configuration



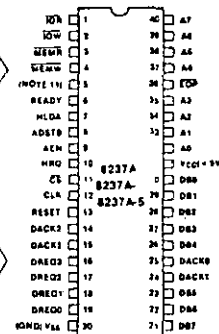

8237A/8237A-4/8237A-5

Table 1. Pin Description

Symbol	Type	Name and Function
Vcc		Power: +5 volt supply.
Vss		Ground: Ground.
CLK	I	Clock Input: Clock Input controls the internal operations of the 8237A and its rate of data transfers. The input may be driven at up to 3 MHz for the standard 8237A and up to 5 MHz for the 8237A-5.
CS	I	Chip Select: Chip Select is an active low input used to select the 8237A as an I/O device during the Idle cycle. This allows CPU communication on the data bus.
RESET	I	Reset: Reset is an active high input which clears the Command, Status, Request and Temporary registers. It also clears the first/last flip/flop and sets the Mask register. Following a Reset the device is in the Idle cycle.
READY	I	Ready: Ready is an input used to extend the memory read and write pulses from the 8237A to accommodate slow memories or I/O peripheral devices. Ready must not make transitions during its specified setup/hold time.
HLDA	I	Hold Acknowledge: The active high Hold Acknowledge from the CPU indicates that it has relinquished control of the system busses.
DREQ0-DREQ3	I	DMA Request: The DMA Request lines are individual asynchronous channel request inputs used by peripheral circuits to obtain DMA service. In fixed Priority, DREQ0 has the highest priority and DREQ3 has the lowest priority. A request is generated by activating the DREQ line of a channel. DACK will acknowledge the recognition of DREQ signal. Polarity of DREQ is programmable. Reset initializes these lines to active high. DREQ must be maintained until the corresponding DACK goes active.
DB0-DB7	I/O	Data Bus: The Data Bus lines are bidirectional three-state signals connected to the system data bus. The outputs are enabled in the Program condition during the I/O Read to output the contents of an Address register, a Status register, the Temporary register or a Word Count register to the CPU. The outputs are disabled and the inputs are read during an I/O Write cycle when the CPU is programming the 8237A control registers. During DMA cycles the most significant 8 bits of the address are output onto the data bus to be strobed into an external latch by ADSTB. In mem-

Symbol	Type	Name and Function
		ory-to-memory operations, data from the memory comes into the 8237A on the data bus during the read-from-memory transfer. In the write-to-memory transfer, the data bus outputs place the data into the new memory location.
IOR	I/O	I/O Read: I/O Read is a bidirectional active low three-state line. In the Idle cycle, it is an input control signal used by the CPU to read the control registers. In the Active cycle, it is an output control signal used by the 8237A to access data from a peripheral during a DMA Write transfer.
IOW	I/O	I/O Write: I/O Write is a bidirectional active low three-state line. In the Idle cycle, it is an input control signal used by the CPU to load information into the 8237A. In the Active cycle, it is an output control signal used by the 8237A to load data to the peripheral during a DMA Read transfer.
EOP	I/O	End of Process: End of Process is an active low bidirectional signal. Information concerning the completion of DMA services is available at the bidirectional EOP pin. The 8237A allows an external signal to terminate an active DMA service. This is accomplished by pulling the EOP input low with an external EOP signal. The 8237A also generates a pulse when the terminal count (TC) for any channel is reached. This generates an EOP signal which is output through the EOP Line. The reception of EOP, either internal or external, will cause the 8237A to terminate the service, reset the request, and, if Autoinitialize is enabled, to write the base registers to the current registers of that channel. The mask bit and TC bit in the status word will be set for the currently active channel by EOP unless the channel is programmed for Autoinitialize. In that case, the mask bit remains unchanged. During memory-to-memory transfers, EOP will be output when the TC for channel 1 occurs. EOP should be tied high with a pull-up resistor if it is not used to prevent erroneous end of process inputs.
A0-A3	I/O	Address: The four least significant address lines are bidirectional three-state signals. In the Idle cycle they are inputs and are used by the CPU to address the register to be loaded or read. In the Active cycle they are outputs and provide the lower 4 bits of the output address.

Table 1. Pin Description (Continued)

Symbol	Type	Name and Function
A4-A7	O	Address: The four most significant address lines are three-state outputs and provide 4 bits of address. These lines are enabled only during the DMA service.
HRQ	O	Hold Request: This is the Hold Request to the CPU and is used to request control of the system bus. If the corresponding mask bit is clear, the presence of any valid DREQ causes 8237A to issue the HRQ.
DACK0-DACK3	O	DMA Acknowledge: DMA Acknowledge is used to notify the individual peripherals when one has been granted a DMA cycle. The sense of these lines is programmable. Reset initializes them to active low.

FUNCTIONAL DESCRIPTION

The 8237A block diagram includes the major logic blocks and all of the internal registers. The data interconnection paths are also shown. Not shown are the various control signals between the blocks. The 8237A contains 344 bits of internal memory in the form of registers. Figure 3 lists these registers by name and shows the size of each. A detailed description of the registers and their functions can be found under Register Description.

Name	Size	Number
Base Address Registers	16 bits	4
Base Word Count Registers	16 bits	4
Current Address Registers	16 bits	4
Current Word Count Registers	16 bits	4
Temporary Address Register	16 bits	1
Temporary Word Count Register	16 bits	1
Status Register	8 bits	1
Command Register	8 bits	1
Temporary Register	8 bits	1
Mode Registers	6 bits	4
Mask Register	4 bits	1
Request Register	4 bits	1

Figure 3. 8237A Internal Registers

The 8237A contains three basic blocks of control logic. The Timing Control block generates internal timing and external control signals for the 8237A. The Program Command Control block decodes the various commands given to the 8237A by the microprocessor prior to servicing a DMA Request. It also decodes the Mode Control word used to select the type of DMA during the servicing. The Priority Encoder block resolves priority contention between DMA channels requesting service simultaneously.

The Timing Control block derives internal timing from the clock input. In 8237A systems this input will usually

Symbol	Type	Name and Function
AEN	O	Address Enable: Address Enable enables the 8-bit latch containing the upper 8 address bits onto the system address bus. AEN can also be used to disable other system bus drivers during DMA transfers. AEN is active HIGH.
ADSTB	O	Address Strobe: The active high, Address Strobe is used to strobe the upper address byte into an external latch.
MEMR	O	Memory Read: The Memory Read signal is an active low three-state output used to access data from the selected memory location during a DMA Read or a memory-to-memory transfer.
MEMW	O	Memory Write: The Memory Write is an active low three-state output used to write data to the selected memory location during a DMA Write or a memory-to-memory transfer.

be the $\phi 2$ TTL clock from an 8224 or CLK from an 8085AH or 8284A. For 8085AH-2 systems above 3.9 MHz, the 8085 CLK(OUT) does not satisfy 8237A-5 clock LOW and HIGH time requirements. In this case, an external clock should be used to drive the 8237A-5.

DMA Operation

The 8237A is designed to operate in two major cycles. These are called Idle and Active cycles. Each device cycle is made up of a number of states. The 8237A can assume seven separate states, each composed of one full clock period. State 1 (S1) is the inactive state. It is entered when the 8237A has no valid DMA requests pending. While in S1, the DMA controller is inactive but may be in the Program Condition, being programmed by the processor. State S0 (S0) is the first state of a DMA service. The 8237A has requested a hold but the processor has not yet returned an acknowledge. The 8237A may still be programmed until it receives HLDA from the CPU. An acknowledge from the CPU will signal that DMA transfers may begin. S1, S2, S3 and S4 are the working states of the DMA service. If more time is needed to complete a transfer than is available with normal timing, wait states (SW) can be inserted between S2 or S3 and S4 by the use of the Ready line on the 8237A. Note that the data is transferred directly from the I/O device to memory (or vice versa) with IOR and MEMW (or MEMR and IOW) being active at the same time. The data is not read into or driven out of the 8237A in I/O-to-memory or memory-to-I/O DMA transfers.

Memory-to-memory transfers require a read-from and a write-to-memory to complete each transfer. The states, which resemble the normal working states, use two digit numbers for identification. Eight states are required for a single transfer. The first four states (S11, S12, S13, S14) are used for the read-from-memory half

and the last four states (S21, S22, S23, S24) for the write-to-memory half of the transfer.

IDLE CYCLE

When no channel is requesting service, the 8237A will enter the Idle cycle and perform "SI" states. In this cycle the 8237A will sample the DREQ lines every clock cycle to determine if any channel is requesting a DMA service. The device will also sample \overline{CS} , looking for an attempt by the microprocessor to write or read the internal registers of the 8237A. When \overline{CS} is low and HLDA is low, the 8237A enters the Program Condition. The CPU can now establish, change or inspect the internal definition of the part by reading from or writing to the internal registers. Address lines A0-A3 are inputs to the device and select which registers will be read or written. The \overline{IOR} and \overline{IOW} lines are used to select and time reads or writes. Due to the number and size of the internal registers, an internal flip-flop is used to generate an additional bit of address. This bit is used to determine the upper or lower byte of the 16-bit Address and Word Count registers. The flip-flop is reset by Master Clear or Reset. A separate software command can also reset this flip-flop.

Special software commands can be executed by the 8237A in the Program Condition. These commands are decoded as sets of addresses with the \overline{CS} and \overline{IOW} . The commands do not make use of the data bus. Instructions include Clear First/Last Flip-Flop and Master Clear.

ACTIVE CYCLE

When the 8237A is in the Idle cycle and a non-masked channel requests a DMA service, the device will output an HRQ to the microprocessor and enter the Active cycle. It is in this cycle that the DMA service will take place, in one of four modes:

Single Transfer Mode — In Single Transfer mode the device is programmed to make one transfer only. The word count will be decremented and the address decremented or incremented following each transfer. When the word count "rolls over" from zero to FFFFH, a Terminal Count (TC) will cause an Autoinitialize if the channel has been programmed to do so.

DREQ must be held active until DACK becomes active in order to be recognized. If DREQ is held active throughout the single transfer, HRQ will go inactive and release the bus to the system. It will again go active and, upon receipt of a new HLDA, another single transfer will be performed. In 8080A, 8085AH, 8088, or 8086 system this will ensure one full machine cycle execution between DMA transfers. Details of timing between the 8237A and other bus control protocols will depend upon the characteristics of the microprocessor involved.

Block Transfer Mode — In Block Transfer mode the device is activated by DREQ to continue making transfers during the service until a TC, caused by word count going to FFFFH, or an external End of Process (EOP) is encountered. DREQ need only be held active until DACK

becomes active. Again, an Autoinitialization will occur at the end of the service if the channel has been programmed for it.

Demand Transfer Mode — In Demand Transfer mode the device is programmed to continue making transfers until a TC or external EOP is encountered or until DREQ goes inactive. Thus transfers may continue until the I/O device has exhausted its data capacity. After the I/O device has had a chance to catch up, the DMA service is re-established by means of a DREQ. During the time between services when the microprocessor is allowed to operate, the intermediate values of address and word count are stored in the 8237A Current Address and Current Word Count registers. Only an EOP can cause an Autoinitialize at the end of the service. EOP is generated either by TC or by an external signal.

Cascade Mode — This mode is used to cascade more than one 8237A together for simple system expansion. The HRQ and HLDA signals from the additional 8237A are connected to the DREQ and DACK signals of a channel of the initial 8237A. This allows the DMA requests of the additional device to propagate through the priority network circuitry of the preceding device. The priority chain is preserved and the new device must wait for its turn to acknowledge requests. Since the cascade channel of the initial 8237A is used only for prioritizing the additional device, it does not output any address or control signals of its own. These could conflict with the outputs of the active channel in the added device. The 8237A will respond to DREQ and DACK but all other outputs except HRQ will be disabled. The ready input is ignored.

Figure 4 shows two additional devices cascaded into an initial device using two of the previous channels. This forms a two level DMA system. More 8237As could be added at the second level by using the remaining channels of the first level. Additional devices can also be added by cascading into the channels of the second level devices, forming a third level.

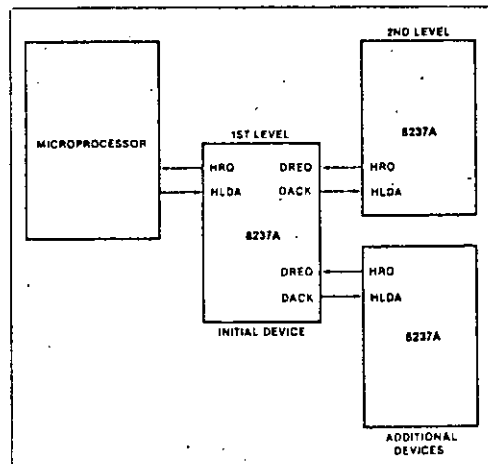


Figure 4. Cascaded 8237As



TRANSFER TYPES

Each of the three active transfer modes can perform three different types of transfers. These are Read, Write and Verify. Write transfers move data from an I/O device to the memory by activating \overline{MEMW} and \overline{IOR} . Read transfers move data from memory to an I/O device by activating \overline{MEMR} and \overline{IOW} . Verify transfers are pseudo transfers. The 8237A operates as in Read or Write transfers generating addresses, and responding to EOP, etc. However, the memory and I/O control lines all remain inactive. The ready input is ignored in verify mode.

Memory-to-Memory—To perform block moves of data from one memory address space to another with a minimum of program effort and time, the 8237A includes a memory-to-memory transfer feature. Programming a bit in the Command register selects channels 0 to 1 to operate as memory-to-memory transfer channels. The transfer is initiated by setting the software DREQ for channel 0. The 8237A requests a DMA service in the normal manner. After HLDA is true, the device, using four state transfers in Block Transfer mode, reads data from the memory. The channel 0 Current Address register is the source for the address used and is decremented or incremented in the normal manner. The data byte read from the memory is stored in the 8237A internal Temporary register. Channel 1 then performs a four-state transfer of the data from the Temporary register to memory using the address in its Current Address register and incrementing or decrementing it in the normal manner. The channel 1 current Word Count is decremented. When the word count of channel 1 goes to FFFFH, a TC is generated causing an EOP output terminating the service.

Channel 0 may be programmed to retain the same address for all transfers. This allows a single word to be written to a block of memory.


The 8237A will respond to external \overline{EOP} signals during memory-to-memory transfers. Data comparators in block search schemes may use this input to terminate the service when a match is found. The timing of memory-to-memory transfers is found in Figure 12. Memory-to-memory operations can be detected as an active AEN, with no DACK outputs.

Autoinitialize—By programming a bit in the Mode register, a channel may be set up as an Autoinitialize channel. During Autoinitialize initialization, the original values of the Current Address and Current Word Count registers are automatically restored from the Base Address and Base Word count registers of that channel following \overline{EOP} . The base registers are loaded simultaneously with the current registers by the microprocessor and remain unchanged throughout the DMA service. The mask bit is not altered when the channel is in Autoinitialize. Following Autoinitialize the channel is ready to perform another DMA service, without CPU intervention, as soon as a valid DREQ is detected. In order to Autoinitialize both channels in a memory-to-memory transfer, both word counts should be programmed identically. If interrupted externally, \overline{EOP} pulses should be applied in both bus cycles.

Priority—The 8237A has two types of priority encoding available as software selectable options. The first is Fixed Priority

which fixes the channels in priority order based upon the descending value of their number. The channel with the lowest priority is 3 followed by 2, 1 and the highest priority channel, 0. After the recognition of any one channel for service, the other channels are prevented from interterring with that service until it is completed.

The second scheme is Rotating Priority. The last channel to get service becomes the lowest priority channel with the others rotating accordingly.

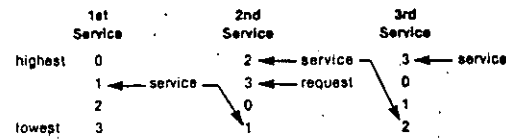

With Rotating Priority in a single chip DMA system, any device requesting service is guaranteed to be recognized after no more than three higher priority services have occurred. This prevents any one channel from monopolizing the system.

Compressed Timing—In order to achieve even greater throughput where system characteristics permit, the 8237A can compress the transfer time to two clock cycles. From Figure 11 it can be seen that state S3 is used to extend the access time of the read pulse. By removing state S3, the read pulse width is made equal to the write pulse width and a transfer consists only of state S2 to change the address and state S4 to perform the read/write. S1 states will still occur when A8-A15 need updating (see Address Generation). Timing for compressed transfers is found in Figure 14.

Address Generation—In order to reduce pin count, the 8237A multiplexes the eight higher order address bits on the data lines. State S1 is used to output the higher order address bits to an external latch from which they may be placed on the address bus. The falling edge of Address Strobe (ADSTB) is used to load these bits from the data lines to the latch. Address Enable (AEN) is used to enable the bits onto the address bus through a three-state enable. The lower order address bits are output by the 8237A directly. Lines A0-A7 should be connected to the address bus. Figure 11 shows the time relationships between CLK, AEN, ADSTB, DB0-DB7 and A0-A7.

During Block and Demand Transfer mode services, which include multiple transfers, the addresses generated will be sequential. For many transfers the data held in the external address latch will remain the same. This data need only change when a carry or borrow from A7 to A8 takes place in the normal sequence of addresses. To save time and speed transfers, the 8237A executes S1 states only when updating of A8-A15 in the latch is necessary. This means for long services, S1 states and Address Strobes may occur only once every 256 transfers, a savings of 255 clock cycles for each 256 transfers.

REGISTER DESCRIPTION

Current Address Register — Each channel has a 16-bit Current Address register. This register holds the value of the address used during DMA transfers. The address is automatically incremented or decremented after each transfer and the intermediate values of the address are stored in the Current Address register during the transfer. This register is written or read by the microprocessor in successive 8-bit bytes. It may also be reinitialized by an Autoinitialize back to its original value. Autoinitialize takes place only after an EOP.




Current Word Register — Each channel has a 16-bit Current Word Count register. This register determines the number of transfers to be performed. The actual number of transfers will be one more than the number programmed in the Current Word Count register (i.e., programming a count of 100 will result in 101 transfers). The word count is decremented after each transfer. The intermediate value of the word count is stored in the register during the transfer. When the value in the register goes from zero to FFFFH, a TC will be generated. This register is loaded or read in successive 8-bit bytes by the microprocessor in the Program Condition. Following the end of a DMA service it may also be reinitialized by an Autoinitialization back to its original value. Autoinitialize can occur only when an EOP occurs. If it is not Autoinitialized, this register will have a count of FFFFH after TC.

Base Address and Base Word Count Registers — Each channel has a pair of Base Address and Base Word Count registers. These 16-bit registers store the original value of their associated current registers. During Autoinitialize these values are used to restore the current registers to their original values. The base registers are written simultaneously with their corresponding current register in 8-bit bytes in the Program Condition by the microprocessor. These registers cannot be read by the microprocessor.


Command Register — This 8-bit register controls the operation of the 8237A. It is programmed by the microprocessor in the Program Condition and is cleared by Reset or a Master Clear instruction. The following table lists the function of the command bits. See Figure 6 for address coding.

Mode Register — Each channel has a 6-bit Mode register associated with it. When the register is being written to by the microprocessor in the Program Condition, bits 0 and 1 determine which channel Mode register is to be written.


Request Register — The 8237A can respond to requests for DMA service which are initiated by software as well as by a DREQ. Each channel has a request bit associated with it in the 4-bit Request register. These are non-maskable and subject to prioritization by the Priority Encoder network. Each register bit is set or reset separately under software control or is cleared upon generation of a TC or external EOP. The entire register is cleared by a Reset. To set or reset a bit, the software loads the proper form of the data word. See Figure 5 for register address coding. In order to make a software request, the channel must be in Block Mode.

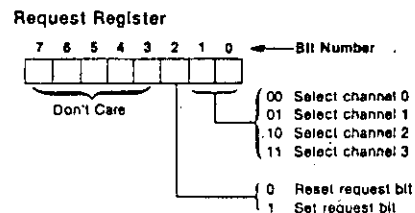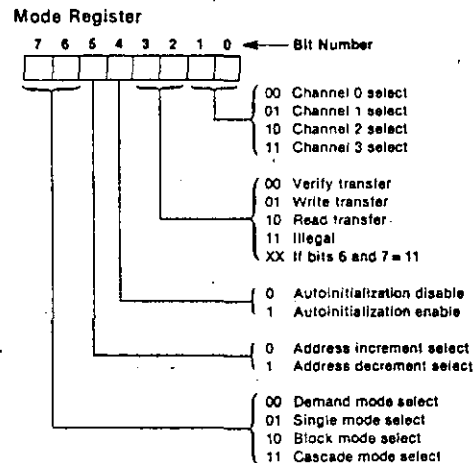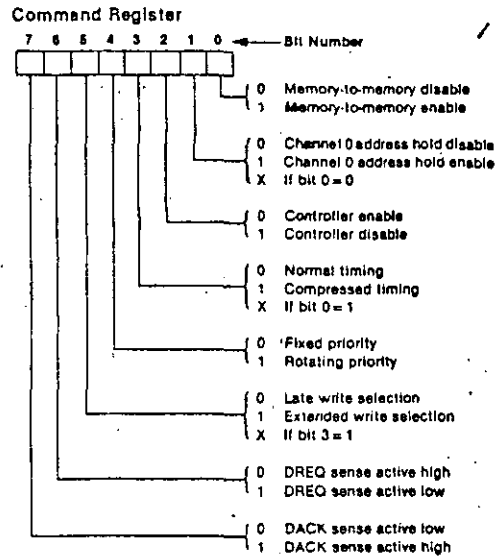

Mask Register — Each channel has associated with it a mask bit which can be set to disable the incoming DREQ. Each mask bit is set when its associated channel produces an EOP if the channel is not programmed for Autoinitialize. Each bit of the 4-bit Mask register may also be set or cleared separately under software control. The entire register is also set by a Reset. This disables all DMA requests until a clear Mask register instruction allows them to occur. The instruction to separately set or clear the mask bits is similar in form to that used with the Request register. See Figure 5 for instruction addressing.

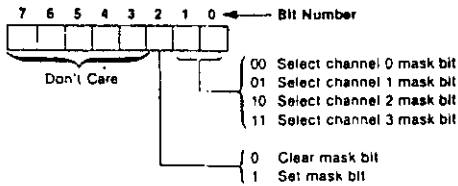


All four bits of the Mask register may also be written with a single command.

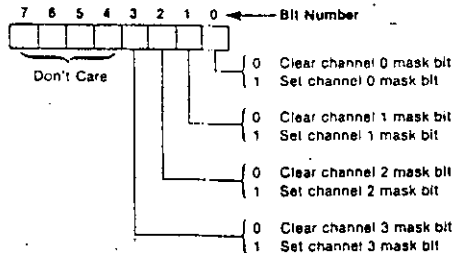

Register	Operation	Signals						
		CS	IOR	IOW	A3	A2	A1	A0
Command Mode	Write	0	1	0	1	0	0	0
Request Mask	Write	0	1	0	1	0	1	1
Mask	Set/Reset	0	1	0	1	0	1	0
Mask	Write	0	1	0	1	1	1	1
Temporary Status	Read	0	0	1	1	1	0	1
Status	Read	0	0	1	1	0	0	0

Figure 5. Definition of Register Codes

Status Register — The Status register is available to be read out of the 8237A by the microprocessor. It contains information about the status of the devices at this point. This information includes which channels have reached a terminal count and which channels have pending DMA requests. Bits 0-3 are set every time a TC is reached by that channel or an external EOP is applied. These bits are cleared upon Reset and on each Status Read. Bits 4-7 are set whenever their corresponding channel is requesting service.

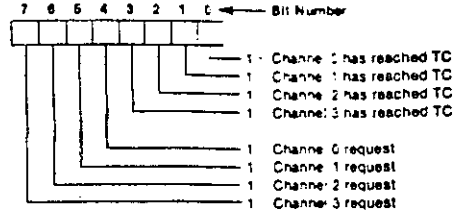

Temporary Register — The Temporary register is used to hold data during memory-to-memory transfers. Following the completion of the transfers, the last word moved can be read by the microprocessor in the Program Condition. The Temporary register always contains the last byte transferred in the previous memory-to-memory operation, unless cleared by a Reset.

Software Commands—These are additional special software commands which can be executed in the Program Condition. They do not depend on any specific bit pattern on the data bus. The three software commands are:

Clear First/Last Flip-Flop: This command is executed prior to writing or reading new address or word count information to the 8237A. This initializes the flip-flop to a known state so that subsequent accesses to register contents by the microprocessor will address upper and lower bytes in the correct sequence.

Master Clear: This software instruction has the same effect as the hardware Reset. The Command, Status, Request, Temporary, and Internal First/Last Flip-Flop registers are cleared and the Mask register is set. The 8237A will enter the Idle cycle.

Clear Mask Register: This command clears the mask bits of all four channels, enabling them to accept DMA requests.

Figure 6 lists the address codes for the software commands:

A3	A2	A1	A0	Signals		Operation
				IOR	IOW	
1	0	0	0	0	1	Read Status Register
1	0	0	0	1	0	Write Command Register
1	0	0	1	0	1	Illegal
1	0	0	1	1	0	Write Request Register
1	0	1	0	0	1	Illegal
1	0	1	0	1	0	Write Single Mask Register Bit
1	0	1	1	0	1	Illegal
1	0	1	1	1	0	Write Mode Register
1	1	0	0	0	1	Illegal
1	1	0	0	1	0	Clear Byte Pointer Flip-Flop
1	1	0	1	0	1	Read Temporary Register
1	1	0	1	1	0	Master Clear
1	1	1	0	0	1	Illegal
1	1	1	0	1	0	Clear Mask Register
1	1	1	1	0	1	Illegal
1	1	1	1	1	0	Write All Mask Register Bits

Figure 6. Software Command Codes



8237A/8237A-4/8237A-5

Channel	Register	Operation	Signals							Internal Flip-Flop	Data Bus DB0-DB7	
			CS	IOR	IOW	A3	A2	A1	A0			
0	Base and Current Address	Write	0	1	0	0	0	0	0	0	0	A0-A7
			0	1	0	0	0	0	0	0	1	AB-A15
	Current Address	Read	0	0	1	0	0	0	0	0	A0-A7	
			0	0	1	0	0	0	0	1	AB-A15	
Base and Current Word Count	Write	0	1	0	0	0	0	1	0	W0-W7		
		0	1	0	0	0	0	1	1	WB-W15		
Current Word Count	Read	0	0	1	0	0	0	1	0	W0-W7		
		0	0	1	0	0	0	1	1	WB-W15		
1	Base and Current Address	Write	0	1	0	0	0	1	0	0	A0-A7	
			0	1	0	0	0	1	0	1	AB-A15	
	Current Address	Read	0	0	1	0	0	1	0	0	A0-A7	
			0	0	1	0	0	1	0	1	AB-A15	
Base and Current Word Count	Write	0	1	0	0	0	1	1	0	W0-W7		
		0	1	0	0	0	1	1	1	WB-W15		
Current Word Count	Read	0	0	1	0	0	1	1	0	W0-W7		
		0	0	1	0	0	1	1	1	WB-W15		
2	Base and Current Address	Write	0	1	0	0	1	0	0	0	A0-A7	
			0	1	0	0	1	0	0	1	AB-A15	
	Current Address	Read	0	0	1	0	1	0	0	0	A0-A7	
			0	0	1	0	1	0	0	1	AB-A15	
Base and Current Word Count	Write	0	1	0	0	1	0	1	0	W0-W7		
		0	1	0	0	1	0	1	1	WB-W15		
Current Word Count	Read	0	0	1	0	1	0	1	0	W0-W7		
		0	0	1	0	1	0	1	1	WB-W15		
3	Base and Current Address	Write	0	1	0	0	1	1	0	0	A0-A7	
			0	1	0	0	1	1	0	1	AB-A15	
	Current Address	Read	0	0	1	0	1	1	0	0	A0-A7	
			0	0	1	0	1	1	0	1	AB-A15	
Base and Current Word Count	Write	0	1	0	0	1	1	1	0	W0-W7		
		0	1	0	0	1	1	1	1	WB-W15		
Current Word Count	Read	0	0	1	0	1	1	1	0	W0-W7		
		0	0	1	0	1	1	1	1	WB-W15		

Figure 7. Word Count and Address Register Command Codes

PROGRAMMING

The 8237A will accept programming from the host processor any time that HLDA is inactive; this is true even if HRQ is active. The responsibility of the host is to assure that programming and HLDA are mutually exclusive. Note that a problem can occur if a DMA request occurs, on an unmasked channel while the 8237A is being programmed. For instance, the CPU may be starting to reprogram the two byte Address register of channel 1 when channel 1 receives a DMA request. If the 8237A is enabled (bit 2 in the command register is 0) and channel 1 is unmasked, a DMA service will occur after only one byte of the Address register has been reprogrammed. This can be avoided by disabling the controller (setting bit 2 in the command register) or masking the channel before programming any other registers. Once the programming is complete, the controller can be enabled/unmasked.

After power-up it is suggested that all internal locations, especially the Mode registers, be loaded with some valid value. This should be done even if some channels are unused.



8237A/8237A-4/8237A-5

APPLICATION INFORMATION

Figure 8 shows a convenient method for configuring a DMA system with the 8237A controller and an 8080A/8085AH microprocessor system. The multimode DMA controller issues a HRQ to the processor whenever there is at least one valid DMA request from a peripheral device. When the processor replies with a HLDA signal, the 8237A takes control of the address bus, the data bus and the control bus. The address for the first transfer

operation comes out in two bytes — the least significant 8 bits on the eight address outputs and the most significant 8 bits on the data bus. The contents of the data bus are then latched into the 8282 8-bit latch to complete the full 16 bits of the address bus. The 8282 is a high speed, 8-bit, three-state latch in a 20-pin package. After the initial transfer takes place, the latch is updated only after a carry or borrow is generated in the least significant address byte. Four DMA channels are provided when one 8237A is used.

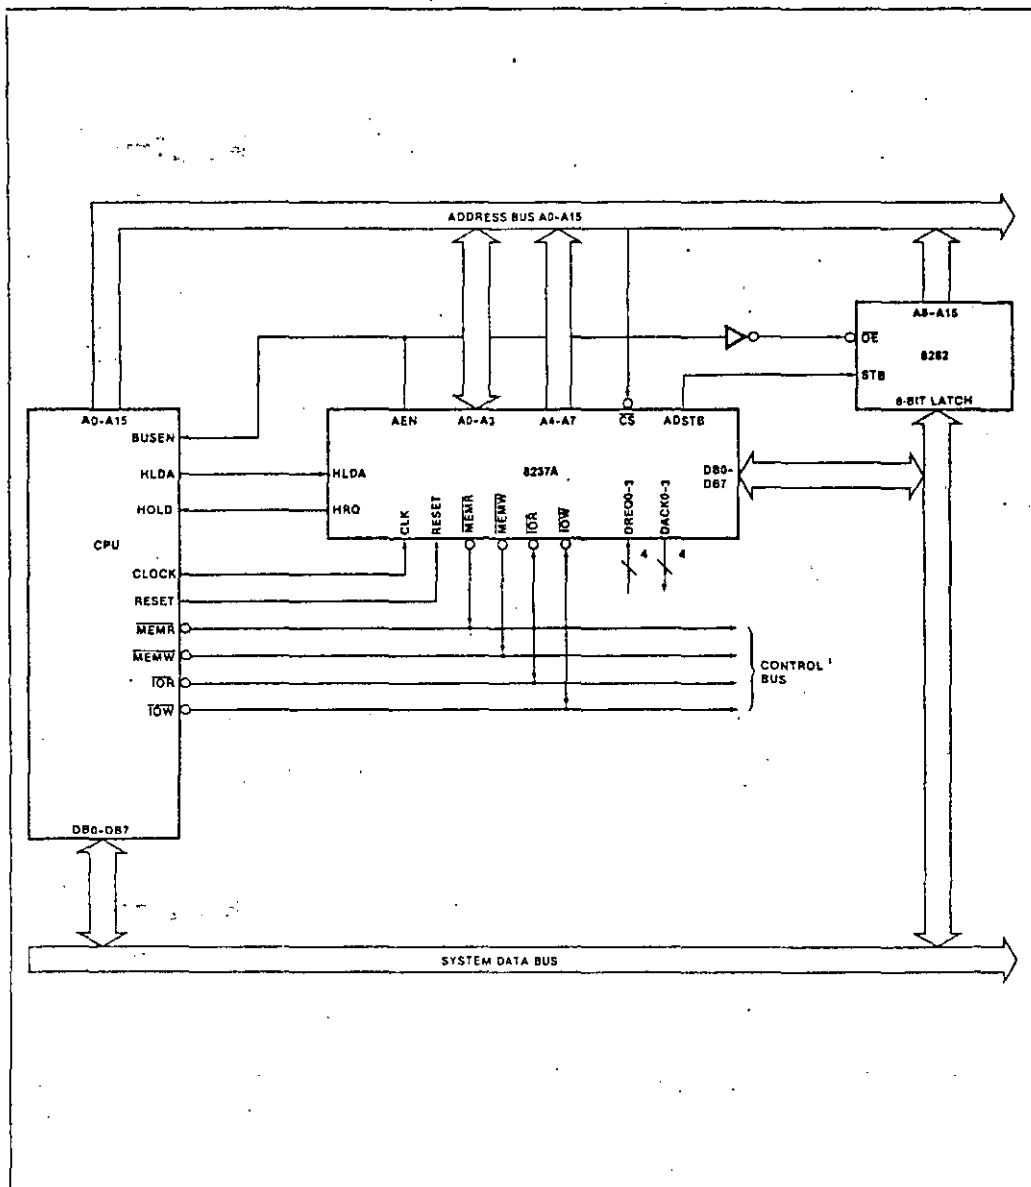


Figure 8. 8237A System interface

intel

8237A/8237A-4/8237A-5

ABSOLUTE MAXIMUM RATINGS*

Ambient Temperature under Bias 0°C to 70°C
 Storage Temperature - 65°C to + 150°C
 Voltage on any Pin with
 Respect to Ground - 0.5 to 7V
 Power Dissipation 1.5 Watt


**NOTICE: Stresses above those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.*

D.C. CHARACTERISTICS ($T_A = 0^\circ\text{C}$ to 70°C , $V_{CC} = 5.0\text{V} \pm 5\%$, $\text{GND} = 0\text{V}$)

Symbol	Parameter	Min.	Typ. ⁽¹⁾	Max.	Unit	Test Conditions
V_{OH}	Output High Voltage	2.4			V	$I_{OH} = -200 \mu\text{A}$
		3.3			V	$I_{OH} = -100 \mu\text{A}$ (HRQ Only)
V_{OL}	Output LOW Voltage			40	V	$I_{OL} = 2.0\text{mA}$ (data Bus, EOP) $I_{OL} = 3.2\text{mA}$ (other outputs) $I_{OL} = 2.5\text{mA}$ (ADSTB) (Note 8)
V_{IH}	Input HIGH Voltage	2.0		$V_{CC} + 0.5$	V	(Note 8)
V_{IL}	Input LOW Voltage	-0.5		0.8	V	
I_{LI}	Input Load Current			= 10	μA	$0\text{V} \leq V_{IN} \leq V_{CC}$
I_{LO}	Output Leakage Current			= 10	μA	$0.45\text{V} \leq V_{OUT} \leq V_{CC}$
I_{CC}	V_{CC} Supply Current		110	130	mA	$T_A = +25^\circ\text{C}$
			130	150	mA	$T_A = 0^\circ\text{C}$
C_O	Output Capacitance		4	8	pF	$f_c = 1.0\text{MHz}$, Inputs = 0V
C_I	Input Capacitance		8	15	pF	
$C_{I/O}$	I/O Capacitance		10	18	pF	

NOTES:

- Typical values are for $T_A = 25^\circ\text{C}$, nominal supply voltage and nominal processing parameters.
- Input timing parameters assume transition times to 20 ns or less. Waveform measurement points for both input and output signals are 2.0V for HIGH and 0.8V for LOW, unless otherwise noted.
- Output loading is 1 TTL gate plus 150pF capacitance, unless otherwise noted.
- The net IOW or MEMW Pulse width for normal write will be TCY-100 ns and for extended write will be 2TCY-100 ns. The net IOR or MEMR pulse width for normal read will be 2TCY-50 ns and for compressed read will be TCY-50 ns.
- TDQ is specified for two different output HIGH levels. TDQ1 is measured at 2.0V. TDQ2 is measured at 3.3V. The value for TDQ2 assumes an external 3.3K Ω pull-up resistor, connected from HRQ to V_{CC} .
- DREQ should be held active until DACK is returned.
- DREQ and DACK signals may be active high or active low. Timing diagrams assume the active high mode.
- The values of V_{OL} and V_{IH} have been changed from the 1985 specification to allow more design margin.
- Successive read and/or write operations by the external processor to program or examine the controller must be timed to allow at least 600 ns for the 8237A, at least 500 ns for the 8237A-4 and at least 400 ns for the 8237A-5, as recovery time between active read or write pulses. The same recovery time is needed between an active read or write pulse followed by a DMA transfer.
- EOP is an open collector output. This parameter assumes the presence of a 2.2K pullup to V_{CC} .
- Pin 5 is an input that should always be at a logic high level. An internal pull-up resistor will establish a logic high when the pin is left floating. It is recommended however, that pin 5 be tied to V_{CC} .
- Output Loading on the Data Bus is 1, Gate plus 100pF capacitance.

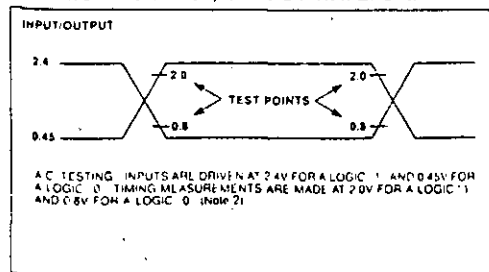A.C. TESTING INPUT, OUTPUT WAVEFORM



8237A/8237A-4/8237A-5

A.C. CHARACTERISTICS—DMA (MASTER) MODE ($T_A = 0^\circ\text{C}$ to 70°C ,
 $V_{CC} = +5V \pm 5\%$, $GND = 0V$)

Symbol	Parameter	8237A		8237A-4		8237A-5		Unit
		Min.	Max.	Min.	Max.	Min.	Max.	
TAEL	AIN HIGH from CLK LOW (S1) Delay Time		300		225		200	ns
TAET	AIN LOW from CLK HIGH (S1) Delay Time		200		150		130	ns
TAFAB	AIR Active to Float Delay from CLK HIGH		150		120		90	ns
TAFC	HEAD or WRITE Float from CLK HIGH		150		120		120	ns
TAFDB	AIR Active to Float Delay from CLK HIGH		250		190		170	ns
TAHR	AIR from READ HIGH Hold Time	TCY-100		TCY-100		TCY-100		ns
TAHS	AIR from ADSTB LOW Hold Time	40		40		30		ns
TAHW	AIR from WRITE HIGH Hold Time	TCY-50		TCY-50		TCY-50		ns
TAK	ACK Valid from CLK LOW Delay Time (Note 7)		250		220		170	ns
	TOP HIGH from CLK HIGH Delay Time (Note 10)		250		190		170	ns
	TOP LOW from CLK HIGH Delay Time		250		190		170	ns
TASM	AIR Stable from CLK HIGH		250		190		170	ns
TASS	AIR to ADSTB LOW Setup Time	100		100		100		ns
TCH	Clock High Time (Transitions ≤ 10 ns)	120		100		80		ns
TCL	Clock Low Time (Transitions ≤ 10 ns)	150		110		68		ns
TCY	CLK Cycle Time	320		250		200		ns
TDCL	CLK HIGH to READ or WRITE LOW Delay (Note 4)		270		200		190	ns
TDCTR	READ HIGH from CLK HIGH (S4) Delay Time (Note 4)		270		210		190	ns
TDCTW	WRITE HIGH from CLK HIGH (S4) Delay Time (Note 4)		200		150		130	ns
TDQ1	HRO Valid from CLK HIGH Delay Time (Note 5)		160		120		120	ns
TDQ2			250		190		120	ns
TEPS	TOP LOW from CLK LOW Setup Time	60		45		40		ns
TEPW	TOP Pulse Width	300		225		220		ns
TFAAB	AIR Float to Active Delay from CLK HIGH		250		190		170	ns
TFAC	HEAD or WRITE Active from CLK HIGH		200		150		150	ns
TFADB	AIR-Float to Active Delay from CLK HIGH		300		225		200	ns
THS	H LDA Valid to CLK HIGH Setup Time	100		75		75		ns
TICH	Input Data from MEMR HIGH Hold Time	0		0		0		ns
TIDS	Input Data to MEMR HIGH Setup Time	250		190		170		ns
TOCH	Output Data from MEMW HIGH Hold Time	20		20		10		ns
TOCV	Output Data Valid to MEMW HIGH	200		125		125		ns
TCS	INFO to CLK LOW (S1, S4) Setup Time (Note 7)	0		0		0		ns
TRH	TRK to READY LOW Hold Time	20		20		20		ns
TRS	READY to CLK LOW Setup Time	100		60		60		ns
TSHL	ANSTB HIGH from CLK HIGH Delay Time		200		150		130	ns
TSHT	ANSTB LOW from CLK HIGH Delay Time		140		110		90	ns





8237A/8237A-4/8237A-5

A.C. CHARACTERISTICS—PERIPHERAL (SLAVE) MODE (T_A = 0°C to 70°C, V_{CC} = 5.0V ± 5%, GND = 0V)

Symbol	Parameter	8237A		8237A-4		8237A-5		Unit
		Min.	Max.	Min.	Max.	Min.	Max.	
TAR	ADR Valid or CS LOW to READ LOW	50		50		50		ns
TAW	ADR Valid to WRITE HIGH Setup Time	200		150		130		ns
TCW	CS LOW to WRITE HIGH Setup Time	200		150		130		ns
TDW	Data Valid to WRITE HIGH Setup Time	200		150		130		ns
TRA	ADR or CS Hold from READ HIGH	0		0		0		ns
TRDE	Data Access from READ LOW (Note 12)		200		200		140	ns
TRDF	DB Float Delay from READ HIGH	20	100	20	100	0	70	ns
TRSTD	Power Supply HIGH to RESET LOW Setup Time	500		500		500		ns
TRSTS	RESET to First IOWR	2TCY		2TCY		2TCY		ns
TRSTW	RESET Pulse Width	300		300		300		ns
TRW	READ Width	300		250		200		ns
TWA	ADR from WRITE HIGH Hold Time	20		20		20		ns
TWC	CS HIGH from WRITE HIGH Hold Time	20		20		20		ns
TWD	Data from WRITE HIGH Hold Time	30		30		30		ns
TWWS	Write Width	200		200		160		ns

WAVEFORMS

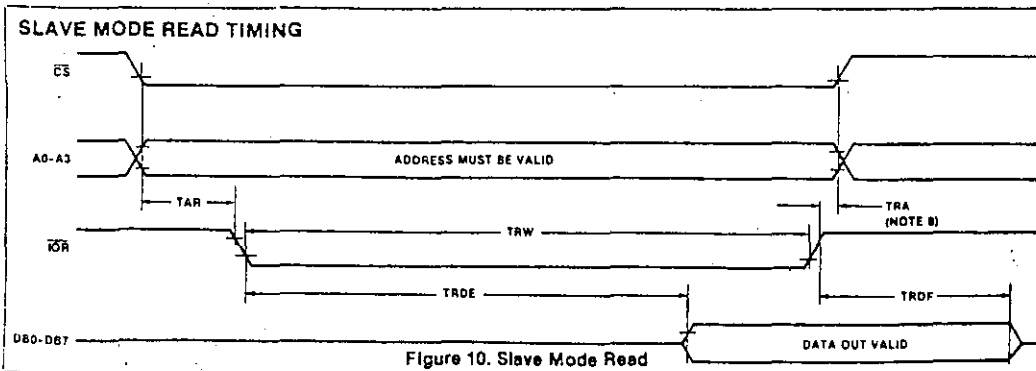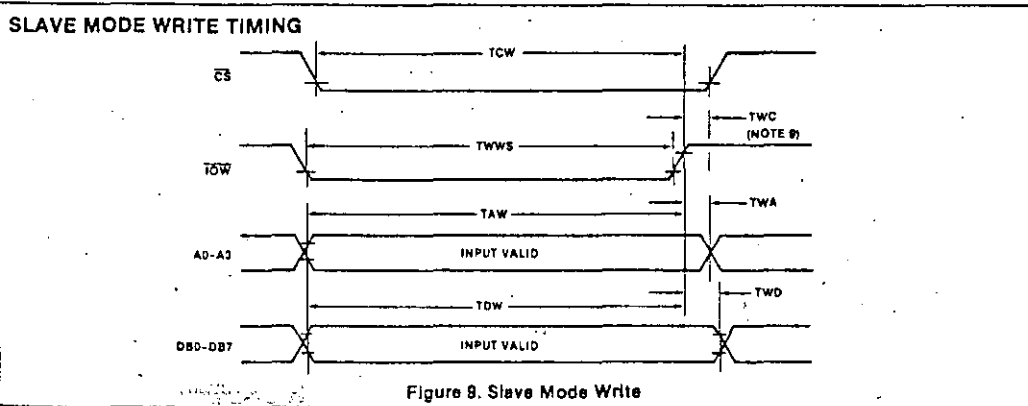



WAVEFORMS (Continued)

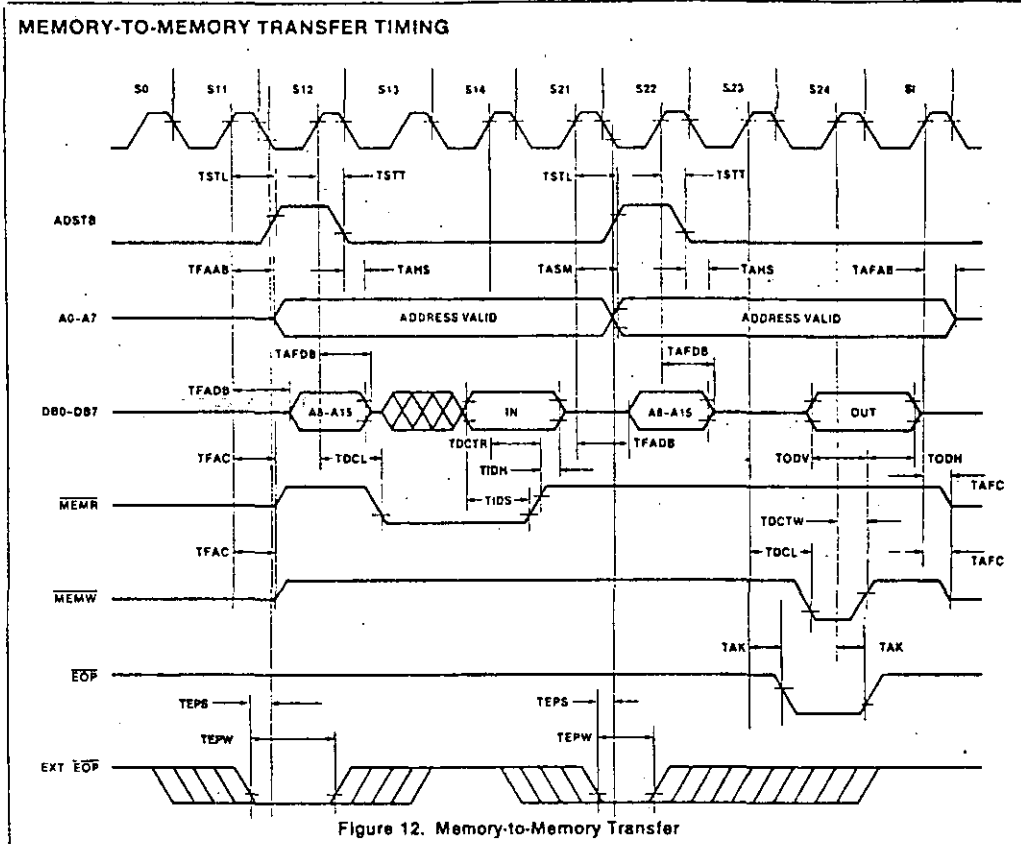


Figure 12. Memory-to-Memory Transfer



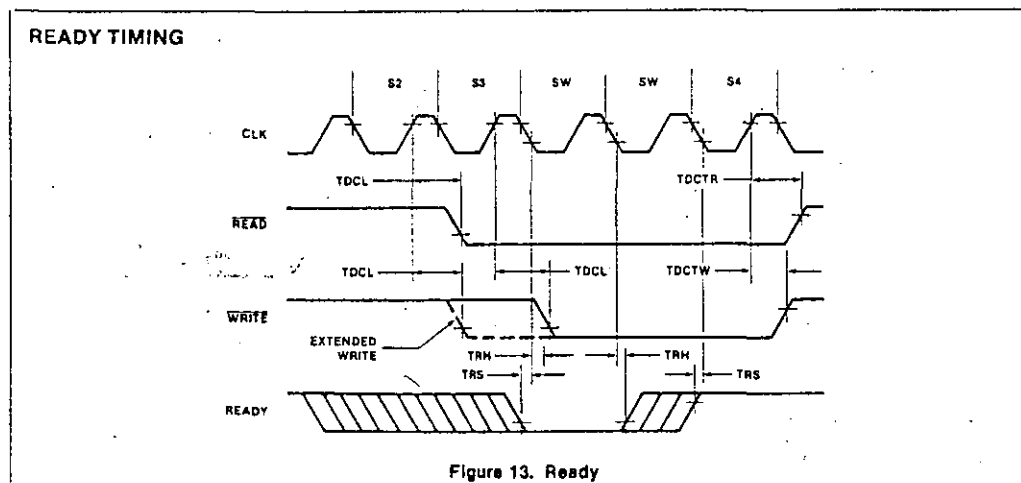


Figure 13. Ready



WAVEFORMS (Continued)

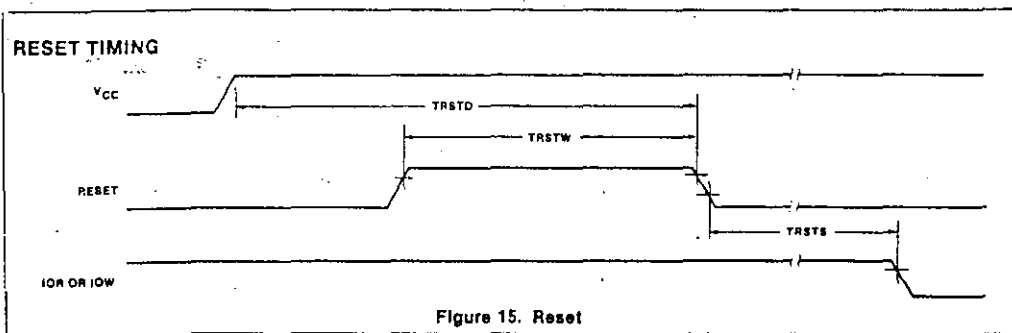

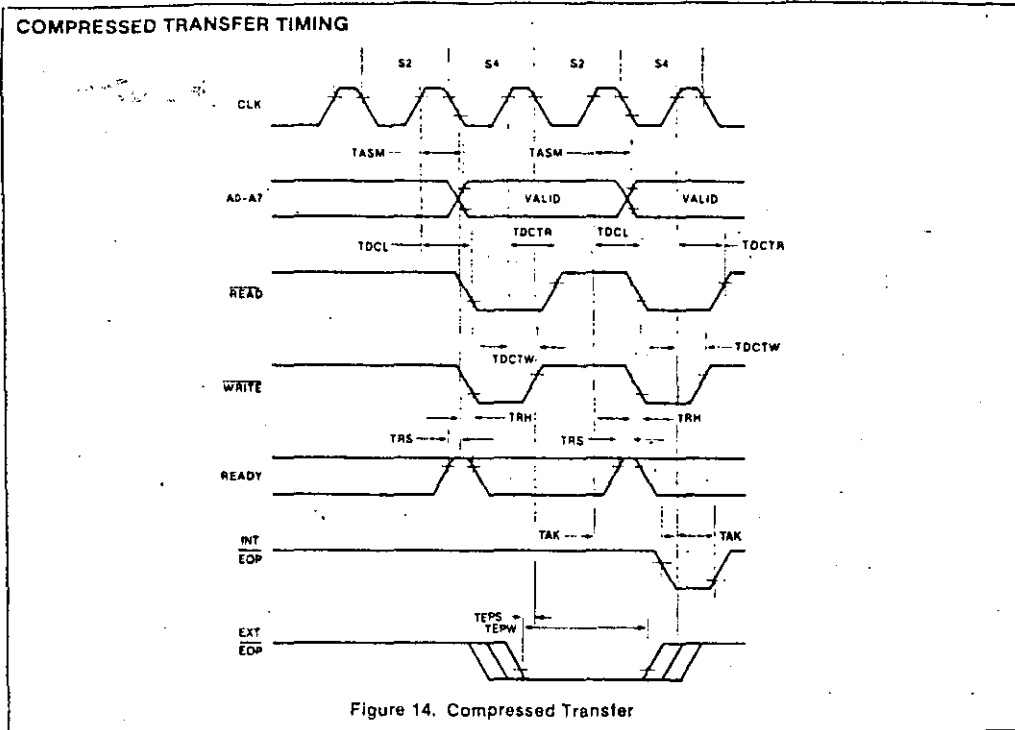

8257/8257-5 PROGRAMMABLE DMA CONTROLLER

- MCS-85® Compatible 8257-5
 - 4-Channel DMA Controller
 - Priority DMA Request Logic
 - Channel Inhibit Logic
 - Terminal Count and Modulo 128 Outputs
 - Single TTL Clock
 - Single +5V Supply
 - Auto Load Mode
 - Available in EXPRESS - Standard Temperature Range
 - Available in 40-Lead Cerdip and Plastic Package.
- (See Packaging Spec. Order #231369)

The Intel® 8257 is a 4-channel direct memory access (DMA) controller. It is specifically designed to simplify the transfer of data at high speeds for the Intel® microcomputer systems. Its primary function is to generate, upon a peripheral request, a sequential memory address which will allow the peripheral to read or write data directly to or from memory. Acquisition of the system bus is accomplished via the CPU's hold function. The 8257 has priority logic that resolves the peripherals requests and issues a composite hold request to the CPU. It maintains the DMA cycle count for each channel and outputs a control signal to notify the peripheral that the programmed number of DMA cycles is complete. Other output control signals simplify sector data transfers. The 8257 represents a significant savings in component count for DMA-based microcomputer systems and greatly simplifies the transfer of data at high speed between peripherals and memories.

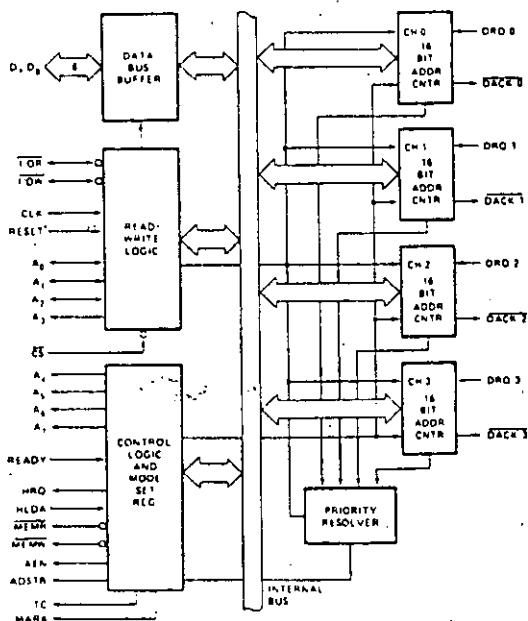


Figure 1. Block Diagram

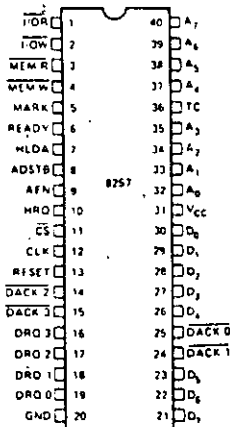


Figure 2. Pin Configuration

FUNCTIONAL DESCRIPTION

General

The 8257 is a programmable, Direct Memory Access (DMA) device which, when coupled with a single 8-bit latch provides a complete four-channel DMA controller for use in Intel microcomputer systems. After being initialized by software, the 8257 can transfer a block of data, containing up to 16,384 bytes, between memory and a peripheral device directly, without further intervention required of the CPU. Upon receiving a DMA transfer request from an enabled peripheral, the 8257:

1. Acquires control of the system bus.
2. Acknowledges that requesting peripheral which is connected to the highest priority channel.
3. Outputs the least significant eight bits of the memory address onto system address lines A_0-A_7 , outputs the most significant eight bits of the memory address to the 8-bit latch via the data bus (the outputs of the latch should drive address lines A_8-A_{15}), and
4. Generates the appropriate memory and I/O read/write control signals that cause the peripheral to receive or deposit a data byte directly from or to the addressed location in memory.

The 8257 will retain control of the system bus and repeat the transfer sequence, as long as a peripheral maintains its DMA request. Thus, the 8257 can transfer a block of data to/from a high speed peripheral (e.g., a sector of data on a floppy disk) in "a single, burst". When the specified number of data bytes have been transferred, the 8257 activates its Terminal Count (TC) output, informing the CPU that the operation is complete.

The 8257 offers three different modes of operation: (1) DMA read, which causes data to be transferred from memory to a peripheral; (2) DMA write, which causes data to be transferred from a peripheral to memory; and (3) DMA verify, which does not actually involve the transfer of data. When an 8257 channel is in the DMA verify mode, it will respond the same as described for transfer operations, except that no memory or I/O read/write control signals will be generated, thus preventing the transfer of data. The 8257, however, will gain control of the system bus and will acknowledge the peripheral's DMA request for each DMA cycle. The peripheral can use these acknowledge signals to enable an internal access of each byte of a data block in order to execute some verification procedure, such as the accumulation of a CRC (Cyclic Redundancy Code) checkword. For example, a block of DMA verify cycles might follow a block of DMA read cycles (memory to peripheral) to allow the peripheral to verify its newly acquired data.

Block Diagram Description

1. DMA Channels

The 8257 provides four separate DMA channels (labeled CH-0 to CH-3). Each channel includes two sixteen-bit registers: (1) a DMA address register, and (2) a terminal count register. Both registers must be initialized before a channel is enabled. The DMA address register is loaded with the address of the first memory location to be accessed. The value loaded into the low-order 14-bits of the terminal count register specifies the number of DMA cycles minus one before the Terminal Count (TC) output is activated. For instance, a terminal count of 0 would cause the TC output to be active in the first DMA cycle for that channel. In general, if N = the number of desired DMA cycles, load the value $N-1$ into the low-order 14-bits of the terminal count register. The most significant two bits of the terminal count register specify the type of DMA operation for that channel.

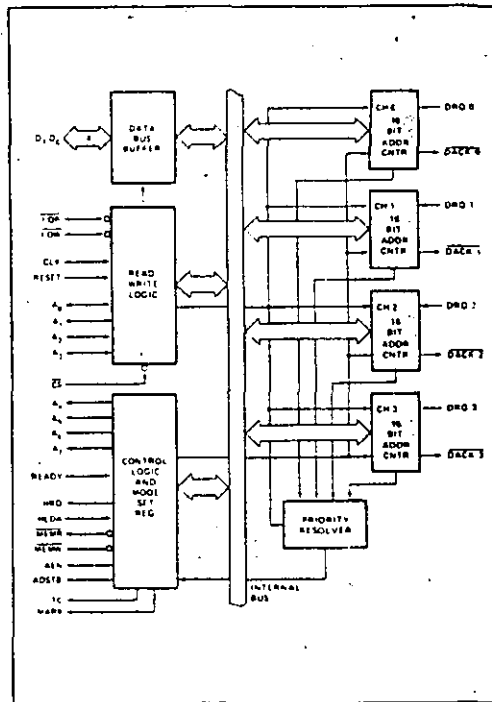


Figure 3. 8257 Block Diagram Showing DMA Channels

8259A/8259A-2/8259A-8 PROGRAMMABLE INTERRUPT CONTROLLER

- IAPX 86, IAPX 88 Compatible
- MCS-80^s, MCS-85^s Compatible
- Eight-Level Priority Controller
- Expandable to 64 Levels
- Programmable Interrupt Modes
- Individual Request Mask Capability
- Single +5V Supply (No Clocks)
- 28-Pin Dual-In-Line Package
- Available in EXPRESS
 - Standard Temperature Range
 - Extended Temperature Range

The Intel[®] 8259A Programmable Interrupt Controller handles up to eight vectored priority interrupts for the CPU. It is cascadable for up to 64 vectored priority interrupts without additional circuitry. It is packaged in a 28-pin DIP, uses NMOS technology and requires a single +5V supply. Circuitry is static, requiring no clock input.

The 8259A is designed to minimize the software and real time overhead in handling multi-level priority interrupts. It has several modes, permitting optimization for a variety of system requirements.

The 8259A is fully upward compatible with the Intel[®] 8259. Software originally written for the 8259 will operate the 8259A in all 8259 equivalent modes (MCS-80/85, Non-Buffered, Edge Triggered).

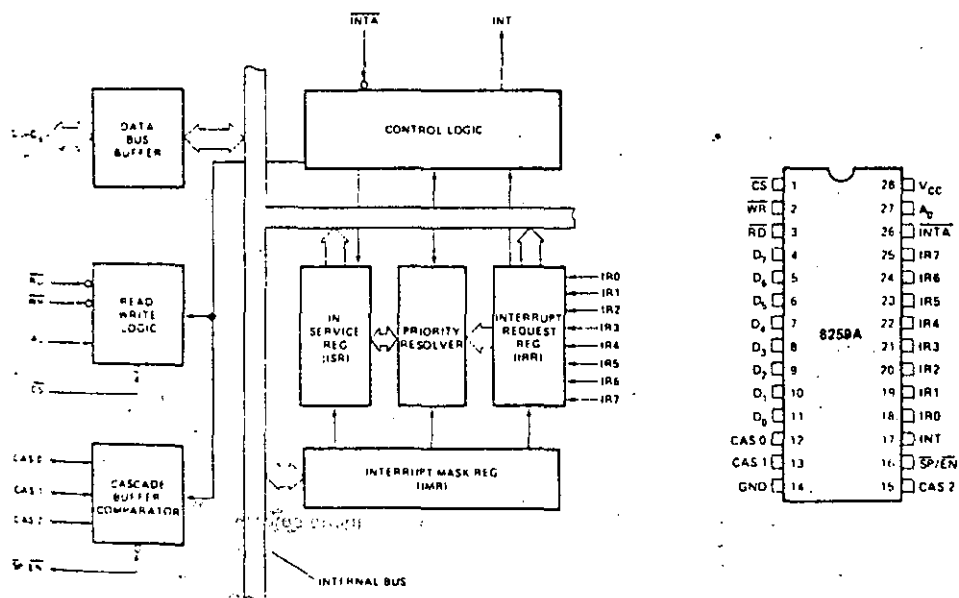


Figure 1. Block Diagram



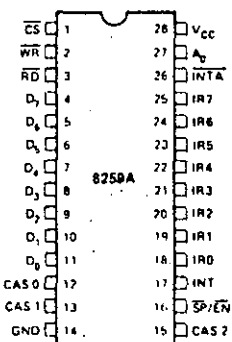


Figure 2. Pin Configuration

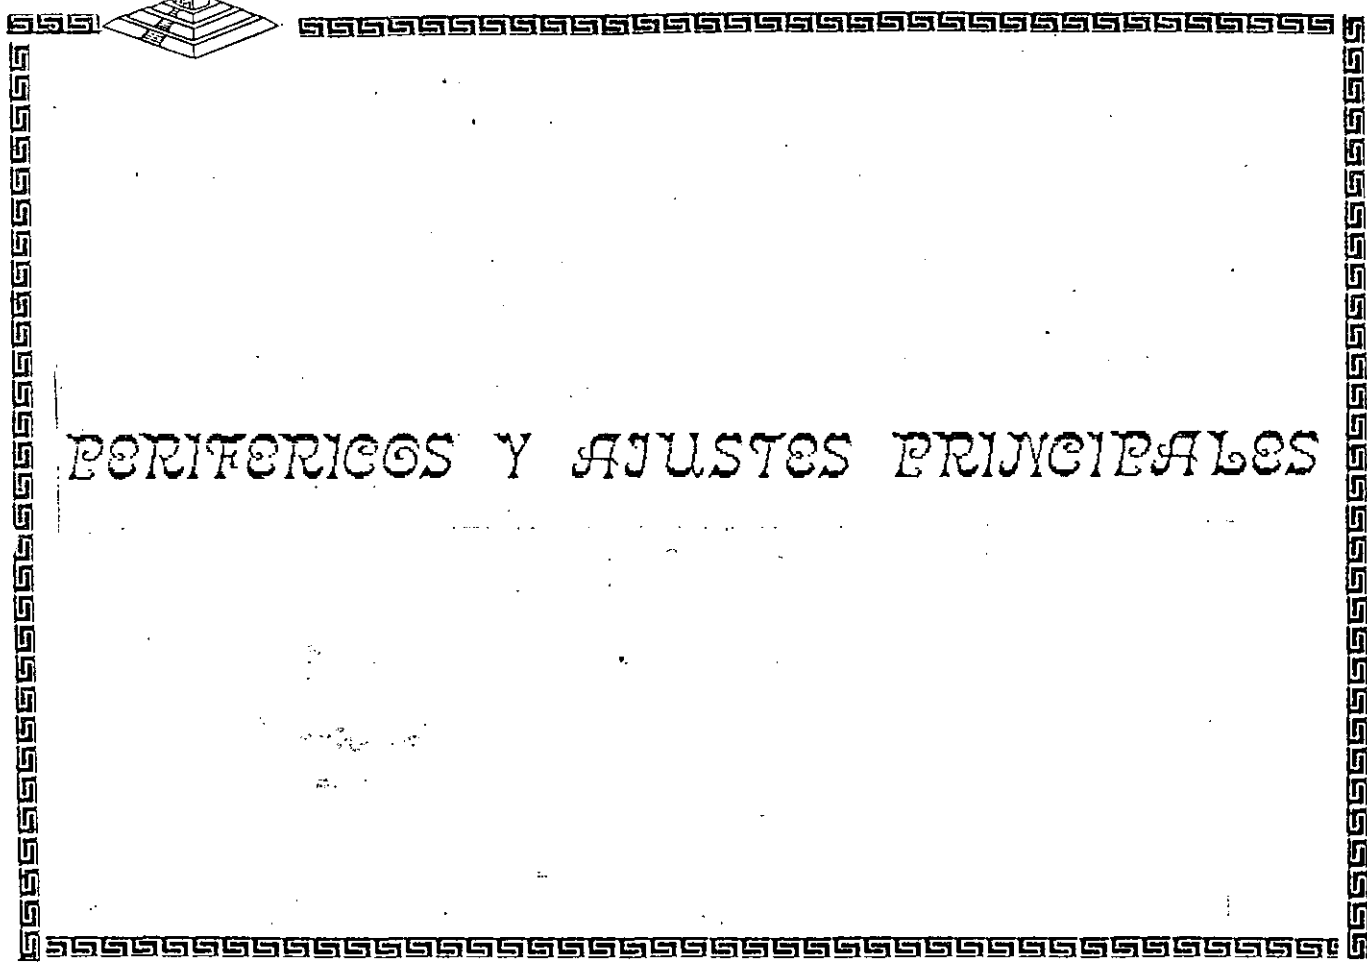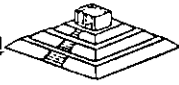

PERIFERICOS Y AJUSTES PRINCIPALES

MONITOR DE VIDEO

La creciente evolución de las microcomputadoras hace que la necesidad de monitores de video de buena calidad haya experimentado también un crecimiento significativo. Teniendo esto en cuenta, presentamos en este artículo un proyecto de Philips específico para esta área, con todos los consejos de montaje y ajustes.

Proyecto: Philips Components

Texto: Ing. David M. Risnik

El prototipo del monitor de video de alta resolución, probado por nosotros, funcionó en perfectas condiciones. Alertamos, sin embargo, que este montaje sólo está indicado para los técnicos experimentados en el tema del video.

Los problemas que pueden surgir en montajes de esta naturaleza se presentan bajo las más variadas formas y solamente quienes poseen las naturales vivencias en tal sector disponen de las habilidades necesarias para solucionarlos.

Los circuitos de alta tensión poseen un comportamiento típico de funcionamiento, y exigen conceptos prácticos para la solución de sus problemas.

Si bien por un lado consideramos que es un proyecto muy atractivo y satisfactorio para los que se dedican a este tema, creemos oportuno hacer esta aclaración para evitar trastornos a los lectores que, no tengan la necesaria experiencia en el área. Recomendamos a todos, por otra parte, la lectura del artículo, que es muy didáctico.

El monitor de video puede considerarse el periférico de mayor importancia en una microcomputadora, y muchas veces se le confunde como parte integrante de la misma. Vamos entonces, antes de presentar su circuito, a

definir rápidamente sus características de funcionamiento.


Toda información a ser intercambiada entre el usuario y la micro debe estar dispuesta en la forma "inteligible" por el hombre, ya sea en forma de caracteres, símbolos o figuras (gráficos). Para satisfacer esta condición las señales digitales generadas por la microcomputadora son adaptadas para estimular determinados periféricos que trasladan esta información al hombre, en formas que él reconozca. Las impresoras y las terminales de video, constituyen ejemplos típicos. En el caso de las impresoras, la información digital, creada especialmente para esta finalidad, se aplica a una cabeza de agujas que disparan sobre una cinta con tinta imprimiendo en el papel las letras, símbolos y dibujos.

En los terminales de video, se


desarrolla un proceso bastante semejante, pero con la ventaja de que no existen piezas mecánicas móviles (sujetas a desgaste) ni cintas con tinta, ni papel. Todo el proceso de impresión es electrónico: el papel es, sustituido por la pantalla de un cinescopio, y el elemento "tinta", por la luz emitida resultante de la colisión entre el haz electrónico y la capa de fósforo que reviste internamente la cara plana de la pantalla (figura 1).

Los caracteres o gráficos creados digitalmente por la microcomputadora son transformados en una forma de señal (señal de video), que va a "modular" el haz electrónico en constante barrido por la pantalla del cinescopio, informando cuales son los puntos que deben ser iluminados (encendidos) o no.

¡Pero muchos de ustedes, es-

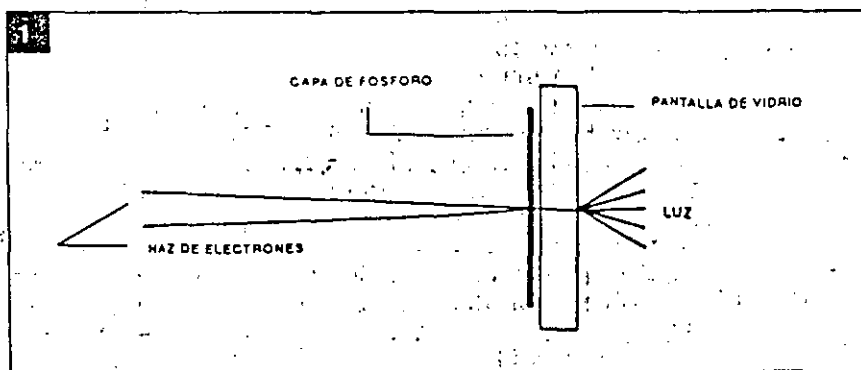

Las conexiones entre la placa del kinescopio y la placa base deberán ser de una extensión suficiente para que concuerden con la disposición mecánica final. Estas conexiones son: la rejilla de foco (pin 7), la rejilla auxiliar G2 (pin 6), la rejilla de control G1 o de brillo (pin 5), el cátodo (pin 2), la tierra (pin 4), filamento +12V (pin 3) y finalmente la alimentación para el transistor de salida de video +57V en la placa. La tierra de la placa del kinescopio deberá también ser conectada a la tierra del kinescopio (aquadac), como muestra la figura-14.

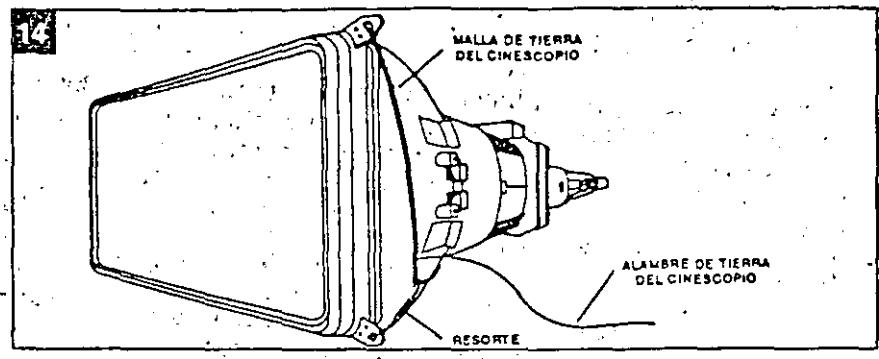


Las conexiones del yugo también deberán hacerse: bobinas deflectoras horizontales (dos alambres) y bobinas deflectoras verticales (dos alambres). Observe por la figura 15 la disposición de los terminales del yugo. En estas conexiones, mantenga también una extensión suficiente conforme se explicó anteriormente.

Por fin, la conexión del transformador de alimentación: la entrada alternada del secundario de 18V del transformador va a alimentar la placa principal, donde será rectificadada y filtrada, yendo a alimentar el regulador de 12V.

Prueba final

En esta etapa de prueba final, todos los circuitos del monitor deberán entrar en funcionamiento, y por lo tanto, como se

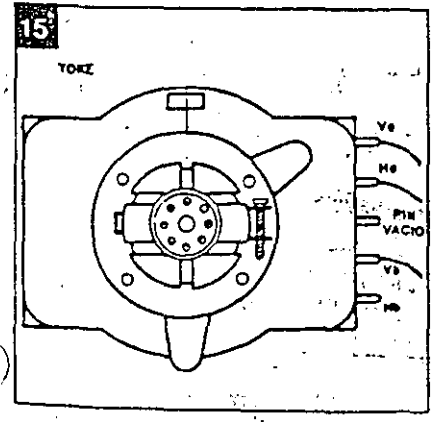

puede esperar, la probabilidad de que ocurran problemas también son mayores, y debemos estar preparados para resolverlos. En este sentido elaboramos una tabla con las principales formas de onda en el circuito, para que sirvan de referencia en su trabajo (figura 16).

Consiga un osciloscopio y una fuente de alimentación ajustable para dar principio a los trabajos finales.

Siempre recomendamos que preferentemente se use una fuente de alimentación externa (12V x 1A) hasta que coloque el circuito en pleno funcionamiento.

Consideraciones y consejos


a) El yugo es la carga de las etapas horizontal y vertical, por lo tanto cualquier irregularidad en su conexión influirá sobre estas etapas. Revise con cuidado las conexiones de las bobinas horizontales (Ha y Hb) y verticales (Va y Vb) al circuito. En caso de duda, con un ohmetro puede fácilmente localizar las bobinas de deflexión vertical pues las mismas presentarán una resistencia bastante superior (del orden de 12 ohm) comparada a la de las bobinas deflectoras horizontales. El bobinado de la deflexión vertical se hace sobre el núcleo de ferrita del yugo, pues este bobinado exige una inductancia alta, para hacer carga a los 50Hz ó 60Hz de la deflexión vertical. Jamás conecte el circuito sin que la

conexión del yugo esté hecha.

b) Use un osciloscopio con entrada para hasta 400V. La lectura de los pulsos horizontales creados en el colector del transistor de salida horizontal puede alcanzar de 250 a 300V de pico. Para efectuar esta lectura el osciloscopio debe permitir la entrada de tensiones de este orden.

c) El chupón del kinescopio conduce la "muy alta tensión" necesaria al ánodo para que el haz de electrones sea atraído hacia la pantalla. Sin esta MAT, aunque el resto del circuito esté funcionando, no habrá brillo en la pantalla. **En ningún caso proceda a la lectura de esta MAT (del orden de 13kV) ya sea con voltímetro o con osciloscopio.**

d) Mucho cuidado al manipular el kinescopio. Su parte más delicada y frágil es el "cuello". Jamás cargue el kinescopio solamente por este "cuello". Sosténgalo siempre por la cara exterior

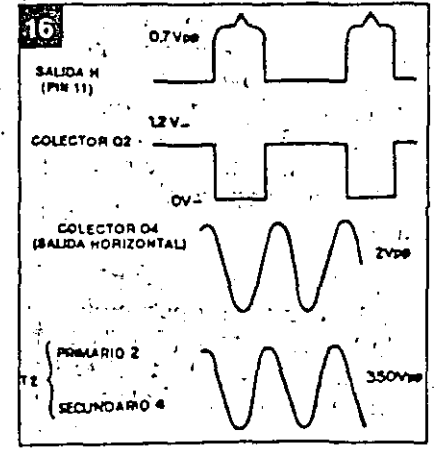

de la pantalla.

e) El ánodo del cinescopio (cara interna que reviste el tubo) forma un capacitor con la faz externa de grafito. Asegúrese de que este capacitor esté descargado durante la manipulación del cinescopio. Puede producirse su descarga por un corto resistivo (10k) entre el ánodo y el grafito o tierra del tubo. Evite cortes desagradables y accidentes inesperados.

f) El comportamiento del cinescopio es muy semejante al de una de las "viejas" válvulas.

El brillo de la pantalla es el resultado del pasaje del haz de electrones entre el cátodo (emisor) y el ánodo (receptor). Por lo tanto, son condiciones esenciales para tener el brillo de la pantalla: filamento caliente, tensión de aceleración en el ánodo (MAT), polarización adecuada en los demás elementos como el cátodo, rejilla de control, rejilla auxiliar y rejilla de foco.

g) Como las fuentes auxiliares son generadas por los secundarios del "fly-back" cualquier consumo de estas fuentes que esté por encima de lo normal (por ejemplo, cortocircuitos) se reflejará como dificultad de desempeño del transistor de salida horizontal, pues es él quien provee toda la energía de este sistema. La etapa vertical es alimentada por la tensión de +25V generada en el pin 5 del fly-back. Si por ejemplo el CI-2 estuviera con un consumo exagerado o en corto, el drenaje de corriente de esta fuente auxiliar bloqueará la salida horizontal.

h) Si ocurriera algún tipo de problema en la etapa horizontal, es normal que las tensiones auxiliares no se presenten en sus valores correctos. Por lo tanto, en estos casos, procure solucionar el problema principal, y no tome como referencia estas tensiones auxiliares, que volverán a lo nor-

mal en cuanto se resuelva la anomalía.

Ajustes del monitor

Son necesarios los siguientes ajustes, después que el aparato esté funcionando normalmente:

• **Frecuencia horizontal:** determina la frecuencia libre del oscilador horizontal que debe ser igual o muy cercana a la frecuencia de uso.

Sin ninguna señal aplicada a la entrada de video, ajuste por R14 la frecuencia de 15.75kHz en la señal de salida del pin 11 de CI-1. Conecte una señal de video y verifique la correcta sincronía de la imagen en la pantalla. Si fuera necesario, se pueden hacer pequeños retoques con la imagen en la pantalla.

• **Frecuencia vertical:** procedimiento idéntico con relación al osciloscopio vertical. Con una imagen en la pantalla, ajuste mediante R8 hasta conseguir su


CIRCUITOS & INFORMACIONES

CONVERSOR LUZ/FRECUENCIA

Este circuito proporciona una señal de salida cuya frecuencia depende de la intensidad de la luz que incide en un elemento sensible, en este caso un LDR.

La forma de la onda obtenida puede ser en diente de sierra, como pulsos bien agudos, según el electrodo del transistor de donde parta. En el emisor del transistor unijuntura tenemos una forma de onda diente de sierra y en la base de B1 tenemos pulsos agudos de buena intensidad.

El circuito es un oscilador de relajación donde la constante de

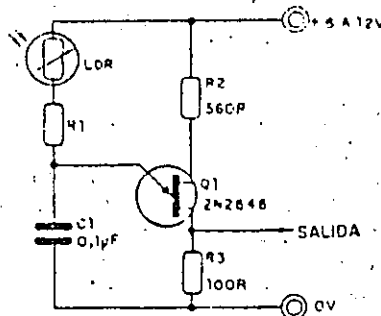

tiempo RC es variable, ya que R representa la resistencia del LDR, que es función de la luz incidente.

En la figura se ve el circuito simple que puede alimentarse con tensiones entre 6 y 12V.

La banda de frecuencias para el circuito está entre 100Hz y 5kHz pero puede modificarse cambiando C1. Valores mayores disminuyen las frecuencias de la banda.

El transistor unijuntura aconsejado es el 2N2646 aunque pueden probarse equivalentes.

Una aplicación posible de este circuito está en el desarrollo de un fotómetro digital.

ajustación vertical.

• **Altura vertical:** ajusta la ganancia del camino vertical de la señal de deflexión, y por consiguiente, la altura de la imagen en la pantalla. Su ajuste puede realizarse con una imagen que llene todo el contorno de la pantalla (por ejemplo un patrón blanco). Actúe sobre el trimpot hasta conseguir la altura deseada. En monitores de computadora, se recomienda una altura de 3/4 de la pantalla, o la preferencia del usuario.

• **Control de brillo:** el trimpot R24 ajusta la tensión de polari-

zación de la rejilla de control del cinescopio, y por lo tanto determina el punto de corte para el pasaje del haz de electrones. El ajuste del brillo debe permitir que solamente sean visibles las letras o puntos gráficos de la computadora, y no un fondo claro.

• **Ajuste de foco:** como el propio nombre lo dice, obtendrá un punto óptimo de focalización del haz sobre la pantalla. Use una imagen con bastantes detalles gráficos para una mejor apreciación de este ajuste.

• **Ajuste de apagado:** el trim-

pot R39 ajusta el límite de apagado horizontal y vertical, o sea, para que el retorno del haz no sea visible en la pantalla. Este ajuste se hace observando hasta que la imagen permanezca agradable, sin sombras ni nubes, y sin líneas de retraso vertical. La señal de video debe ser conectada a la entrada.

• **Ganancia de video:** en función del nivel de señal de video a ser aplicado al amplificador de la placa del cinescopio, podrá ser necesario sustituir la resistencia R45 que determina la ganancia de la etapa.

LISTA DE MATERIALES

Resistores

- R01 - 820R
- R02 - 82R
- R03 - 4k7
- R04 - 1k
- R05 - 100k
- R06 - 220k
- R07 - 8k2
- R08 - 470k (TP)
- R09 - 820R
- R10 - 6k8
- R11 - 2k7
- R12 - 5k6
- R13 - 33k
- R14 - 10k (TP)
- R15 - 6k8
- R16 - 820R
- R17 - 220R
- R18 - 5R6
- R19 - 470R
- R20 - 2M2 (TP)
- R21 - 22k
- R22 - 100k
- R23 - 47k
- R24 - 220k (TP)
- R25 - 270k
- R26 - 56R
- R27 - 6k8
- R28 - 680R
- R29 - 5R6
- R30 - 220k (TP)
- R31 - 560R
- R32 - 22k

Resistores

- R33 - 47k
- R34 - 560R
- R35 - 4R7
- R36 - 47k
- R37 - 2k2
- R38 - 680R
- R39 - 2k2
- R40 - 22k
- R41 - 27k
- R42 - 1k
- R43 - 1k2
- R44 - 22R*
- R45 - 47R

TP = mini trimpot
* ajusta la ganancia de video

Capacitores:

- C01 - 4µ 7/16V (EL)
- C02 - 10µ /16V (EL)
- C03 - 22µ/16V (EL)
- C04 - 150n/63V (CR)
- C05 - 1µ/63V (EL)
- C06 - 150p/50V (CR)
- C07 - 10µ/16V (EL)
- C08 - 680n/50V (CR)
- C09 - 100µ/16V (EL)
- C10 - 1n8/50V (CR)
- C11 - 220µ/16V (EL)
- C12 - 180p/63V (CR)
- C13 - 47n/250V (PL)
- C14 - 2n2/100V (ST)
- C15 - 100µ/16V(EL)

- C16 - 100n/250V (PL)
 - C17 - 10n/400V (PL)
 - C18 - 8n2/250V (PL)
 - C19 - 1n/50V (CR)
 - C20 - 820p/50V (CR)
 - C21 - 4µ 7/16V (EL)
 - C22 - 4µ 7/16V (EL)
 - C23 - 220µ/40V (EL)
 - C24 - 10n/600V (PL)
 - C25 - 22µ/100V (EL)
 - C26 - 100µ/100V (EL)
 - C27 - 100µ/100V(EL)
 - C28 - 100n/250V(PL)
 - C29 - 390p/50V (CR)
 - C30 - 33n/250VOP (PL)
 - C31 - 1000µ/16V (EL)
 - C32 - 6µ 8/16V (EL)
 - C33 - 100µ/25V (EL)
 - C34 - 2200µ/25V (EL)
 - C35 - 330n/250V (PL)
 - C36 - 22n/250V (PL)
 - C37 - 2200µ/25V (EL)
- CR = cerámico
PL = poliéster
EL = electrolítico
ST = styroflex

Diodos:

- D1, D2 - BAV21
- D3, D5 a D9 - BYV95C
- D4 - BY206 ó BY448
- D10 - BAX12
- D11 - zener 6V2

D12 - puente rectificador


Transistores

- Q1 - 2C548
- Q2, Q5 - BC549
- Q3 - BC637
- Q4 - BU407
- Q5 - BF422


Varicos: cinescopio 12"

- (31 cm) Philips M31
- 336 GH/B, unidad deflectora (yoke)
- Philips 3106 108 6777, transformador salida horizontal (fly-back)
- Philips 3106 108 3167, bobina de linealidad
- Philips 3106 108 2660, transformador drive (T1) 1171, transformador para foco dinámico (T2) 31681, zócalo para cinescopio 7 pins, zócalo para CI 18 pins, transformador de fuerza con secundario de 18V, cordón de fuerza, placa de circuito impreso base, plaqueta de cinescopio, etc

Unidades de Disco Flexible

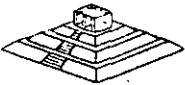


Ajustes Principales

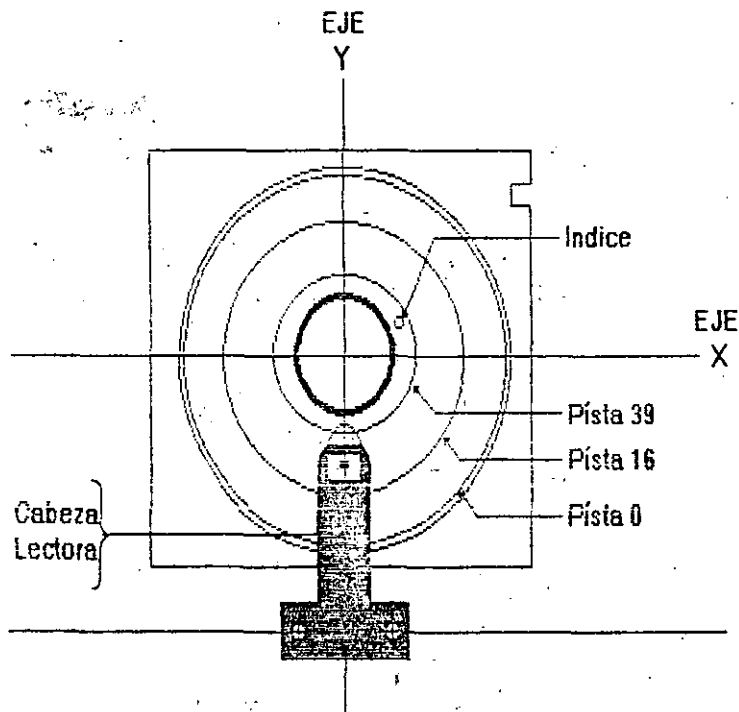

apuntes

UNIDADES DE DISCO

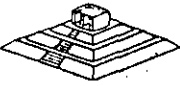

IBM Personal Computer
 Drive Diagnostic Program

Version 1.00
 Copyright Dysan Corp. 1983


- A. Automatic Drive Tests
- B. Manual Drive Tests
- C. Diskette Utilities

Enter command (A - C):

Dr: A Trk: 0 Side: 0 Rtrys: 0 Seek: 6 Settle: 15 DS Sound

apuntes

UNIDADES DE DISCO

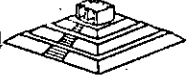

Drive Set-Up

Enter Drive number (A - D):

Enter Seek Time
(2, 4, 6, 8, ... 32 msec.):

Enter Head Settle Time (0 to 50 msec.):

Enter Retries (0 to 20):


Single / Double Sided (S/D):

Sound - Yes/No (Y/N):

Dr: A Trk: 0 Side: 0 Rtrys: 0 Seek: 6. Settle: 15 DS Sound

apuntes

UNIDADES DE DISCO

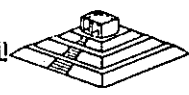

----- Automatic Tests -----


	Side 0	Side 1
RPM:	300	
Centering: Track 21	ok	ok
Radial: Track 0	-13 +13 [+0]	-13 +13 [+0]
16	-13 +13 [+0]	-13 +13 [+0]
39	-13 +13 [+0]	-13 +13 [+0]
Azimuth: Track 34	-42 +42	-42 +42
Number of Passes = 1	*** Drive PASSED All Tests ***	

- Press S Key - Stop Test at End of Current Pass
- Press Esc - Exit to Automatic Test Menu
- Press P Key - Print Screen
- Press Any Other Key to Restart Test

Dr: A Trk: 34 Side: 1 Rtrys: 0 Seek: 6 Settle: 15 DS Sound

apuntes

UNIDADES DE DISCO

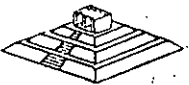

Manual Test Menu


- | | |
|-------------------------|------------------------------|
| A. Setup Drive | I. Random Seek, Read & Write |
| * B. RPM | J. Track Seek |
| * C. Diskette Centering | K. Alternate Track Seek |
| * D. Radial Alignment | L. Last Disk Error Status |
| * E. Azimuth Alignment | M. Select Side 0 |
| * F. Hysteresis | N. Select Side 1 |
| G. Accordion Seek | Z. Main Menu |
| H. Random Seek & Read | |

Enter command (A - Z):


Dr: A Trk: 0 Side: 0 Rtrys: 0 Seek: 6 Settle: 15 DS Sound

apuntas

UNIDADES DE DISCO

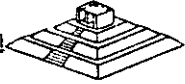


Radial Alignment

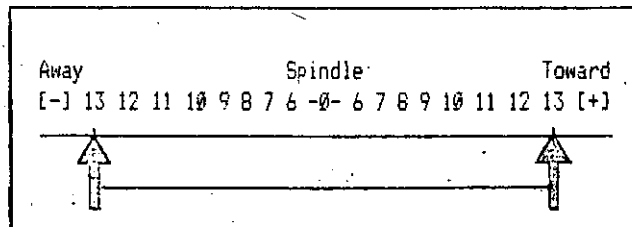

Press Esc - Exit To Menu
 Press Any Key - Restart Test

Dr: A Trk: 19 Side: 0 Rtrys: 0 Seek: 6 Settle: 15 DS Sound

apuntes

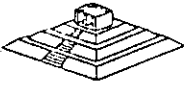


6- MANTENIMIENTO CORRECTIVO
BASICO - MEDIO


Puerto Teclado



(A)

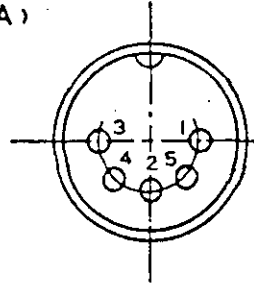

(B)

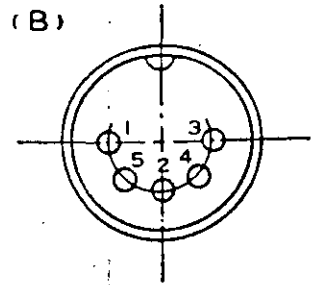

A: Keyboard 5-pin connector

B: Main board 5-pin connector

5 PIN DIN Connector

PIN	SIGNAL
1	+Keyboard Clock
2	+Keyboard Data
3	-Keyboard Reset
4	Ground
5	+5 Volts

apuntes


Configuración puertos



PORTS PINS - OUT SERIAL PORT (J1, J2)

Pin	Signal	Pin	Signal
1	Carrier Detect	6	Data Set Ready
2	Received Data	7	Request to Send
3	Transmitted Data	8	Clear to Send
4	Data Terminal Ready	9	Ring Indicator
5	Signal Ground	10	

MOUSE PORT (J5)

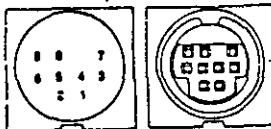


Pin	Signal
1	+5V
2	XA
3	XB
4	YA
5	YB
6	LB
7	MB
8	RB
9	GROUND

GAME PORT (J3)

Pin	Signal	Pin	Signal
1	+5V	9	+5V
2	D4	10	D6
3	D0	11	D2
4	Ground	12	Ground
5	Ground	13	D3
6	D1	14	D7
7	D5	15	+5V
8	+5V	16	Ground

apuntes


Señales de Video

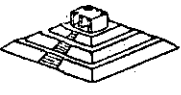


AT STANDARD TTL LEVELS

Ground	1	COLOR GRAPHICS ADAPTER
Ground	2	
Red	3	
Green	4	
Blue	5	
Intensity	6	
Reserved	7	
Horizontal Drive	8	
Vertical Drive	9	

RGB COLOR MONITOR

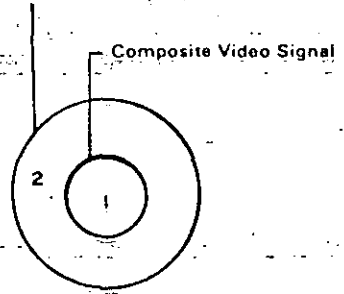

VIDEO MONITOR

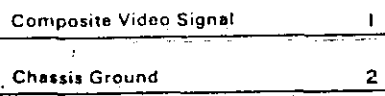

COLOR GRAPHICS COMPOSITE PHONE JACK

apuntes

Interface Disco Duro




HARDDISK DRIVE INTERFACE (J7)

Pin	Signal	Pin	Signal
1	Reset	2	Ground
3	D 7	4	D8
5	D6	6	D9
7	D5	8	D10
9	D4	10	D11
11	D3	12	D12
13	D2	14	D13
15	D1	16	D14
17	D0	18	D15
19	Ground	20	Un used
21	Unsed	22	Ground
23	IOW	24	Ground
25	IOR	26	Ground
27	IOCHRDY	28	ALE
29	Unsed	30	Ground
30	IRQBUS	32	JOC516
33	A1	34	Unsed
35	A0	36	A2
37	CS0	38	CSI
39	SLV ACT	40	Ground

apuntes

This Card is produced by auto-equipment. If there is any problem, you can send it to us.

Interface Unidades de Disco Flexible

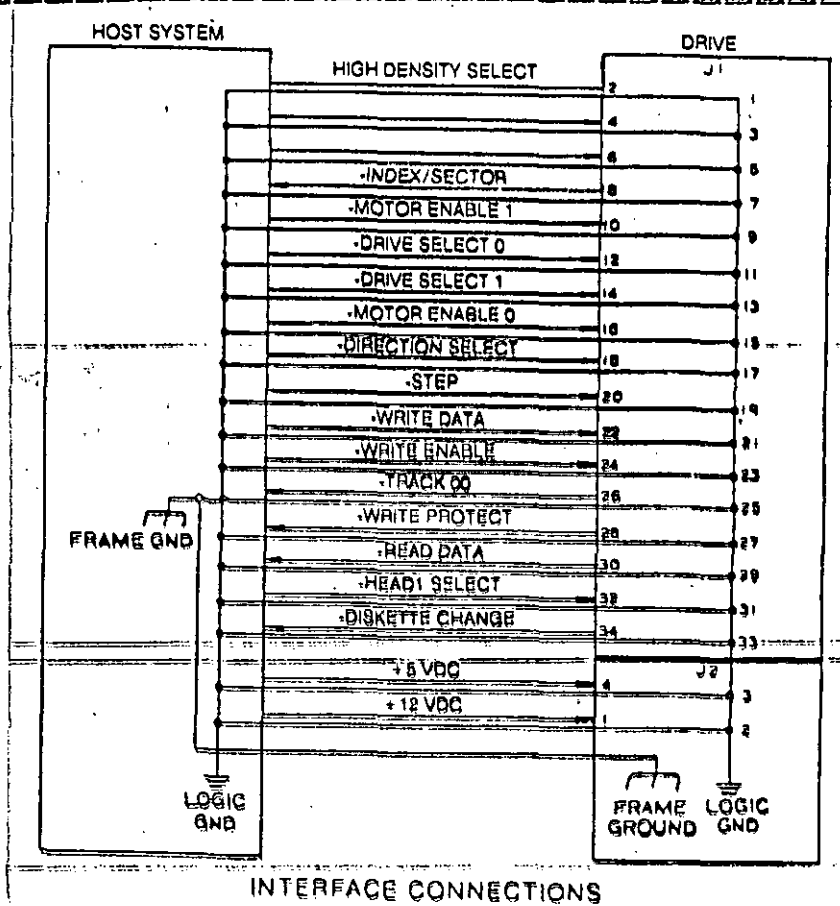

INTERFACE CONNECTIONS

apuntes

Puerto RS232 (serial)



PERIPHERAL

RS232 PORT

Description	Pin No.
NC	1
Transmitted Data	2
Received Data	3
Request to Send	4
Clear to Send	5
Data Set Ready	6
Signal Ground	7
Carrier Detect	8
NC	9
NC	10
NC	11
NC	12
NC	13
NC	14
NC	15
NC	16
NC	17
NC	18
NC	19
Data Terminal Ready	20
NC	21
Ring Indicator	22
NC	23
NC	24
NC	25


apuntes

Interface "Centronics" (paralelo)



25 PIN Connector		36 PIN Connector	
PIN	SIGNAL	PIN	SIGNAL
1	STROBE	1	STROBE
2	DATA 1	2	DATA 1
3	DATA 2	3	DATA 2
4	DATA 3	4	DATA 3
5	DATA 4	5	DATA 4
6	DATA 5	6	DATA 5
7	DATA 6	7	DATA 6
8	DATA 7	8	DATA 7
9	DATA 8	9	DATA 8
10	ACK	10	ACK
11	BUSY	11	BUSY
12	PAPER	12	PAPER
13	+ SELECT	13	+ SELECT
14	-AUTO FEED XT	14	-AUTO FEED XT
15	-ERROR	32	-ERROR
16	-INIT	31	-INIT (PRIME)
18-25	GND	15-17, 19-30	GND

apuntes

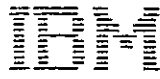

Hardware Maintenance Service

Part N16139735

Revised Edition (March 1986)

The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law: INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time.

It is possible that this publication may contain reference to, or information about, IBM products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that IBM intends to announce such IBM products, programming, or services in your country.

Products are not stocked at the address below. Requests for copies of this publication and for technical information about IBM Personal Computer products should be made to your authorized IBM Personal Computer dealer, IBM Product Center, or your IBM Marketing Representative.

The following paragraph applies only to the United States and Puerto Rico: A Reader's Comment Form is provided at the back of this publication. If the form has been removed, address comments to: IBM Corporation, Personal Computer, P.O. Box 1328-C, Boca Raton, Florida 33429-1328. IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligations whatever.

© Copyright International Business Machines Corporation 1981, 1986

Federal Communications Commission Radio Frequency Interference Statement

Warning: The equipment described herein has been certified to comply with the limits for a Class B computing device, pursuant to Subpart J of Part 15 of the FCC rules. Only peripherals (computer input/output devices, terminals/printers, etc.) certified to comply with the Class B limits may be attached to the computer. Operation with non-certified peripherals is likely to result in interference to radio and TV reception. If peripherals not offered by IBM are used with the equipment, it is suggested to use shielded grounded cables with in-line filters if necessary.

CAUTION

The products described herein are equipped with a grounded plug for the user's safety. It is to be used in conjunction with a properly grounded receptacle to avoid electrical shock.

Safety Inspection Guide

The intent of this inspection guide is to assist you in identifying potentially unsafe conditions on these products. Each machine, as it was designed and built, had required safety items installed to protect users and service personnel from injury. This guide addresses only those items. However, good judgment should be used to identify potential safety hazards not covered by this inspection guide.

If any unsafe conditions are present, a determination must be made on how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power: primary voltage on the frame can cause serious or fatal electrical shock.
- Explosive hazards, a damaged CRT face or bulging capacitor can cause serious injury.

- Mechanical hazards, loose or missing hardware can cause serious injury.

This safety inspection guide consists of a series of steps presented in a checklist. Begin the checks with the power off and the power cord removed from the electrical outlet.

We recommend all non-IBM devices and attachments be removed from the unit before you conduct the safety inspection.

Reference Literature:

- *Guide to Operations* manual.
- Any applicable safety publications.

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Power off the system. Disconnect the power cord from the electrical outlet.
3. Check the power cord for the following:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
 - b. The cord set should be the appropriate molded type as specified in the parts catalog of this manual.
 - c. Insulation must not be frayed or worn.
4. Remove the back panel from the system unit (if applicable).
5. Remove the cover mounting screws, and remove the cover.
6. Check for any obvious non-IBM alterations. Use good judgement as to the safety of any non-IBM alterations.
7. Check inside the unit for any obvious unsafe conditions, such as: metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
8. Check for worn, frayed, or pinched cables. Ensure the voltage specified on the voltage tag, or switch position (back

panel of the machine) matches the voltage of the power receptacle. If in doubt, verify the voltage at the power receptacle.

9. Examine the power supply and verify the following:

- a. Nonremovable fasteners in the power-supply cover have not been removed or tampered with.
- b. The grommet is installed where the internal power cables come through the frame of the power supply.

10. Check for the following labels on all systems:

- "Caution: Hazardous Area. Do Not Remove This Cover. Trained Service People Only. No Serviceable Components Inside"

or



- Hazardous voltage inside. Do not open.

11. In systems using a battery, check for the following labels:

- "BATTERY WARNING: Do not dispose of battery unit in fire or water. See instruction for disposal in the battery installation instructions."

or



- Replace only with P/N XXXXXX. Use of a different battery could result in ignition or explosion of battery. Order replacement from IBM authorized dealer.

12. Visually check the condition of the battery (if applicable) and ensure the battery has a safety hazard label attached.

13. Machines manufactured May 1986 or later, weighing in excess of 18 Kg. (41.8 lbs), must be labeled with the weight of the system unit.

How to Use this Maintenance Library

This Hardware Maintenance library consists of three major diagnostic tools: a two-part set of diagnostic manuals and Advanced Diagnostics diskettes.

The *Hardware Maintenance Reference* manual describes diagnostic procedures and their use, field replaceable unit (FRU) removal and replacement procedures, and provides general information about the systems. Once the reader has become familiar with its content, the *Hardware Maintenance Reference* manual is no longer required on each service call. It can be kept in a convenient place and used as needed.

The *Hardware Maintenance Service* manual contains all necessary information to diagnose a failing system. Maintenance analysis procedures (MAPs), jumper positions, switch settings, and the parts catalog are in this manual.

Additional options may require updates to the manuals. The *Hardware Maintenance Reference* manual provides an area in the back of the manual to file the updates. Each section of the *Hardware Maintenance Service* manual (with the exception of the MAPs) has a designated update area. The MAPs are sequenced by number and can be updated accordingly.

The Advanced Diagnostics diskette is designed to be used with the MAPs to:

- Test each area of the system
- Isolate problems to specific areas of the system through the use of error codes
- Verify correct installation and operation of the system.

Other functions of the Advanced Diagnostics diskette are described in the *Hardware Maintenance Reference* manual.

Preface

This manual provides the information needed to diagnose and repair IBM Personal Computer products. Readers should have received training on IBM Personal Computer products and be familiar with the Triplet Model 310 Multimeter¹ or equivalent.

The manual is divided into two major categories: system specific information and Personal Computer family diagnostic information.

The system specific information is identified by the system name and organized as follows:

"START" is the entry point for all diagnostic procedures.

"JUMPERS AND SWITCH SETTINGS" contains jumper positions and switch settings for the system unit and supported options.

"PARTS CATALOG" contains illustrations and part numbers of field replaceable units (FRUs).

Step-by-step instructions to isolate failing FRUs are located in the "DIAGNOSTIC MAPs" section.

Related repair information can be found in the *Hardware Maintenance Reference* manual. Operating instructions are in the *Guide to Operations* manual. Detailed hardware and interface information is in the *Technical Reference* manual.

The term "Reference manual" as used in this manual, refers to the *Hardware Maintenance Reference* manual.

START – PC, XT, and Portable PC

Place the hard-tab page labeled "START – PC, XT, and Portable PC" in place of this page, then discard this page.

MAP 0000: Start (PC, XT, Portable PC)

This is the entry point for maintenance analysis procedures (MAPs). The MAPs will help you determine the failing field replaceable unit (FRU).

The Advanced Diagnostics program is intended to test *only* IBM products. Non-IBM products, prototype cards, and modified options can give false errors and invalid system responses.

All voltages in the MAPs are positive unless otherwise specified.

001

Before you begin:

1. Power off the system.
2. Ensure all connectors are installed correctly.
3. Ensure all jumpers and switches are set correctly.

Note: Ensure the Portable Personal Computer 115/230 Vac selector switch is set for the voltage available at the outlet.

- Insert the Advanced Diagnostics diskette into drive A.
- Power on the system.

IS THE POWER SUPPLY FAN RUNNING?

Yes No

002

Go to Step 045 in this MAP.

003

- Listen carefully for any audio responses during the power-on self test (POST).

DID YOU HEAR ONE SHORT BEEP AT THE END OF THE POST?

Yes No

(Step 004 continues)

004

Go to Step 006 in this MAP.

005

Go to Step 010 in this MAP.

006

(From Step 004 in this MAP)

DID THE MESSAGE (RESUME = "F1" KEY) APPEAR ON THE SCREEN?

Yes No

007

Go to Step 052 in this MAP.

008

- Make a note of any error messages on the screen.
- Press the F1 key to continue.

DID THE MESSAGE (RESUME = "F1" KEY) GO AWAY WHEN THE F1 KEY WAS PRESSED?

Yes No

009

Go to "MAP 0300: Keyboard Start."

010

(From Step 005 in this MAP)

DOES THE ADVANCED DIAGNOSTICS MENU APPEAR?

Yes No

011

Go to Step 053 in this MAP.

012

- Select 0 (SYSTEM CHECKOUT).

Note: Depending upon the options installed in the system, questions about attached devices may appear on the screen. Press Y or N as required, then Enter.

(Step 012 continues)

012 (continued)

DOES THE INSTALLED DEVICES MENU APPEAR?

Yes No

013

Go to Step 037 in this MAP.

014

- Compare the list to the options installed *inside* the system.

Note: The Installed Devices list displays only those devices supported by this manual. If a device is missing from the list and is not supported by this manual, press Y (IS THE INSTALLED DEVICES LIST CORRECT?) then Enter to continue the diagnostic tests. Go to Step 025 in this MAP.

DOES THE INSTALLED DEVICES LIST CORRECTLY IDENTIFY THE DEVICES INSTALLED INSIDE THE SYSTEM?

Yes No

015

Go to Step 017 in this MAP.

016

Go to Step 025 in this MAP.

017

(From Step 015 in this MAP)

Follow the instructions on the screen and attempt to correct the Installed Devices list.

Note: A 199 error indicates you answered "No" to the question about the Installed Devices list. Disregard the error.

COULD YOU CORRECT THE INSTALLED DEVICES LIST?

Yes No

(Step 018 continues)

018

Go to Step 020 in this MAP.

019

Go to Step 025 in this MAP.

020

(From Step 018 in this MAP)

IS THE OPTION MISSING FROM THE INSTALLED DEVICES LIST?

Yes No

021

Press Y (IS THE INSTALLED DEVICES LIST CORRECT?) then Enter to continue the diagnostic tests. Go to Step 025 in this MAP.

022

Make sure all switches and jumpers are set correctly for the missing option. Be sure to check the system board switches as well as the option's switches and jumper positions.

ARE THE SWITCHES AND JUMPERS SET CORRECTLY?

Yes No

023

Reset any incorrect jumper or switch settings. Go to Step 001 in this MAP to verify system operation.

024

Go to the appropriate MAP for the missing device.

Note: If you are unable to find the MAP that corresponds to the device, you have an IBM device with its own service manual or a device not supported by IBM diagnostic tests.

025

(From Steps 014, 016, 019, and 021 in this MAP)

Follow the instructions on the screen to run the tests on all devices. Use the (RUN TESTS MULTIPLE TIMES) option.

DID YOU RECEIVE AN ERROR MESSAGE?

Yes No

026

Go to Step 028 in this MAP.

027

Go to the MAP indicated by the error code. For example, if you receive the error code 7XX, go to "MAP 0700: Math Coprocessor."

Note: If you are unable to find the MAP that corresponds to your error code, you have an IBM device with its own service manual or a device not supported by IBM diagnostic tests.

028

(From Step 026 in this MAP)

DID THE SYSTEM CHECKOUT MENU APPEAR AT THE END OF TESTING?

Yes No

029

Go to "MAP 0020: Power Start."

030

DID YOU NOTICE ANY FAILURE SYMPTOMS?

Yes No

031

Go to Step 033 in this MAP.

032

Go to Step 053 in this MAP.

033

(From Step 031 in this MAP)

Sintoma.
DID THE CUSTOMER PROVIDE A SYMPTOM?

Yes No

034

Go to Step 036 in this MAP.

035

Go to the MAP for the suspected failing device.

036

(From Step 034 in this MAP)

The Advanced Diagnostic tests have finished without detecting an error.

- If you are still experiencing a problem:
 - Check all switch settings.
 - Check all jumper positions.
 - Check all cables and connectors for proper installation.
 - Run the Advanced Diagnostic tests on all devices. Use the (RUN TESTS ONE TIME) option. If you receive an error, go to the MAP indicated by the error code. For example, if you receive the error code 7XX, go to "MAP 0700: Math Coprocessor."
- If you are experiencing a problem with a device not supported by this manual, refer to that device's service manual for special testing instructions.
- If you suspect an intermittent problem, start an error log. If you need instructions, refer to the Reference manual.

037

(From Step 013 in this MAP)

DID YOU RECEIVE AN ERROR MESSAGE INDICATING A DISKETTE READ ERROR?

Yes No

038

Go to Step 040 in this MAP.

039

Go to "MAP 0600: Diskette Drive Start."

040

(From Step 038 in this MAP)

IS A MATH COPROCESSOR INSTALLED IN THE SYSTEM?

Yes No

041

Go to "MAP 0300: Keyboard Start."

042

- Power off the system and remove the math coprocessor.
- Power on the system.
- Select 0 (SYSTEM CHECKOUT).

DOES THE INSTALLED DEVICES MENU APPEAR?

Yes No

043

Reinstall the math coprocessor, then go to "MAP 0300: Keyboard Start."

044

- Replace the math coprocessor and the 8088 processor. If that does not correct the problem, replace the system board.

045

(From Step 002 in this MAP)

IS THE POWER CORD PLUGGED INTO A FUNCTIONING, PROPERLY GROUNDED ELECTRICAL OUTLET?

Yes No

046

- Attach the system to a functioning, properly grounded electrical outlet. Return to Step 001 in this MAP to verify system operation.

047

- Power off the system.
- Disconnect the power cord from the electrical outlet then from the system unit.
- Check the system unit power cord for continuity.

DOES THE POWER CORD HAVE CONTINUITY?

Yes No

048

Replace the power cord.

049

- Reconnect the power cord.
- Power on the system.
- Check for a voltage of 2.4 to 5.2 Vdc between pins 1 and 5 (ground) at the system board power supply connector, Figure 1.

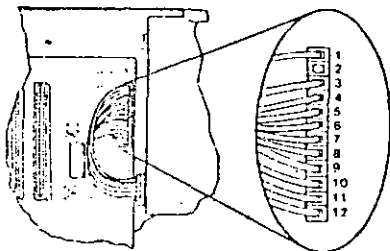


Figure 1. System Board Power Connectors

049 (continued)

IS THE VOLTAGE 2.4 TO 5.2 VDC BETWEEN PINS 1 AND 5?

Yes No

050

Go to "MAP 0020: Power Start."

051

Replace the power supply.

052

(From Step 007 in this MAP)

Refer to the following figure and go to the MAP indicated or take the action described.

Note: If you received an error message and incorrect audio response, use the error message as the POST Error Symptom.

POST Error Symptom:	Action:
No Beep and:	
Blank Display	MAP 0020: Power Start
Unreadable Display	MAP 0020: Power Start
Blinking Cursor	MAP 0020: Power Start
Parity Check Message	MAP 0200: Memory Start
1XX Error	MAP 0100: System Board Start
Machine Functioning Properly	MAP 0020: Power Start
1 Long and 1 Short Beep	Replace System Board
1 Long and 2 Short Beeps	Go to Step 054 in this MAP
1 Long and 3 Short Beeps	Go to Step 054 in this MAP
2 Short Beeps and:	
Blank or Unreadable Display	Go to Step 054 in this MAP
Distorted Image on Display	Go to Step 054 in this MAP
1XX Error	MAP 0100: System Board Start
XXXXX XX 201 Error	MAP 0200: Memory Start
XXXX 201 Error	MAP 0200: Memory Start
301 Error	MAP 0300: Keyboard Start
XX301 Error	MAP 0300: Keyboard Start
601 Error	MAP 0600: Diskette Drive Start
17XX Error	MAP 1700: Fixed Disk Drive Start
30XX Error	MAP 3000: PC Network
31XX Error	MAP 3100: Alt. PC Network
C8000 ROM Error	Replace Fixed Disk Drive Adapter
CC000 ROM Error	MAP 3000: PC Network
ROM Error	Replace System Board
FXXXX ROM Error	Replace System Board
Continuous Beep	MAP 0020: Power Start
Repeating Short Beeps	MAP 0020: Power Start
Any Errors Not Shown Above	Go to Step 062 in this MAP

Figure 2. POST Errors

053

(From Steps 011 and 032 in this MAP)

Refer to the following figure and go to the MAP indicated or take the action described.

Note: If you received an error message and incorrect audio response, use the error message as the symptom.

Symptom:	Action:
Incorrect Memory Size Displayed	MAP 0200: Memory Start
Incorrect Colors on Display	Go to Step 054 in this MAP
No High Intensity on Display	Go to Step 054 in this MAP
Missing, Broken or Incorrect Characters on Display	Go to Step 054 in this MAP
Distorted Image on Display	Go to Step 054 in this MAP
Blank Display	Go to Step 054 in this MAP
Unreadable Display	Go to Step 054 in this MAP
Flashing Cursor Only	Go to Step 057 in this MAP
BASIC Screen Appears	MAP 0600: Diskette Drive Start
Loads Program from Fixed Disk	MAP 0600: Diskette Drive Start
Disk Boot Failure	MAP 0600: Diskette Drive Start
Loads Program from Remote Station	MAP 0600: Diskette Drive Start
PARITY CHECK Error	MAP 0200: Memory Start
Keyboard Problem	MAP 0300: Keyboard Start
Cannot Finish Diagnostic Tests	MAP 0020: Power Start
Printer Problems	Refer to the Service Manual for the Printer
Network Problems	Refer to the Service Manual for the Network

Figure 3. Failure Symptoms

054

comment for
insert
(From Steps 052 and 053 in this MAP)

IS AN ENHANCED GRAPHICS ADAPTER INSTALLED?

Yes No

|
055

Go to the MAP for the failing display adapter.

056

Go to "MAP 2400: Enhanced Graphics Adapter."

057

(From Step 053 in this MAP)

IS A MATH COPROCESSOR INSTALLED?

Yes No

|
058

Go to "MAP 0600: Diskette Drive Start."

059

- Power off the system.
- Remove the math coprocessor from the system board.
- Power on the system.

DID THE FAILING SYMPTOM REMAIN?

Yes No

|
060

Replace the math coprocessor and the 8088 processor.

061

Reinstall the math coprocessor, then go to "MAP 0600: Diskette Drive Start."

107A

062

(From Step 052 in this MAP)

Go to the MAP indicated by the error code. For example, if you receive the error code 7XX, go to "MAP 0700: Math Coprocessor."

Note: If you are unable to find the MAP that corresponds to your error code, you have an IBM device with its own service manual or a device not supported by IBM diagnostic tests.

Jumpers and Switch Settings

Place the hard-tab page labeled "Jumpers and Switch Settings" in place of this page, then discard this page.

JUMPERS AND SWITCH SETTINGS

Option Compatibility	3
BIOS ROM Identification	3
Using the Switch Charts	4
System Board (Diskette Drives, Displays, Coprocessor, and POST Loop)	5
System Board (Memory)	6
Memory Adapter Switch Sets	11
Extender Card Switch Settings	19
Cluster Adapter	20
Station Address	20
Remote Initial Program Load	22
Adapter Number	22
Enhanced Graphics Adapter (EGA)	23
PC Network Adapter	25
Asynchronous Communications Adapter	26
Binary Synchronous Communications (BSC) Adapter	27
Data Acquisition and Control (DAC) Adapter	28
Analog Output Range	28
Analog Input Range	29
Adapter Number	29
Interrupt Request (IRQ) Level	30
General Purpose Interface Bus (GPIB) Adapter	31
Adapter Number	31
Interrupt Request (IRQ) Level	32
Interrupt Acknowledge (INT ACK) Level	33
Direct-Memory Access (DMA) Channel	33
Professional Graphics Controller	34
Voice Communications Adapter	35

Option Compatibility

Certain option adapters conflict when used in the same system. The following adapters should not be installed together in your system unit:

- Synchronous Data Link Control (SDLC) adapter.
- Alternate Binary Synchronous Communications (Alt. BSC) adapter.

BIOS ROM Identification

To determine the date of the BIOS ROM module, run the following BASIC program. Type the program exactly as shown.

```
10 DEF SEG=&HF000
20 FOR X=&HFFF5 TO &HFFFF
30 PRINT CHR$(PEEK(X));
40 NEXT
RUN
```

The date that is displayed is the date of your BIOS ROM module.


Using the Switch Charts

The following legend applies to the charts in this section.

Symbol	Meaning
.	Not Used by this Application
↑	On/Closed Position Of A Switch
↓	Off/Open Position Of A Switch
N/A	Not Allowed Or Not Applicable

Note: For some options, the customer must supply information for correct setting of jumpers or switches.

To set a rocker switch, press the rocker down to the desired position; to set a slide switch, slide the lug of the switch to the desired position.

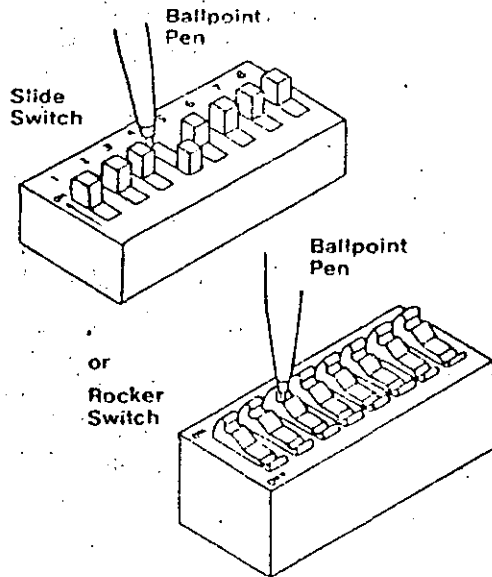

System Board (Diskette Drives, Displays, Coprocessor, and POST Loop)

Function	System Board Switches		
	PC		PCXT & Portable
	Sw. Block 1	Sw. Block 2	Sw. Block 1
	12345678	12345678	12345678
0-Diskette Drives	↑ ↑	N/A
1-Diskette Drive	↑ ↑ ↑
2-Diskette Drives	↑ ↑ ↑
3-Diskette Drives	N/A	N/A ↑
4-Diskette Drives	N/A	N/A ↑
No Display Adapter ↑ . . .	N/A ↑ . . .
Enhanced Graphics Adapter (Primary: See Note 1) ↑ . . .	N/A ↑ . . .
Color/Graphics Adapter (40 X 25 Primary) ↑ . . .	N/A ↑ . . .
Color/Graphics Adapter (80 X 25 Primary) ↑ . . .	N/A ↑ . . .
Professional Graphics Controller (Primary)	N/A	N/A ↑ . . .
Monochrome/Printer Adapter (Primary: See Note 2) ↑ . . .	N/A ↑ . . .
Math Coprocessor Installed	↓	N/A	↓
Math Coprocessor Not Installed	↑	N/A	↑
POST Loop (Allows Continuous Running)	N/A	N/A	↑
No POST Loop (Normal Operation)	N/A	N/A	↓

Notes:
 1) If the Enhanced Graphics Adapter (EGA) is installed with another display adapter, set the system board switches as shown for the EGA.
 2) The IBM Monochrome Display and Printer Adapter is not supported in the Portable Personal Computer.

System Board (Memory)

Portable Personal Computer					
Total Memory	System Board Switch Settings	256K Card Or 64/256K Option With 256K (See Note)	64/256K Option With 192K (See Note)	64/256K Option With 128K (See Note)	64/256K Option With 64K (See Note)
		12345678	12345678	12345678	12345678
256K	** *****	N/A	N/A	N/A	N/A
320K	** *****	N/A	N/A	N/A	
384K	** *****	N/A	N/A		N/A
448K	** *****	N/A		N/A	N/A
512K	** *****		N/A	N/A	N/A
576K	** *****		N/A	N/A	
640K	** *****		N/A		N/A

Note: The 54/256KB Memory Expansion Option and the 256KB Memory Expansion Option are the only memory options supported in the IBM Portable Personal Computer.

To use the following chart, first find the column under "System Board Type" that matches your system. Follow this column down to the switch settings for the total amount of memory in your system. Set the system board switches to match those in the chart. Then go to the "Switch Set" listed and set the switches on the memory adapters in your system. These sets of memory adapter switch settings start on page 11.

Note: If memory above 544K is to be installed on a 16/64KB system board, the BIOS ROM must be dated 10/27/82 or later. See "BIOS ROM Identification."

Total Memory	System Board Switch-Settings & Adapter Switch Sets	System Board Type (Note)		
		PC		PC XT
		16K-64K 12345678	64K-256K 12345678	64K-256K 12345678
16K	Switch 1	** *****	N/A	N/A
	Switch 2		N/A	N/A
	Set	N/A	N/A	N/A
32K	Switch 1	** *****	N/A	N/A
	Switch 2		N/A	N/A
	Set	N/A	N/A	N/A
48K	Switch 1	** *****	N/A	N/A
	Switch 2		N/A	N/A
	Set	N/A	N/A	N/A
64K	Switch 1	** *****	** *****	N/A
	Switch 2			N/A
	Set	N/A	N/A	N/A

Note: The system board's identifier is located on its left edge.


(Part 1 of 4)

1111

Enhanced Graphics Adapter (EG)

Warning: Damage to the graphics adapter, the display, or both may result if these jumpers are not in the correct position.

Total Memory	System Board Switch Settings & Adapter Switch Sets	System Board Type		
		PC		PC XT
		16K-64K	64K-256K	64K-256K
96K	Switch 1	** ****	N/A	N/A
	Switch 2		N/A	N/A
	Set	1	N/A	N/A
128K	Switch 1	** ****	** ****	** ****
	Switch 2			N/A
	Set	3	N/A	N/A
160K	Switch 1	** ****	N/A	N/A
	Switch 2		N/A	N/A
	Set	5	N/A	N/A
192K	Switch 1	** ****	** ****	** ****
	Switch 2			N/A
	Set	7	N/A	N/A
224K	Switch 1	** ****	N/A	N/A
	Switch 2		N/A	N/A
	Set	9	N/A	N/A
256K	Switch 1	** ****	** ****	** ****
	Switch 2			N/A
	Set	11	N/A	N/A
288K	Switch 1	** ****	** ****	** ****
	Switch 2			N/A
	Set	13	2	2

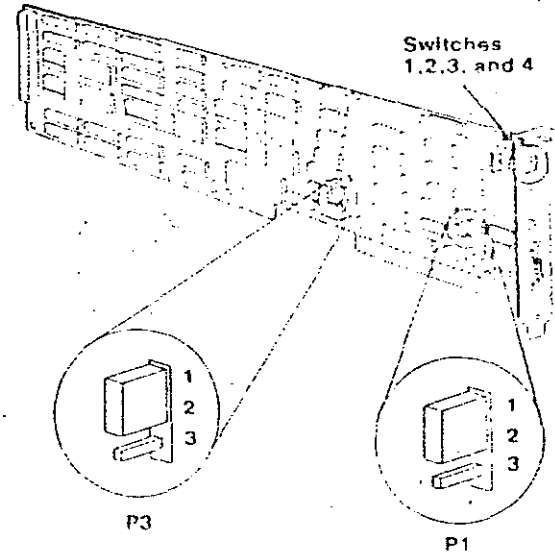

Type of Display	P1	P3
IBM Color Display or IBM Monochrome Display	2 and 3	1 and 2
IBM Enhanced Color Display	1 and 2	1 and 2

(Part 2 of 4)

If an EGA is the only display adapter installed, or an EGA and a Monochrome Display and Printer Adapter are installed in the system, refer to Figure 1 to set the EGA switches.

If an EGA is installed with a Color/Graphics Monitor Adapter, refer to Figure 2 to set the EGA Switches.

Type of Display Attached to the Enhanced Graphics Adapter	EGA as Primary	EGA as Secondary
	Switch 1234	Switch 1234
No Display	N/A	↑↑↑↑
Monochrome Display	↓↑↓↑	N/A
Color Display (40 X 25 Model)	↑↑↑↑	↑↑↑↑
Color Display (80 X 25 Model)	↓↑↓↑	↓↑↓↑
Enhanced Color Display (Normal Color Model)	↑↑↑↓	↓↑↓↑
Enhanced Color Display (Enhanced Color Model)	↓↑↓↑	↓↑↓↑

Figure 1

Type of Display Attached to the Color/Graphics Monitor Adapter	EGA as Primary	EGA as Secondary
	Switch 1234	Switch 1234
Color Display (40 X 25 Model)	↑↑↑↓	↑↑↑↑
Color Display (80 X 25 Model)	↓↑↓↑	↓↑↓↑
No Display (80 X 25 Model)	↓↑↓↑	N/A

Figure 2


Notes:

1. Mode selection can be changed by programming.
2. A maximum of two displays can be attached to the system, one color display and one monochrome display.

PC Network Adapter

Jumper Position (See figure)	Function
W1	Automatic Remote Program Load (RPL)
W2	Not Used
W3	Sets Adapter to use Interrupt Level 2
W4	Sets Adapter to use Interrupt Level 3
W5 & W7	Sets Adapter as Alternate Adapter
W6	Sets Adapter as Primary Adapter
W8	Enables ROM on Adapter (See Note)

Note: Do not enable the ROM on more than one adapter.

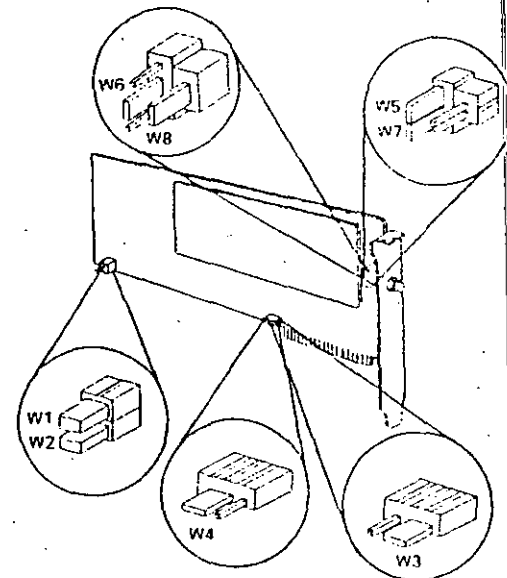

PARTS CATALOG

Parts Catalog

Place the hard-tab page labeled "Parts Catalog" in place of this page, then discard this page.

Limited Warranty - IBM Service Parts	2
How To Use This Parts Catalog	3
Visual Index	5
Assembly 1. System Unit - Exterior (5150)	7
Assembly 2. System Unit - Exterior (5160)	8
Assembly 3. System Unit - Exterior (5155)	9
Assembly 4. System Unit - Interior (5150)	10
Assembly 5. System Unit - Interior (5160)	12
Assembly 6. System Unit - Interior (5155)	14
Assembly 7. Full High Diskette Drive Type 1	16
Assembly 8. Full High Diskette Drive Type 1	18
Assembly 9. Full High Diskette Drive Type 2	20
Assembly 10. Full High Diskette Drive Type 2	22
Assembly 11. Full High Diskette Drive Type 3	24
Assembly 12. Full High Diskette Drive Type 3	26
Assembly 13. Diskette Drive Portable PC	28
Assembly 14. Fixed Disk Drive	29
Assembly 15. Internal Options and Adapters	30
Assembly 16. Expansion Unit - Exterior (5161)	33
Assembly 17. Expansion Unit - Interior (5161)	34
Assembly 18. Monochrome Display (5151)	36
Assembly 19. Color Display (5153)	38
Assembly 20. Enhanced Color Display (5154)	40
Assembly 21. Professional Graphics Display (5175)	42
Assembly 22. Keyboard (83-Key for 5150 and 5160)	44
Assembly 23. Keyboard (83-Key for 5155)	45
Assembly 24. Keybutton Kits (83-Key)	46
Assembly 25. Keybuttons (83-Key)	48
Assembly 26. Power Cords	50
Assembly 27. Miscellaneous	52

The warranty terms and conditions applicable in the country of purchase (except for the United States and Puerto Rico) in respect of an IBM Personal Computer product are available from the supplier.

Limited Warranty - IBM Service Parts

(Applies to United States and Puerto Rico)

The International Business Machines Corporation warrants that each IBM Service Part will be free from defects in material and workmanship under conditions of normal use for a period of 90 days from the date of purchase from IBM or an Authorized IBM Personal Computer Dealer. Service Parts will be either reconditioned or new parts. Should an IBM Service Part fail to be free from defects in materials or workmanship during the 90-day warranty period, IBM will, at its option, repair or replace this Service Part at no charge in the United States or Puerto Rico. All replaced Service Parts will become the property of IBM. This limited warranty does not include service to repair damage to the Service Part resulting from accident, disaster, misuse, abuse, or non-IBM modification of the Product.

Limited Warranty service may be obtained by delivering the defective Service Part during the 90-day warranty period to an Authorized the IBM Personal Computer Dealer, or any IBM Service Exchange Center in the United States or Puerto Rico. A dated proof of purchase from IBM or an Authorized IBM Personal Computer Dealer must accompany the claim. Contact IBM by writing to IBM National Parts Center, P.O. Box 481, Greencastle, Indiana 46135 for further information.

ALL EXPRESS OR IMPLIED WARRANTIES FOR THIS SERVICE PART, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO A PERIOD OF 90 DAYS FROM THE DATE OF PURCHASE, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

IF THIS SERVICE PART IS DEFECTIVE IN MATERIALS OR WORKMANSHIP UNDER CONDITIONS OF NORMAL USE, AS WARRANTED ABOVE, YOUR SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. IN NO EVENT WILL IBM BE LIABLE TO YOU FOR ANY DAMAGES, INCLUDING LOST PROFITS, LOST SAVINGS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR INABILITY TO USE SUCH PRODUCT, EVEN IF IBM OR AN AUTHORIZED IBM PERSONAL COMPUTER DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY OTHER PARTY.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

How To Use This Parts Catalog

1. **Similar Parts** - If two parts are similar, they may be listed in the same list. Similar parts are referred to by one index number but are distinguished by the part number and description.
2. **NS** - When this indication appears in the ASM - INDEX column, it denotes a part not shown in the assembly. This designation is generally used for miscellaneous parts packets.
3. **R** - This entry in the Units column indicates the part has a restricted availability.
4. **AR** - As Required (AR) in the Units column denotes that the units per assembly may vary based upon system configuration.
5. **Indenture** - The indenture is marked by a series of dots located before the part description. The indenture indicates the relationships of a part to the next higher assembly.

Example of a Parts List

ASM - INDEX	PART NUMBER	UNITS	DESCRIPTION
1 -	1234567		Main Assembly
- 1	1234568	1	• Subassembly
- 2	1234569	1	• Subassembly, US
- 2	1234566	1	• Subassembly, Non-US
- 3	1234565	R	•• Detailed Part Restricted
- 4	1234564	1	• Subassembly
			•• Detailed Part
			•• Detailed Part
			•• Detailed Part
- NS	1234563	1	• Subassembly Not Shown
			•• Detailed Part
			•• Detailed Part
- 5	1234562	AR	• Subassembly - Use as Required

Visual Index

Desktop Assembly 16, 20, and 21
Pages 16, 20, and 21

Keyboard (83-Key for 5155)
Assembly 22, 24, and 25
Pages 22, 24, 25 and 26

Keyboard (83-Key for 5155)
Assembly 22, 24, and 25
Pages 22, 24, 25 and 26

Power Cord
Assembly 24
Page 24

1. Turn to the visual index and locate, by illustration, the assembly containing the part.

Assembly 24. Keyboard (83-Key for 5155)

3	8654425	1	Top Cover
	8654425		


March 1986 Product, XI, Portable PC - 1

1. Turn to the visual index and locate, by illustration, the assembly containing the part.


2. Turn to the page for that assembly and locate the part visually.

3. Using the index number shown with the part, refer to the accompanying listing to obtain the part number.

Visual Index

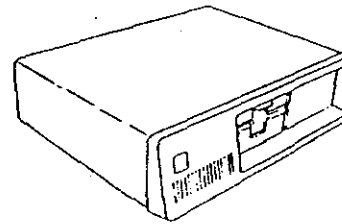

System Unit (5150)
Assembly 1 and 4
Pages 7 and 10

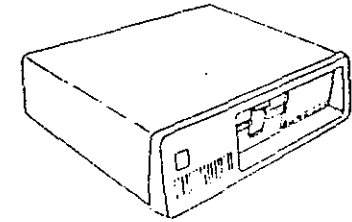

System Unit (5160)
Assembly 2 and 5
Pages 8 and 12



System Unit (5155)
Assembly 3 and 6
Pages 9 and 14




Full-High Diskette Drives
Assembly 7, 8, 9, 10, 11, and 12
Pages 16 through 26




Diskette Drive Portable PC
Assembly 13
Page 28




Fixed Disk Drive
Assembly 14
Page 29

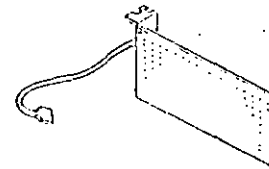


Internal Options and Adapters
Assembly 15
Page 30

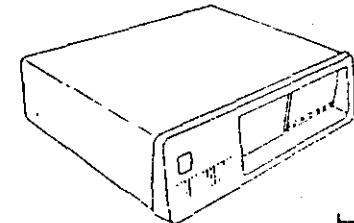


Expansion Unit (5161)
Assembly 16 and 17
Pages 33 and 34

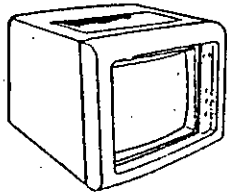

Displays
 Assembly 18, 19, 20, and 21
 Pages 36, 38, 40, and 42

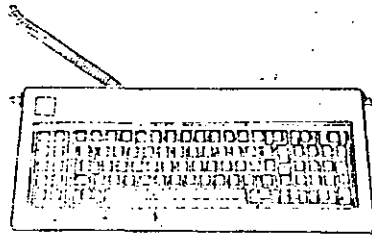

Keyboard (83-Key 5150 & 5160)
 Assembly 22, 24, and 25
 Pages 44, 46, 47 and 48

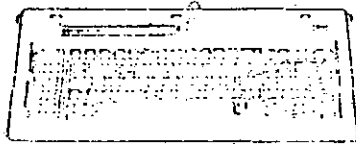


Keyboard (83-Key 5155)
 Assembly 23, 24 and 25
 Pages 45 through 48



Power Cords
 Assembly 26
 Page 50

Note: Miscellaneous Hardware and wrap plugs are listed on page 53.


Assembly 3. System Unit - Exterior (5155)

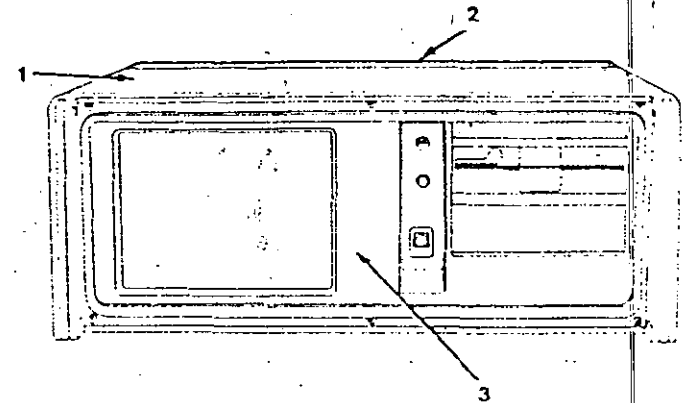

ASH - INDEX	PART NUMBER	UNITS	DESCRIPTION
3 -	8654414		Cover Assembly
- 1			• Cover
- 2			• Handle Assembly
- 3	8654413	1	• Panel Assembly
- NS	8654440	1	• Panel Assembly Kit
			•• Panel Assembly (Rear Access)
			•• Panel Retainer Kit
- NS	8654439	1	• Cover and Handle Hardware Kit
			•• Foam Pad
			•• Washer, Friction (Qty 2)
			•• Nut, Stud (Qty 2)
			•• Screw, Shoulder M4 (Qty 2)
- NS	8654445	R	• IBM Label
- NS	8654418	1	Carrying Case
- NS		1	Power Cord (See Power Cord Parts List)

Assembly 4. System Unit - Interior (5150)

System Unit - Interior (5150)

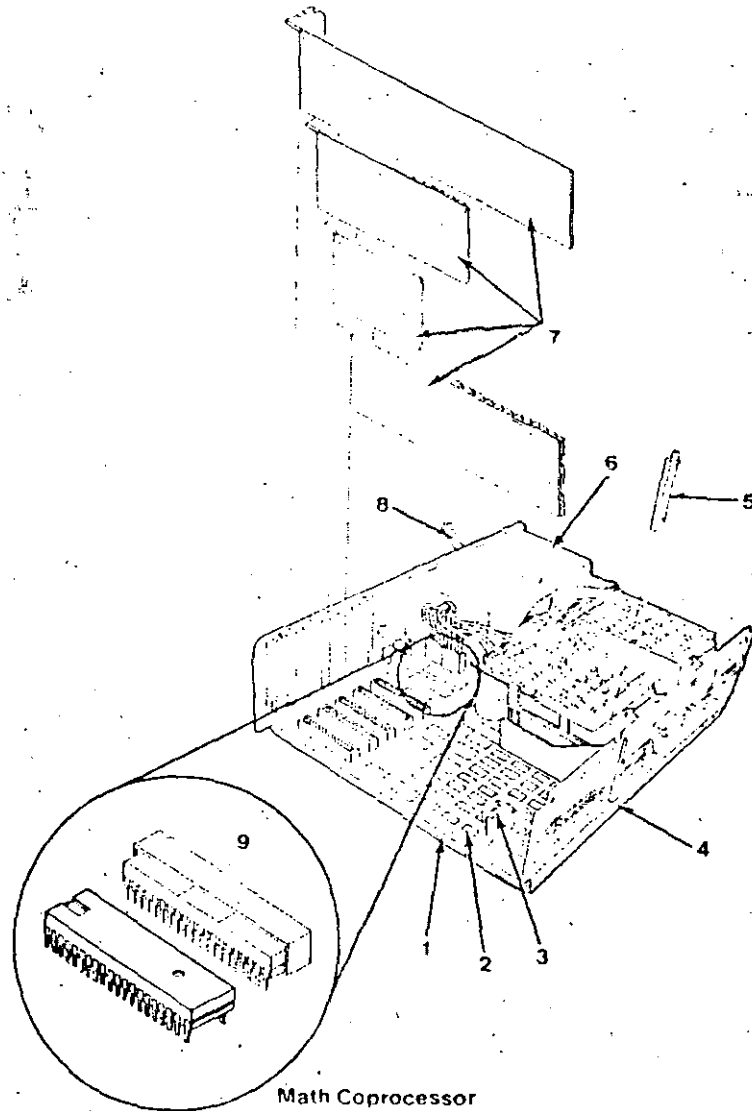


ASH - INDEX	PART NUMBER	UNITS	DESCRIPTION
6 - 1	8529254	1	System Board 64KB-256KB CPU (Populated to 128K)
- NS	8529211	AR	• 64KB Memory Module
- 2	8529143	1	Speaker and Cable
- 3	8654452	1	Cable Raceway
- 4	8654427	1	Cable, Keyboard, Internal System
- 5		1	Power Cord (See Power Cord Parts List)
- 6	8654417	1	Power Supply (Includes Fan and Information Label)
- NS	8654444	1	• Fan, Power Supply
- 7			See Internal Options and Adapters
- 8	8654415	1	Shield
- 9	8654419	1	Display Assembly
	8285975	R	• High Voltage Transformer
	8285976	R	• Yoke
- 10	8654451	1	Shield, Keyboard, Internal System
- 11	8285977	R	Brightness/Contrast Assembly
- 12	8654421	1	Diskette Ground Bracket
- NS	8654441	1	Display Assembly Hardware Kit • Knob, Brightness • Knob, Contrast
- NS	8654438	1	Front Panel Hardware Kit • Foot Assembly (Qty 2) • Panel, Bumper • Screw, Plastite (Qty 2) • Panel, Keyboard Connector • Blank Insert, Diskette Drive • Screw, attach Shroud M-4 (Qty 6) • Strip, Wear, Front Panel (Qty 2) • Screw, Controls to Panel (Qty 2)
- NS	8654442	1	System Hardware Kit • System Board Supports (Qty 6) • Screws, Skt. Head 3.5mm x 8 (Qty 16) • Bumper, Card (Qty 3) • Screw, Plastite 8-18 (Qty 6) • Mounting Screws, Diskette (Qty 4) • Attachment Card, Blank Insert • Glide, Chassis (Qty 2) • Bracket, System Board Ground • Spacer, Diskette Drive (Qty 3) • Screw, Special Bristol (Qty 7)

Assembly 7. Full High Diskette Drive Type 1

Diskette Drive - Type 1

Use only in drives that have an A, B, or nothing in front of the serial number. The serial number is visible from the top of the drive.

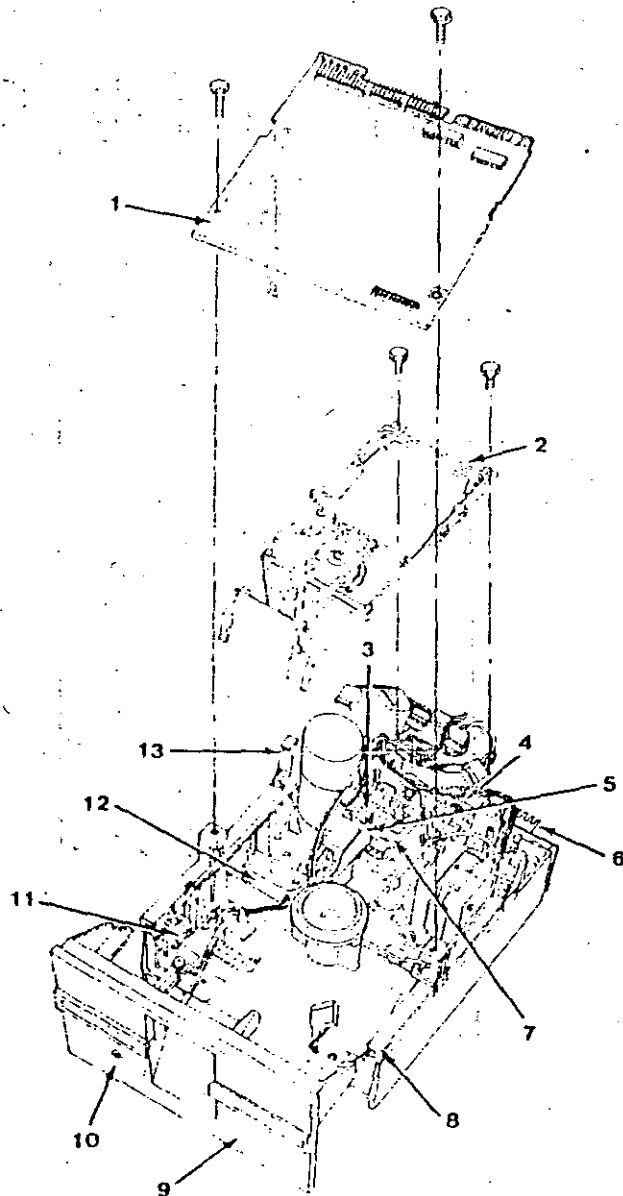

ASH - INDEX	PART NUMBER	UNITS	DESCRIPTION
7 -	8529153		Diskette Drive Assembly, Single-Sided
-	8529206		Diskette Drive Assembly, Double-Sided
- 1	8529226	I	• Logic Board with Shield
- 2	8529267	I	• Cone Lever Assembly • Cone Lever Arm • Cone Assembly • Mounting Clips • Latch Assembly
- 3	8529224	R	• Track 0 Switch
- 4	8529266	R	• Track 0 Stop
- 5	8529255	R	• SSR Upper Arm
- 6	8529256	I	• Servo Board
- 7	8529264	R	• Module SSR/150KB
- 7	8529210	R	• Module DSR/320KB
- 8	8529261	I	• Guide, Right
- 9	8529293	I	• Front Panel
- 10	8529258	I	• LED Assembly
- 11	8529225	I	• Write Protect Switch
- 12	8529257	R	• Index Assembly
- 13	8529262	I	• Guide, Left

004
Go to Step 006 in this MAP.

005
Go to Step 034 in this MAP.

006
(From Step 004 in this MAP)
DID YOU RECEIVE A 16X ERROR?

Yes No
|
|
007
Go to Step 011 in this MAP.

008
DID YOU RECEIVE A 161 ERROR?

Yes No
|
|
009
Go to Step 016 in this MAP.

010
Go to "MAP 0100: System Board Start."

011
(From Step 007 in this MAP)
DID THE MESSAGE (RESUME = "F1" KEY) APPEAR ON THE SCREEN?

Yes No
|
|
012
Go to Step 073 in this MAP.

013.
- Make a note of any error messages on the screen.
- Press the F1 key to continue.

DID THE MESSAGE (RESUME = "F1" KEY) GO AWAY WHEN THE F1 KEY WAS PRESSED?

Yes No
|
|
(Step 014 continues)

073
(From Step 012 in this MAP)
Find your error in the following figure and take the action indicated.

Note: If an error message and incorrect audio response occur, take the action indicated for the error message.

POST Error:	Action:
No Beep and:	
Blank Display.....	MAP 0020: Power Start
Blinking Cursor.....	MAP 0020: Power Start
Unreadable Display.....	MAP 0020: Power Start
Machine Functioning Properly.....	MAP 0020: Power Start
1XX Error.....	MAP 0100: System Board Start
1 Long and 1 Short Beep.....	Replace System Board
1 Long and 2 Short Beeps.....	Go to Step 075 in this MAP
1 Long and 3 Short Beeps.....	Go to Step 075 in this MAP
2 Short Beeps and:	
Blank or Unreadable Display.....	Go to Step 075 in this MAP
Distorted Display Image.....	Go to Step 075 in this MAP
1XX Error.....	MAP 0100: System Board Start
XXXXXX XXXX 201 Error.....	MAP 0200: Memory Start
30X Error.....	MAP 0300: Keyboard Start
XX30X Error.....	MAP 0300: Keyboard Start
001 Error.....	MAP 0500: Diskette Drive Start
17XX Error.....	MAP 1700: Fixed Disk Drive Start
30XX Error.....	MAP 3000: PC Network
31XX Error.....	MAP 3100: All PC Network
C8000 ROM Error.....	Replace Fixed Disk Drive Adaptor
IO ROM CC0000.....	MAP 3000: PC Network
ROM Error.....	Replace System Board
IO ROM XXXXXX (IO Adapter Failure).....	MAP 0020: Power Start
Continuous Beep.....	MAP 0020: Power Start
Repeating Short Beeps.....	MAP 0020: Power Start
Any Errors Not Shown Above.....	Go to Step 083 in this MAP

Figure 2. POST Errors

074

(From Steps 032, 035, and 056 in this MAP)

Find your error in the following figure and take the action indicated.

Symptom:	Action:
Incorrect Memory Size Displayed During the POST	MAP 0200: Memory Start
Display Problems:	
Incorrect Colors	Go to Step 075 in this MAP
No High Intensity	Go to Step 075 in this MAP
Missing, Broken, or Incorrect Characters	Go to Step 075 in this MAP
Blank Display (Dark)	Go to Step 075 in this MAP
Blank Display (Bright)	Go to Step 075 in this MAP
Distorted Image	Go to Step 075 in this MAP
Unreadable Display	Go to Step 075 in this MAP
Other Display Problems	Go to Step 075 in this MAP
Flashing Cursor Only	Go to Step 078 in this MAP
BASIC Screen Appears	MAP 0600: Diskette Drive Start
Loads Program from Fixed Disk	MAP 0600: Diskette Drive Start
Loads Program from Remote Station	MAP 0600: Diskette Drive Start
Diskette Boot Failure	MAP 0600: Diskette Drive Start
PARITY CHECK	MAP 0200: Memory Start
Keyboard Problem	MAP 0300: Keyboard Start
Cannot Finish Diagnostic Tests	MAP 0020: Power Start
Printer Problems	Refer to the Service Manual for the Printer.
Network Problems	Refer to the Service Manual for the Network.

Figure 3. Failure Symptoms

075

(From Steps 073 and 074 in this MAP)

IS AN ENHANCED GRAPHICS ADAPTER INSTALLED?

Yes No

076

Refer to the MAP for the failing display adapter.

077

Go to "MAP 2400: Enhanced Graphics Adapter."

078

(From Step 074 in this MAP)

IS A MATH COPROCESSOR INSTALLED?

Yes No

079

Go to "MAP 0600: Diskette Drive Start."

080

- Power off the system.
- Remove the math coprocessor from the system board.
- Power on the system.

DID THE FAILING SYMPTOM REMAIN?

Yes No

081

Replace the math coprocessor.

082

Reinstall the math coprocessor, then go to "MAP 0600: Diskette Drive Start."

083

(From Step 073 in this MAP)

Go to the MAP indicated by the error code. For example, if you receive the error code 7XX, go to "MAP 0700: Math Coprocessor."

Note: If you are unable to find the MAP that corresponds to your error code, you have an IBM device with its own service manual or a device not supported by IBM diagnostic tests.

Jumpers and Switch Settings

Place the hard-tab page labeled "Jumpers and Switch Settings" in place of this page, then discard this page.

JUMPERS AND SWITCH SETTINGS

System Setup	3
Option Compatibility	5
BIOS ROM Identification	5
Terminating Resistors and Switches	6
Diskette Drive	6
Fixed Disk Drive	7
Power Supply Voltage Selector Switch	8
Using the Switch Charts	9
System-Board Display Switch	10
Memory Expansion Options	11
Base Memory	11
Expansion Memory	11
Cluster Adapter	12
Station Address	12
Remote Initial Program Load	14
Adapter Number	14
Enhanced Graphics Adapter (EGA)	15
PC Network Adapter	17
Serial/Parallel Adapter	18
Binary Synchronous Communications (BSC) Adapter	19
Data Acquisition and Control (DAC) Adapter	20
Analog Output Range	20
Analog Input Range	21
Adapter Number	21
Interrupt Request (IRQ) Level	22
General Purpose Interface Bus (GPIB) Adapter	23
Adapter Number	23
Interrupt Request (IRQ) Level	24
Interrupt Acknowledge (INT ACK) Level	25
Direct-Memory Access (DMA) Channel	25
Professional Graphics Controller	26
Voice Communications Adapter	27

System Setup

The Setup program is on the Advanced Diagnostics diskette. You need to know what options are installed in the system unit to run the Setup program.

1. Make a list of the option adapters installed in the system.
2. Determine the type of drives installed.
 - Fixed Disk Drive: An identification label is on the front of the drive.
 - Diskette Drive: The bezel of a double-sided (360K) diskette drive has an asterisk; the bezel of a high-capacity (1.2M) diskette drive is not marked.
3. Ensure that all jumpers and switches are set correctly.

Note: If you receive an error code, troubleshoot any error indications other than 16X first. If the only error code you receive is 16X, and you cannot correct the Setup program using the instructions on the following page, go to "MAP 0000: Start (AT)."

System Setup

1. Insert the Advanced Diagnostics diskette into diskette drive A.
2. Power on the system.
3. When the Advanced Diagnostics menu appears, select option 4 (SETUP) and verify that the options are correctly set.

The Setup program will prompt you for the following information:

Time	Set or change the time.
Date	Set or change the date.
Diskette Drives	Select the number and type (high capacity or double sided) installed.
Fixed Disk Drives	Select the number and type of drives installed.
Memory	Select the amount of base and expansion memory installed.
Display	Set the primary display if two display adapters are installed. Select the mode (40 or 80 column) if a color display is installed.

Option Compatibility

Certain option adapters conflict with each other when used in the same system. The following adapters should not be installed together in the system unit:

- Synchronous Data Link Control (SDLC) Adapter
- Alternate Binary Synchronous Communications (Alt. BSC) Adapter.

BIOS ROM Identification

To determine the date of the BIOS ROM module, run the following BASIC program. Type the program exactly as shown.

```
10 DEF SEG=&HF000
20 FOR X=&HFFF5 TO &HFFFF
30 PRINT CHR$(PEEK(X));
40 NEXT
RUN
```

The date that is displayed is the date of your BIOS ROM module.


Terminating Resistors and Switches

Diskette Drive

A diskette drive may have a terminating resistor or terminating switch.

- **Terminating Resistor** - A terminating resistor must be installed in diskette drive A. Diskette drive B should not have a terminating resistor installed.
- **Terminating Switch** - If a diskette drive is equipped with a terminating switch instead of the terminating resistor, set all switches on diskette drive A to the On position. Set all switches on diskette drive B to the Off position.


Note: The terminating resistor may appear in a different location on the drive. If so, an identifying label will be attached to the terminating resistor.

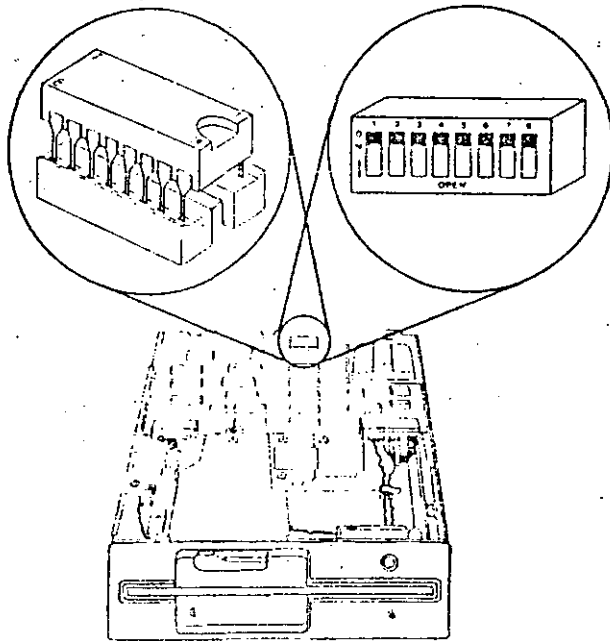

Fixed Disk Drive

- The terminating resistor must be installed on fixed disk drive C.
- In a system unit with two fixed disk drives, remove the terminating resistor from fixed disk drive D.


Note: The terminating resistor may appear in a different location on the drive. If so, an identifying label will be attached to the terminating resistor.

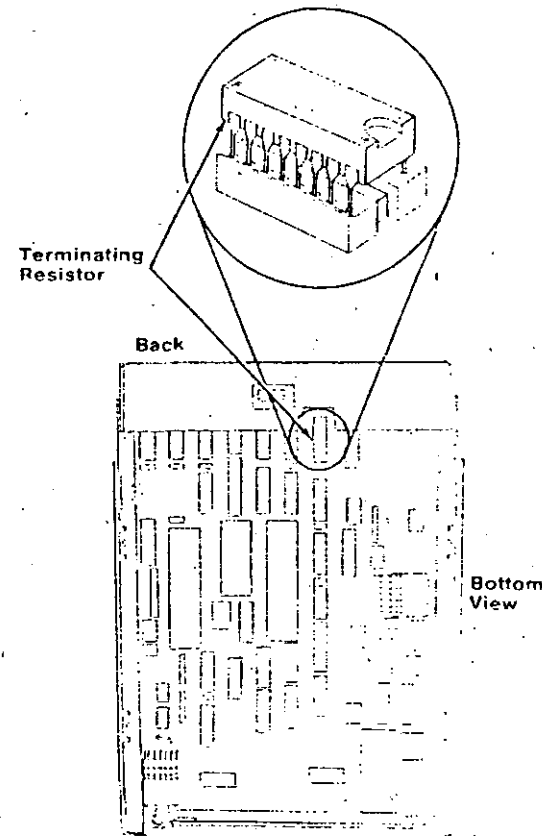

Power Supply Voltage Selector Switch

The voltage selector switch is located at the rear of the system unit power supply. It must be set for the voltage present at the electrical outlet.

Switch Position	Voltage Range
115 Vac	100 to 125 Vac
230 Vac	200 to 240 Vac

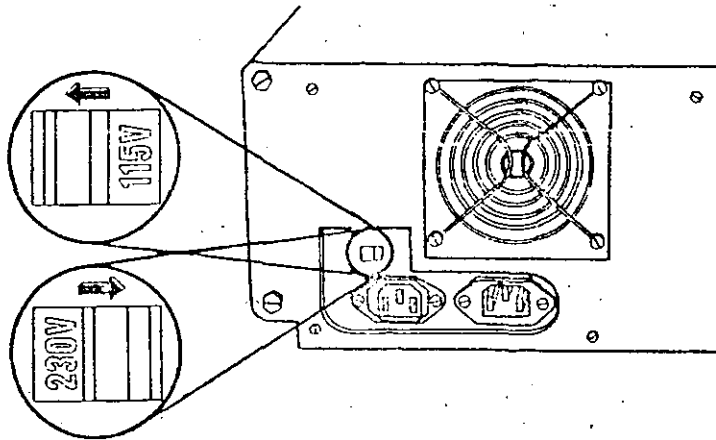


Using the Switch Charts

The following legend applies to the charts in this section.

Symbol	Meaning
.	Not Used by this Application
↑	On/Closed Position of a Switch
↓	Off/Open Position of a Switch
N/A	Not Allowed Or Not Applicable

Note: For some options, the customer must supply information for correct setting of jumpers or switches.

To set a rocker switch, press the rocker down to the desired position; to set a slide switch, slide the lug of the switch to the desired position.

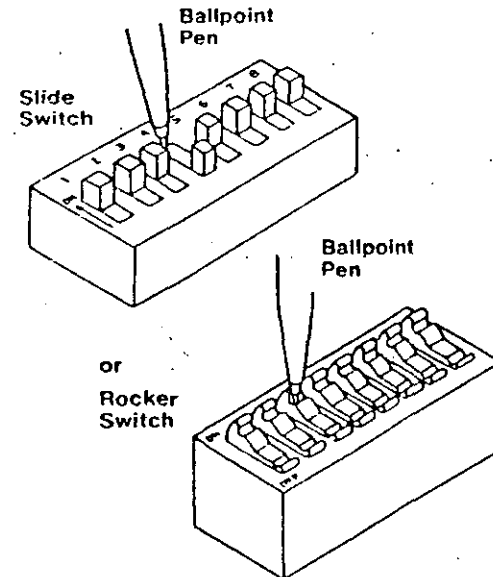


System-Board Display Switch

If your primary display adapter is a:



- Monochrome Display and Printer Adapter - Set the display switch to the rear of the system.
- Color display adapter - Set the display switch to the front of the system.

Monochrome Display

Color Display

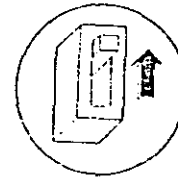

Primary Display Switch

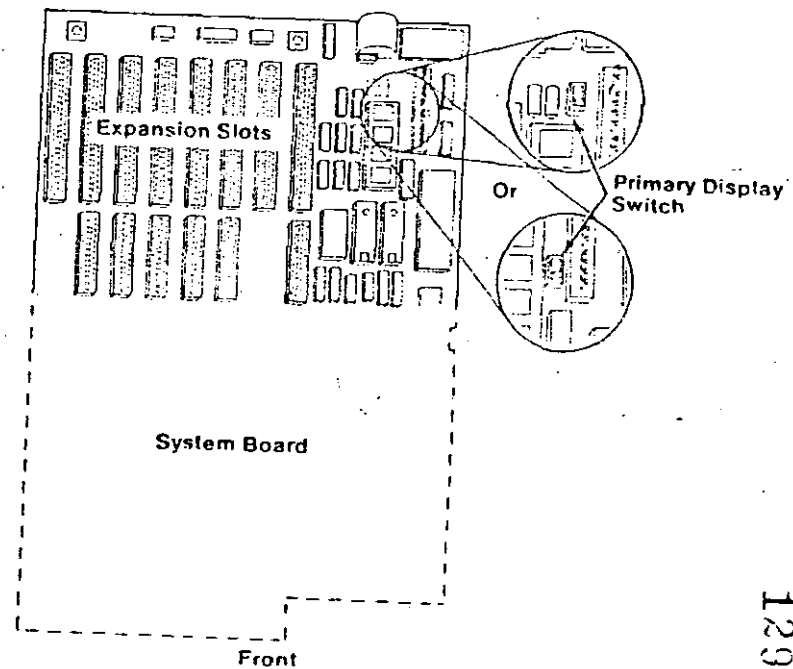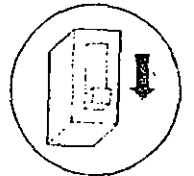

DIAGNOSTIC MAPs

DIAGNOSTIC MAPs

Place the hard-tab page labeled "DIAGNOSTIC MAPs" in place of this page, then discard this page.

MAP 0020: Power Start	0020-1
MAP 0020: Power (PC)	0020-1
MAP 0020: Power (AT)	0020-1
MAP 0100: System Board Start	0100-1
MAP 0100: System Board (PC)	0100-1
MAP 0100: System Board (AT)	0100-1
MAP 0200: Memory Start	0200-1
MAP 0200: Memory (PC)	0200-1
MAP 0200: Memory (XT)	0200-1
MAP 0200: PC Family Expansion Memory	0200-1
MAP 0200: Memory (AT)	0200-1
MAP 0300: Keyboard Start	0300-1
MAP 0300: Keyboard (PC)	0300-1
MAP 0300: Keyboard (AT)	0300-1
MAP 0400: Monochrome Display and Printer Adapter	0400-1
MAP 0500: Color/Graphics Monitor Adapter ..	0500-1
MAP 0600: Diskette Drive Start	0600-1
MAP 0600: Full-High Diskette Drive	0600-1
MAP 0600: Diskette Drive (Portable PC)	0600-1
MAP 0600: Diskette Drive (AT)	0600-1
MAP 0700: Math Coprocessor	0700-1
MAP 0900: Parallel Port Start	0900-1
MAP 0900: Printer Adapter	0900-1
MAP 0900: Serial/Parallel Adapter - Parallel Port	0900-1
MAP 1000: Alternate Serial/Parallel Adapter - Parallel Port	1000-1
MAP 1100: Serial Port Start	1100-1
MAP 1100: Asynchronous Communications Adapter	1100-1
MAP 1100: Serial/Parallel Adapter - Serial Port	1100-1
MAP 1200: Alternate Serial Port Start	1200-1
MAP 1200: Alternate Asynchronous Communications Adapter	1200-1
MAP 1200: Alternate Serial/Parallel Adapter - Serial Port	1200-1
MAP 1300: Game Control Adapter	1300-1

MAP 0020: Power Start

Symptom Explanation	Conditions That Could Cause This Symptom
You have entered this MAP because you were unable to complete the POST, you have been directed here from another MAP, or you suspect a power problem.	<ul style="list-style-type: none"> • The power supply is failing. • A diskette drive is failing. • A fixed disk drive is failing. • An option adapter is failing. • The system board is failing. • The math coprocessor is failing. • The speaker is failing.

001
Find your system type in the following figure and go to the MAP indicated.

System Type	MAP
Personal Computer.....	MAP 0020: Power (PC)
Personal Computer XT.....	MAP 0020: Power (PC)
Portable PC.....	MAP 0020: Power (PC)
Personal Computer AT.....	MAP 0020: Power (AT)

Figure 1. System Identification

MAP 0020: Power (PC)

Symptom Explanation	Conditions That Could Cause This Symptom
You have entered this MAP because you were unable to complete the POST, you have been directed here from another MAP, or you suspect a power problem.	<ul style="list-style-type: none"> • The power supply is failing. • A diskette drive is failing. • A fixed disk drive is failing. • An option adapter is failing. • The system board is failing. • The math coprocessor is failing. • The speaker is failing.

- 001**
- Power off the system.
 - Unplug the power cord of the system unit (and expansion unit, if attached) from the electrical outlet.
 - Disconnect the keyboard and any external devices, except the primary display (and expansion unit if attached) from the system unit.
 - Plug the power cord of the system unit (and expansion unit, if attached) into the electrical outlet.
 - Power on the system.

Note: A 301 error may occur if you disconnected the keyboard. Disregard this error.

DID THE SYMPTOM REMAIN?

Yes No

002

CAUTION

Power off the system before connecting any device.

- Connect the external devices to the system unit, one at a time.
- (Step 002 continues)

002 (continued)

Power on the system after connecting each device.
Repair or replace the device that causes the failure to return.

003

- Power off the system.
- Connect the keyboard to the system unit.
- Disconnect the expansion unit cable (if attached) from the system unit.
- Power on the system unit; do not power on the expansion unit.

Note: An 1801 error code may appear if you disconnected an expansion unit. Disregard the error and continue with the POST.

DID THE SYMPTOM REMAIN?

Yes No

004

Go to Step 039 in this MAP.

005

- Check for a voltage of 2.4 to 5.2 Vdc between pins 1 and 5 (ground) at the system board power connector (Figure 1).

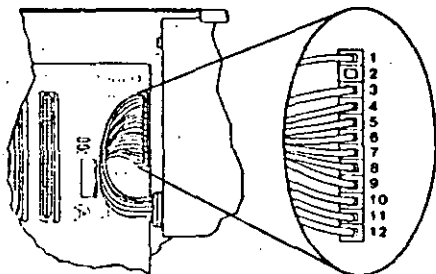


Figure 1. System Board Power Connector

005 (continued)

DO YOU HAVE 2.4 TO 5.2 VDC BETWEEN PINS 1 AND 5?

Yes No

006

Go to Step 012 in this MAP.

007

- Check the system board power connectors for the correct voltages (Figure 2).

Voltage (Vdc)		Pins	
Minimum	Maximum	-Lead	+Lead
+ 4.8	+ 5.2	5	10
+ 4.5	+ 5.4	9	6
+11.5	+12.6	7	3
+10.8	+12.9	4	8

Figure 2. System Board Voltages

- Check the diskette drive and fixed disk drive power connectors for the correct voltages (Figure 3).

Voltage (Vdc)		Pins	
Minimum	Maximum	-Lead	+Lead
+ 4.8	+ 5.2	2	4
+11.5	+12.6	3	1

Locating Rib

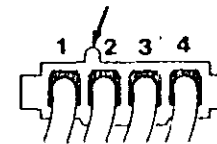


Figure 3. Diskette and Fixed Disk Drive Power Connectors

ARE ALL VOLTAGES CORRECT?

Yes No

008

(Step 008 continues)

008 (continued)
Replace the power supply.

009

- Power off the system.
- Disconnect the speaker cable from the system board.
- Check the continuity of the speaker.

DOES THE SPEAKER HAVE CONTINUITY?

Yes No

010

Replace the speaker.

011

Reconnect the speaker then go to Step 016 in this MAP.

012

(From Step 006 in this MAP)

You may have a failing diskette drive or fixed disk drive. Perform the following procedure.

- Power off the system.
- Remove the power supply connector from one of the drives.
- Power on the system.

DID THE SYMPTOM REMAIN?

Yes No

013

Replace the failing drive.

014

- Repeat this procedure for any remaining drives.

DID THE SYMPTOM REMAIN?

Yes No

015

Replace the failing drive.

(Step 016 continues)

016

(From Step 011 in this MAP)

IS A MATH COPROCESSOR INSTALLED IN THE SYSTEM UNIT?

Yes No

017

Go to Step 021 in this MAP.

018

- Power off the system.
- Remove the math coprocessor from the system board.
- Power on the system.

DID THE SYMPTOM REMAIN?

Yes No

019

Replace the math coprocessor and the 8088 processor.

020

Reinstall the math coprocessor then continue with Step 021 in this MAP.

021

(From Steps 017 and 020 in this MAP)

An adapter may be failing. Perform the following procedure:

- Power off the system.
- Remove one option adapter from the system board. Do not remove the diskette drive adapter or the primary display adapter.
- Power on the system.
- Repeat the above procedure until you find the failing adapter, or all option adapters, except the diskette drive adapter and the primary display adapter, have been removed.

Note: As adapters are removed, switches may need to be reset to match the system configuration.

(Step 021 continues)

021 (continued)

DID THE SYMPTOM REMAIN?

Yes No

022

Replace the last adapter removed.

023

- Power off the system.
- Remove the diskette drive adapter from the system board.
- Power on the system.

Note: Removal of the diskette drive adapter may result in a 601 error code. Disregard the error and continue with the POST.

DID THE SYMPTOM REMAIN?

Yes No

024

Replace the diskette drive adapter.

025

IS THE PRIMARY DISPLAY ADAPTER AN ENHANCED GRAPHICS ADAPTER?

Yes No

026

Go to Step 030 in this MAP.

027

- Power off the system.
- Remove the Enhanced Graphics Adapter from the system board.
- Set switches 5 and 6 of Switch Block 1 on the system board for color display operation. Set switch 5 to the Off position and 6 to the On position.
- Power on the system.

(Step 027 continues)

027 (continued)

DID YOU RECEIVE ONE LONG AND TWO SHORT BEEPS?

Yes No

028

Go to Step 033 in this MAP.

029

Replace the Enhanced Graphics Adapter. Set the system board switches back to their original settings.

030

(From Step 026 in this MAP)

- Power off the system.
- Remove the primary display adapter from the system board.
- Power on the system.

DID YOU RECEIVE ONE LONG AND TWO SHORT BEEPS?

Yes No

031

Go to Step 033 in this MAP.

032

Replace the primary display adapter.

033

(From Steps 028 and 031 in this MAP)

- Check for a voltage of 2.4 to 5.2 Vdc between pins 1 and 5 (ground) at the system board power connector (Figure 4 on page 0020-8).

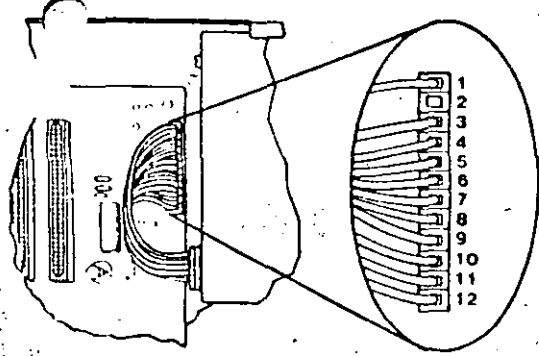


Figure 4. System Board Power Connectors

DO YOU HAVE 2.4 TO 5.2 VDC BETWEEN PINS 1 AND 5?

Yes No

034

Go to Step 036 in this MAP.

035

Replace the system board.

036

(From Step 034 in this MAP)

- Power off the system.
- Disconnect the power supply connectors from the system board.
- Ensure all option adapters have been removed from the system board.
- Check for resistance as shown in Figure 5 on page 0020-9.

Pins		Minimum Resistance
-Lead	+Lead	
5	3	17 Ohms
6	4	17 Ohms
7	9	17 Ohms
8	10	0.8 Ohms
8	11	0.8 Ohms
8	12	0.8 Ohms

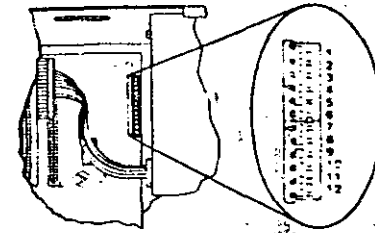


Figure 5. System Board Resistance

ARE ANY RESISTANCE VALUES BELOW THE MINIMUM INDICATED?

Yes No

037

Replace the power supply.

038

Replace the system board.

039

(From Step 004 in this MAP)

- Power off the system.
- Connect the expansion unit cable.
- Insert the Advanced Diagnostics diskette into drive A.
- Power on the system.

Note: An 1801 error may occur. Disregard the error and continue with the POST.

(Step 039 continues)

039 (cont'd)

DID THE ADVANCED DIAGNOSTIC MENU APPEAR?

Yes No

040

Go to Step 043 in this MAP.

041

- Run the Expansion Option tests. Use the (RUN TESTS ONE TIME) option.

DID YOU RECEIVE AN 1820 ERROR CODE?

Yes No

042

Replace the extender card.

043

(From Step 040 in this MAP)

An adapter may be failing. Perform the following:

- Power off the system.
- Remove one option adapter (except the receiver card) from the expansion board.
- Power on the system.
- Repeat the above steps until you find the failing adapter, or all option adapters have been removed.

DID THE SYMPTOM REMAIN?

Yes No

044

Replace the last adapter removed.

045

- Power off the system.
- Replace the receiver card.
- Power on the system.

DID THE SYMPTOM REMAIN?

Yes No

(Step 046 continues)

Notes:

046

You have successfully completed the Advanced Diagnostic tests. If you suspect an intermittent problem, start an error log. If you need instructions, refer to the Reference manual.

0280

047

Replace the expansion card.

MAP 0020: Power (AT)

Symptom Explanation	Conditions That Could Cause This Symptom
You have entered this MAP because you were unable to complete the POST, you have been directed here from another MAP, or you suspect a power problem.	<ul style="list-style-type: none"> • The power supply is failing. • The diskette drive is failing. • The fixed disk drive is failing. • An option adapter is failing. • The system board is failing. • The math coprocessor is failing. • The speaker is failing.

001

ARE YOU IN THIS MAP FOR A 101 OR 107 POST ERROR MESSAGE?

Yes No

|

002

Go to Step 004 in this MAP.

003

Go to Step 017 in this MAP.

004

(From Step 002 in this MAP)

- Power off the system.
- Unplug the system unit power cord from the electrical outlet.
- Verify the 115/230 Vac selector switch is set for the correct voltage.
- Disconnect all cables and external devices, except the display, from the system unit.
- Plug the system unit power cord into the electrical outlet.
- Power on the system.

(Step 004 continues)

133

004 (continued)
DID THE SYMPTOM REMAIN?

Yes No

005

CAUTION

Power off the system before connecting any device.

Connect the external devices to the system unit, one at a time, until the symptom returns.

Repair or replace the device causing the failure.

006

Power off the system.

Remove the system unit cover.

Reseat the power connectors.

Power on the system.

Check for a voltage of 2.4 to 5.2 Vdc between pins 1 and 5 (ground) at power supply connector P8.

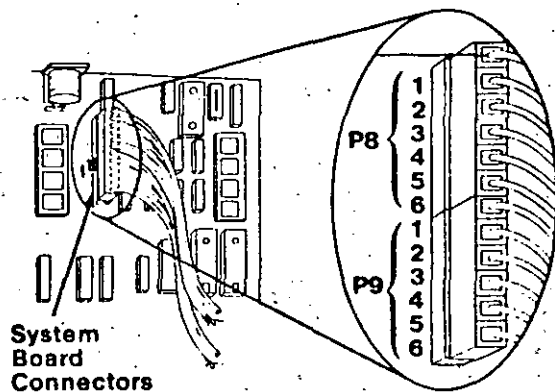


Figure 1. System Board Power Supply Connector

DO YOU HAVE 2.4 TO 5.2 VDC BETWEEN PINS 1 AND 5?

Yes No

(Step 007 continues)

007

Go to Step 013 in this MAP.

008

- Check the system board power connectors for the correct voltages (see Figure 2).
- Check the diskette drive and fixed disk drive power connectors for the correct voltages (see Figure 3).

Note: If no fixed disk drives are installed in the system, a power supply load resistor is required for normal operation of the power supply. It may be attached to either connector P10 or P11.

Voltage (Vdc)		Pins	
Minimum	Maximum	-Lead	+Lead
+ 4.8	+ 5.2	P8-5	P9-4
+ 4.5	+ 5.4	P9-3	P8-6
+11.5	+12.6	P9-1	P8-3
+10.8	+12.9	P8-4	P9-2

Figure 2. System Board Voltages

Voltage (Vdc)		Pins	
Minimum	Maximum	-Lead	+Lead
+ 4.8	+ 5.2	2	4
+11.5	+12.6	3	1

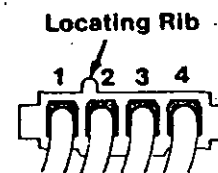


Figure 3. Diskette Drive and Fixed Disk Drive Voltages

ARE ALL VOLTAGES CORRECT?

Yes No

009

Replace the power supply.

(Step 010 continues)

010

- Power off the system.
- Set the meter to the Ohms X 1 scale.
- Disconnect the speaker cable from the system board.
- Check the continuity of the speaker.

DOES THE SPEAKER HAVE CONTINUITY?

Yes No

011

Replace the speaker.

012

- Reconnect the speaker.
- Go to Step 013 in this MAP.

013

(From Steps 007, 012, and 015 in this MAP)

You may have a failing diskette drive or fixed disk drive. Perform the following:

- Power off the system.
- Remove the power connector from one of the drives.
- Power on the system.

DID THE SYMPTOM REMAIN?

Yes No

014

Replace the failing drive.

015

- Reinstall the connector you removed in Step 013 in this MAP.
- Perform the same procedure for any remaining drives.

DID THE SYMPTOM REMAIN?

Yes No

016

Replace the failing drive.

(Step 017 continues)

017

(From Step 003 in this MAP)

You may have a failing adapter. Perform the following:

- Power off the system.
- Remove one option adapter from the system board. Do not remove the Fixed Disk and Diskette Drive Adapter or the primary display adapter.
- Power on the system.
- Repeat this procedure until you find the failing adapter or all option adapters (except the Fixed Disk and Diskette Drive Adapter and primary display adapter) have been removed.

DID THE SYMPTOM REMAIN?

Yes No

018

Replace the last adapter removed.

019

You may have a failing math coprocessor.

IS A MATH COPROCESSOR INSTALLED IN THE SYSTEM?

Yes No

020

Go to Step 023 in this MAP.

021

- Power off the system.
- Remove the math coprocessor from the system board.
- Power on the system.

DID THE SYMPTOM REMAIN?

Yes No

022

Replace the math coprocessor. If this does not correct the problem, replace the system board.

023

(From Step 020 in this MAP)

(Step 023 continues)

023 (continued)

- Power off the system.
- Remove the Fixed Disk and Diskette Drive Adapter from the system board.
- Power on the system.

Removal of the Fixed Disk and Diskette Drive Adapter results in a 601 error code, disregard this error.

DID THE SYMPTOM REMAIN?

Yes No

024

Replace the Fixed Disk and Diskette Drive Adapter. If that does not correct the problem, replace the system board.

025

- Power off the system.
- Remove the primary display adapter from the system board.
- Power on the system.

Removal of the primary display adapter results in one long and two short beeps during the POST.

DID YOU RECEIVE ONE LONG AND TWO SHORT BEEPS?

Yes No

026

Go to Step 028 in this MAP.

027

Replace the primary display adapter. If that does not correct the problem replace the system board.

028

(From Step 026 in this MAP)

- Power off the system.
- Wait 10 seconds.
- Power on the system.
- Check for a voltage of 2.4 to 5.2 Vdc between pins 1 and 5 (ground) at power supply connector P8.

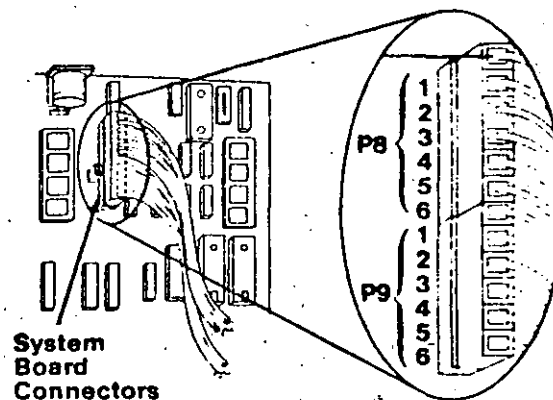


Figure 4. System Board Power Supply Connector

DO YOU HAVE 2.4 TO 5.2 VDC BETWEEN PINS 1 AND 5?

Yes No

029

Replace the power supply. If that does not correct the problem, replace the system board.

030

Replace the system board. If that does not correct the problem replace the power supply.

MAP 0100: System Board Start

Symptom Explanation	Conditions That Could Cause This Symptom
You have entered this MAP because you were unable to complete the POST, or you received a 1XX error message.	<ul style="list-style-type: none"> The system board is failing.

001
Find your system-type in the following figure and go to the MAP indicated.

System Type	MAP
Personal Computer.....	MAP 0100: System Board (PC)
Personal Computer XT.....	MAP 0100: System Board (PC)
Portable PC.....	MAP 0100: System Board (PC)
Personal Computer AT.....	MAP 0100: System Board (AT)

Figure 1. System Identification

MAP 0100: System Board (PC)

Symptom Explanation	Conditions That Could Cause This Symptom
You have entered this MAP because you were unable to complete the POST, or you received a 1XX error message.	<ul style="list-style-type: none"> The system board is failing.

001

- Power off the system.
- Insert the Advanced Diagnostics diskette into drive A.
- Power on the system.

DID THE POST FINISH WITHOUT A 1XX ERROR MESSAGE?

Yes No

|
002
Replace the system board.

003

- Select **0 (SYSTEM CHECKOUT)**.
- Run the System Board tests. Use the **(RUN TESTS MULTIPLE TIMES)** option.

DID YOU RECEIVE A 1XX ERROR MESSAGE?

Yes No

|
004
You have successfully completed the Advanced Diagnostic tests. If you suspect an intermittent problem, start an error log. If you need instructions, refer to the Reference manual.

(Step 005 continues)

005

DID YOU RECEIVE A 199 ERROR MESSAGE?

Yes No

006

Replace the system board.

007

Refer to "MAP 0000: Start (PC)." and verify the installed devices.

Note: The 199 error message indicates you answered "No" to the question about the installed devices list.

MAP 0100: System Board (AT)

Symptom Explanation	Conditions That Could Cause This Symptom
You have entered this MAP because you were unable to complete the POST, or you received a 1XX error message.	<ul style="list-style-type: none"> The system board is failing. The battery is failing. The keyboard cable is failing. The keyboard is failing.

001

- Power off the system.
- Insert the Advanced Diagnostics diskette into drive A.
- Wait at least 10 seconds.
- Power on the system.

DID YOU RECEIVE A 1XX ERROR MESSAGE DURING THE POST?

Yes No

002

Go to Step 004 in this MAP.

003

Go to Step 009 in this MAP.

004

(From Step 002 in this MAP)

DID THE ADVANCED DIAGNOSTICS MENU APPEAR ON THE SCREEN?

Yes No

005

Go to "MAP 0000: Start (AT)."

006

(Step 006 continues)

006 (continued)

Press 0 (SYSTEM CHECKOUT).

Run the System Board tests. Use the (RUN TESTS MULTIPLE TIMES) option.

DID YOU RECEIVE A IXX ERROR?

Yes No

007

You have successfully completed the Advanced Diagnostic tests. If you suspect an intermittent problem, start an error log. If you need instructions, refer to the Reference manual.

008

Replace the system board.

009

(From Step 003 in this MAP)

Find your error code in the following figure and take the action indicated.

Error Code	Action
105	Go to Step 018 in this MAP.
162, 163, 164	Go to MAP 0000: Start.
101, 107	Go to MAP 0020: Power.
151, 161	Go to Step 010 in this MAP.
102, 103, 104, 106, 108, 109, 121, 152	Replace the System Board.

Figure 1. POST Errors

010

(From Step 009 in this MAP)

This error message indicates a new or a defective battery is in the system.

(Step 010 continues)

010 (continued)

IS A NEW BATTERY INSTALLED IN THE SYSTEM.

Yes No

011

Go to Step 015 in this MAP.

012

Run the Setup program and correct any errors.

Note: A 161 Battery Defective or New Battery Installed message appears during the POST after battery installation or replacement.

DID RUNNING THE SETUP PROGRAM CORRECT THE PROBLEM?

Yes No

013

Go to Step 015 in this MAP.

014

You have successfully completed the Advanced Diagnostic tests. If you suspect an intermittent problem, start an error log. If you need instructions, refer to the Reference manual.

015

(From Steps 011 and 013 in this MAP)

Disconnect the battery from the system board and check the voltage between pins 1 and 4 on the battery cable connector.

WAS THE VOLTAGE AT LEAST 6.0 VDC?

Yes No

016

Replace the battery.

CAUTION

Fire, explosion, and severe burn hazard can be caused by the battery. DO NOT recharge, disassemble, heat above 100°C (212°F), solder directly to the cell, incinerate, or expose battery cell contents to water.

(Step 017 continues)

017

- Replace the system board.
-

018

(From Step 009 in this MAP)

- Power off the system.
- Disconnect the keyboard cable from the system unit.
- Power on the system.

DID YOU RECEIVE A 105 ERROR MESSAGE?

Yes No

019

Go to Step 021 in this MAP.

020

Replace the system board.

021

(From Step 019 in this MAP)

- Power off the system.
- Disconnect the keyboard cable from the keyboard.
- Refer to Figure 2 on page 0100-5, and check the keyboard cable for continuity.

Note: Check the continuity of wires 1, 2, 4, and 5 (wire 3 is not used).

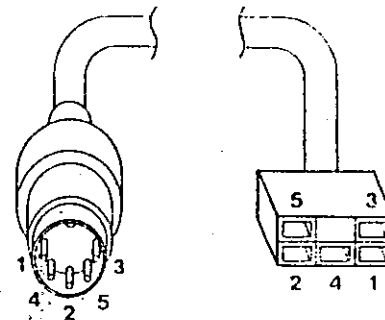


Figure 2. Continuity Check

DOES THE KEYBOARD CABLE HAVE CONTINUITY?

Yes No

022

Replace the keyboard cable.

023

Replace the keyboard assembly.

MAP 0200: Memory Start

Symptom Explanation	Conditions That Could Cause This Symptom
You have entered this MAP because you were unable to complete the POST, the memory size displayed was incorrect, there was a memory parity check, you received an error message indicating a memory failure, or you have been directed here from another MAP.	<ul style="list-style-type: none"> • A memory module is failing. • A memory expansion adapter is failing. • The system board is failing. • The Setup program options are not correctly set.

001
Find your system and system board type in the following figure and go to the MAP indicated.

System Type	System Board	MAP
Personal Computer	16/64KB.....	MAP 0200: Memory PC
Personal Computer	64/256KB	MAP 0200: Memory PC
Portable PC	64/256KB	MAP 0200: Memory XT
Personal Computer XT	64/256KB	MAP 0200: Memory XT
Personal Computer AT	All	MAP 0200: Memory AT

Note: 16/64KB and 64/256KB system boards are marked along the left edge of the system board.

Figure 1. System Identification

MAP 0200: Memory (PC)

001
When a memory failure is detected during the POST, a 201 error message preceded by a four-character error code (XXXX 201) may be displayed. This error message lasts about 1 second before being replaced by a Parity Check message. Watch the display carefully and make a note of the four-character error code.

- Power off the system.
- Insert the Advanced Diagnostics diskette into drive A.
- Power on the system.

DID A 201 ERROR OCCUR DURING THE POST?

Yes No

|

002

Go to Step 004 in this MAP.

003

Go to Step 011 in this MAP.

004

(From Step 002 in this MAP)

IS THE ADVANCED DIAGNOSTICS MENU DISPLAYED?

Yes No

|

005

Go to "MAP 0020: Power Start."

006

- Select 0 (SYSTEM CHECKOUT).

DOES THE AMOUNT OF MEMORY DISPLAYED ON THE INSTALLED DEVICES MENU MATCH THE AMOUNT OF INSTALLED MEMORY?

Yes No

|

007

(Step 007 continues)

007 (continued)

Go to Step 018 in this MAP.

008

(From Step 020 in this MAP)

- Press Y (IS THE LIST CORRECT).
- Press 0 (RUN TESTS ONE TIME).
- Press 2 (XXX KB MEMORY).

DID YOU RECEIVE AN ERROR MESSAGE DURING DIAGNOSTIC TESTS?

Yes No

009

You have successfully completed the Advanced Diagnostic tests. If you suspect an intermittent problem, start an error log. If you need instructions, refer to the Reference manual.

010

- Note the four-character error code as shown in Figure 1. You will need it for later steps.

TESTING - XXXKB MEMORY
THIS TEST TAKES UP TO TWO MINUTES
PLEASE STAND BY
X:XX:XX
ERROR -
XXXXKB MEMORY ZXX S
FAILING ADDRESS - SPACE/MODULE XXXX ←

 
PRESS ENTER TO CONTINUE
? 

Figure 1. Advanced Diagnostics Error Message

Continue with Step 011 in this MAP.

011

(From Steps 003 and 010 in this MAP)
IS A 16/64KB SYSTEM BOARD INSTALLED?

Yes No

012

Go to Step 021 in this MAP.

013

IS THE FIRST CHARACTER OF THE ERROR CODE 0?

Yes No

014


Go to "MAP 0200: PC Family Expansion Memory."

015

- Find the failing bank and module in Figure 2.

Notes:

1. The failing bank is identified by the first two characters of the error code.
2. The failing module is identified by the last two characters of the error code.

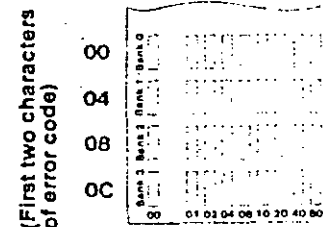

(Last two characters of error code)
Top View of System Board

Figure 2. System Board

(Step 015 continues)

015 (continued)

DID YOU FIND THE FAILING MODULE?

Yes No

|
016

Replace the nine modules in the failing bank. If this does not correct the problem, replace the system board.

017

Replace the failing module, then go to Step 001 to verify system operation.

018

(From Step 007 in this MAP)

- Check the memory switches on the system board and any installed memory expansion options.

ARE THE SWITCH SETTINGS CORRECT?

Yes No

|
019

Correct the switch settings, then go to Step 001 to verify system operation.

020

- Press N then Enter.
 - Follow the instructions on the screen to correct the memory size, then go to Step 008 in this MAP to verify system operation.
-

021

(From Step 012 in this MAP)

IS THE FIRST CHARACTER OF THE ERROR CODE 0, 1, 2, OR 3?

Yes No

|
022

Go to "MAP 0200: PC Family Expansion Memory."

023

(Step 023 continues)

023 (continued)

- Find the failing bank and module in Figure 3.

Notes:

1. The failing bank is identified by the first character of the error code.
2. The failing module is identified by the last two characters of the error code.

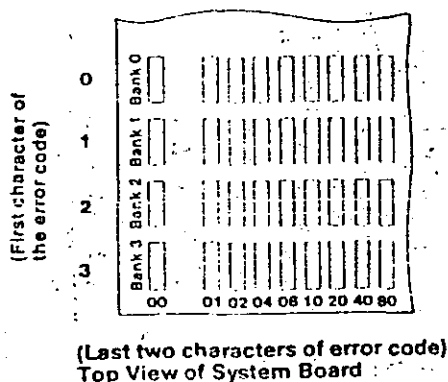


Figure 3. System Board

DID YOU FIND THE FAILING MODULE?

Yes No

024

Replace the nine modules in the failing bank. If this does not correct the problem, replace the system board.

025

Replace the failing module, then go to Step 001 to verify system operation.

MAP 0200: Memory (XT)

001

- Power off the system.
- Insert the Advanced Diagnostics diskette into drive A.
- Power on the system.

DID A 201 ERROR OCCUR DURING THE POST?

Yes No

002

Go to Step 004 in this MAP.

003

Go to Step 017 in this MAP.

004

(From Step 002 in this MAP)

DID THE ADVANCED DIAGNOSTICS MENU APPEAR?

Yes No

005

Go to Step 025 in this MAP.

006

- Select 0 (SYSTEM CHECKOUT).

DOES THE AMOUNT OF MEMORY DISPLAYED ON THE INSTALLED DEVICES LIST MATCH THE AMOUNT OF MEMORY INSTALLED?

Yes No

007

Go to Step 022 in this MAP.

008

(From Step 024 in this MAP)

IS THE INSTALLED DEVICES LIST CORRECT?

Yes No

(Step 009 continues)

09

Press N and follow the instructions on the screen, then go to Step 010 in this MAP.

010

(From Step 009 in this MAP)

- Press Y (IS THE LIST CORRECT).
- Press 0 (RUN TESTS ONE TIME).
- Press 2 (XXX KB MEMORY).

DID YOU RECEIVE AN ERROR MESSAGE DURING DIAGNOSTIC TESTS?

Yes No

011

You have successfully completed the Advanced Diagnostic tests. If you suspect an intermittent problem, start an error log. If you need instructions, refer to the Reference manual.

012

DOES THE ERROR MESSAGE HAVE A 201 ERROR CODE DISPLAYED?

Yes No

013

Go to Step 025 in this MAP.

014

- Note the seven-character error code (XXXXX XX) as shown in Figure 1 on page 0200-3.

TESTING - XXXKB MEMORY
THIS TEST TAKES UP TO TWO MINUTES
PLEASE STAND BY

X:XX:XX

ERROR - XXXKB MEMORY

201S

FAILING ADDRESS - SPACE/MODULE XXXXX XX ←

PRESS ENTER TO CONTINUE



Figure 1. Advanced Diagnostic Error Message

IS THE FIRST CHARACTER OF THE SEVEN-CHARACTER ERROR CODE 0, 1, 2, OR 3?

Yes No

015

Go to "MAP 0200: PC Family Expansion Memory."

016

Go to Step 019 in this MAP.

017

(From Step 003 in this MAP)

201 is preceded by a seven-character error code (XXXXX XX 201).

IS THE FIRST CHARACTER OF THE SEVEN-CHARACTER ERROR CODE 0, 1, 2, OR 3?

Yes No

018

Go to "MAP 0200: PC Family Expansion Memory."

019

(From Step 016 in this MAP)


- Find the failing bank and module in Figure 2 on page 0200-4.

Notes:

1. The failing bank is identified by the first character of the error code.
2. The failing module is identified by the last two characters of the error code.

First Character of the Error Code
0 = Bank 0
1 = Bank 1
2 = Bank 2
3 = Bank 3

Last Two Characters of the Error Code
00 = P
01 = 0
02 = 1
04 = 2
08 = 3
10 = 4
20 = 5
40 = 6
80 = 7

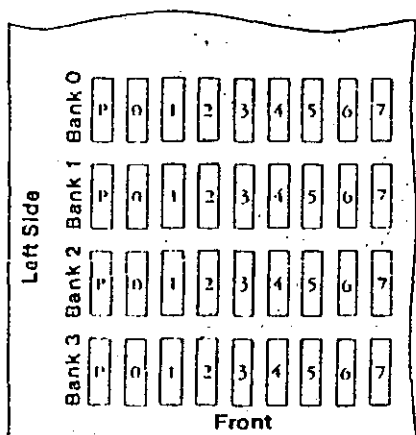

Top View of System Board

Figure 2. System Board

DID YOU FIND THE FAILING MEMORY MODULE?

Yes No
|
020
Replace the nine modules in the failing bank. If this does not correct the problem, replace the system board.

021
Replace the failing module, then go to Step 001 in this MAP to verify system operation.

022
(From Step 007 in this MAP)
- Check the memory switch settings on the system board and any installed memory expansion options.

ARE THE SWITCH SETTINGS CORRECT?

Yes No
|
023
Correct the switch settings, then go to Step 001 to verify system operation.

024
- Press N then Enter.
- Follow the instructions on the screen to correct the memory size, then go to Step 008 in this MAP.

025
(From Steps 005 and 013 in this MAP):
IS A PARITY CHECK MESSAGE DISPLAYED?

Yes No
|
026
Go to "MAP 0020: Power Start."

027
IS A FIVE-CHARACTER ERROR CODE DISPLAYED UNDER THE PARITY CHECK MESSAGE?

Yes No
|
028
Go to "MAP 0020: Power Start."

029
IS THE FIRST CHARACTER OF THE ERROR CODE 0, 1, 2, OR 3.

Yes No
|
030
Go to "MAP 0200: PC Family Expansion Memory."


(Step 031 continues)

and the failing bank in the following figure.

Note: The failing bank is identified by the first character of the error code.

Replace the nine memory modules in the failing bank, then go to Step 001 to verify system operation.

First Character of the Error Code
0 = Bank 0
1 = Bank 1
2 = Bank 2
3 = Bank 3

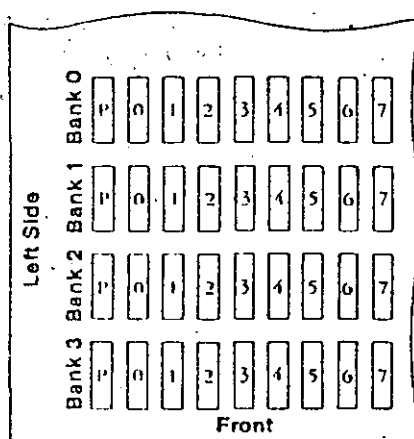

Top View of System Board

Figure 3. System Board

TEST POINT REFERENCE PAGE

for

TYPE 1 DISKETTE DRIVES

(Drives with a serial number prefix A, B, or no prefix)

Preliminary Speed Check


1. Remove the diskette drive.
2. Plug the power connector into the diskette drive logic board. Leave the signal cable disconnected.
3. Insert a scratch diskette into the diskette drive.
4. Connect a jumper between TP-10 and TP-13 of the diskette drive logic board.
5. Power on the system.
6. Observe the strobe marks on the drive pulley under fluorescent lighting.

Note: The outer ring is for 60 hertz and the inner ring is for 50 hertz.

If the speed is correct, the appropriate ring of strobe marks will appear to stand still.


Preliminary Speed Adjustment

Adjust the variable resistor on the servo board until the appropriate ring of strobe marks appears to stand still.

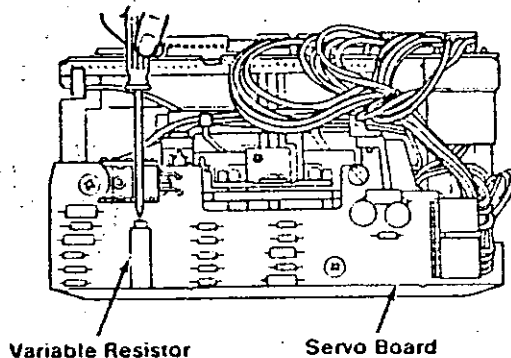

Final Speed Adjustment

1. Power off the system.
2. Insert the Advanced Diagnostic into the diskette drive.
3. Power on the system.
4. Run the Diskette Drive and Adapter tests. Use the (RUN TESTS MULTIPLE TIMES) option.
5. When the Diskette Diagnostic menu appears, select option 4, (SPEED TEST).
6. Adjust the variable resistor on the servo board until the speed falls within the range displayed.

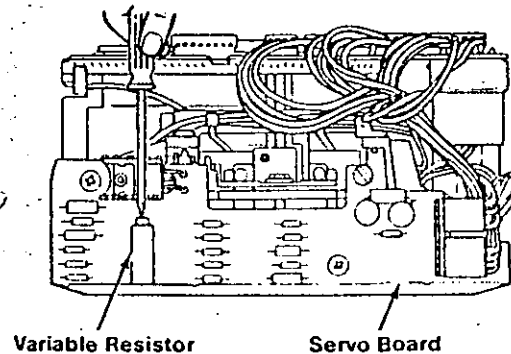


Test Point Reference Chart

Test Point	Location	Specifications
A	J2-20	Increases from 0 Vdc to 5.0 Vdc while inserting a diskette in the drive.
B	U6 Pin 5	Decreases from 5.0 Vdc to 0 Vdc while inserting a diskette in the drive.
C	J3-16 (+)	1.5 Vdc minimum across these two test points.
D	J3-15 (-)	
E	J3-24	0 Vdc before the LED lights.
F	U6 Pin 1	As the LED initially lights, the voltage increases by 0.2 Vdc.
G	J3-3	3 Vdc to 12 Vdc with the LED on.
H	J3-14	Decreases from 5.0 Vdc to 0 Vdc while inserting a diskette into the drive.

Requested Voltage Reading	Minimum	Maximum
Approximately 0 Vdc	0.0 Vdc	0.8 Vdc
Approximately 0.2 Vdc	0.15 Vdc	0.25 Vdc
Approximately 0.5 Vdc	0.5 Vdc	1.0 Vdc
Approximately 5.0 Vdc	2.0 Vdc	5.5 Vdc
Approximately 12 Vdc	11.2 Vdc	12.6 Vdc

Test Point Locations

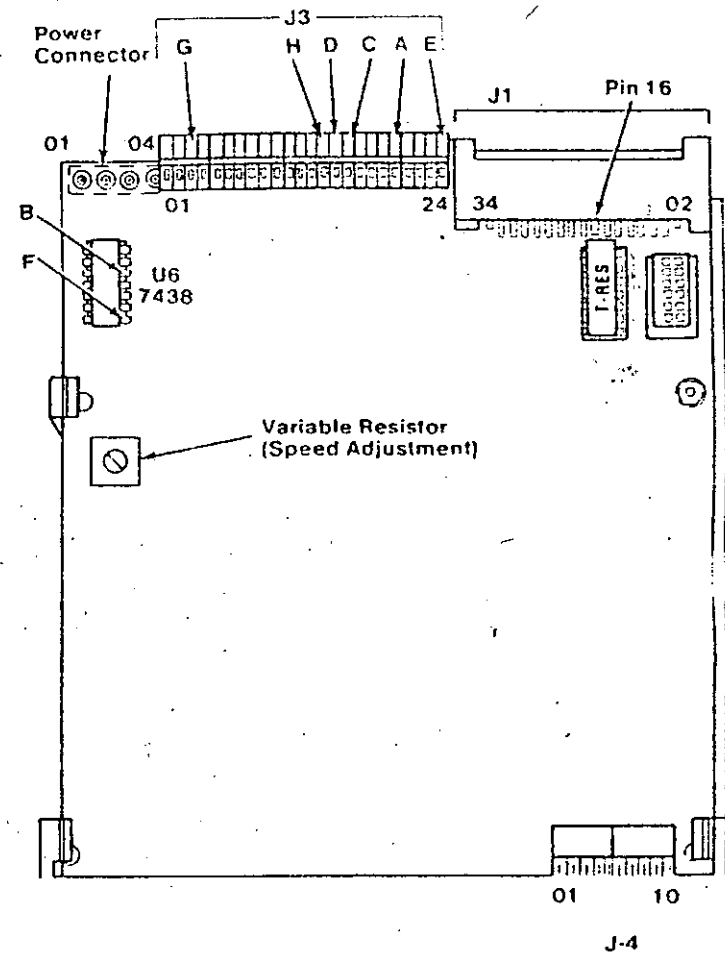

ICE PAGE

DRIVES

prefix D)

Preliminary Speed Check


1. Remove the diskette drive.
2. Plug the power connector into the diskette drive logic board. Leave the signal cable disconnected.
3. Insert a scratch diskette into the diskette drive.
4. Connect a jumper between TP-10 and TP-13 of the diskette drive logic board.
5. Power on the system.
6. Observe the strobe marks on the drive pulley under fluorescent lighting.

Note: The outer ring is for 60 hertz and the inner ring is for 50 hertz.

If the speed is correct, the appropriate ring of strobe marks will appear to stand still.

Preliminary Speed Adjustment

Adjust the variable resistor on the servo board until the appropriate ring of strobe marks appears to stand still.

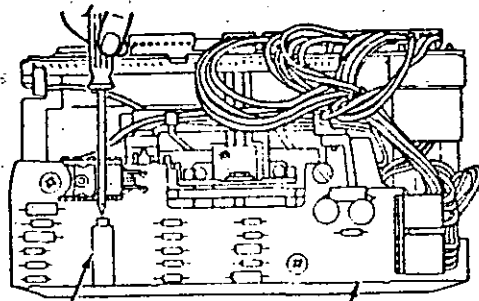

Variable Resistor

Servo Board

TEST POINT REFERENCE PAGE

for

TYPE 3 DISKETTE DRIVES


(Drives with a serial number prefix E)

Test Point Reference Chart

Test Point	Location	Specifications
A	J6-2	5.0 Vdc with the diskette removed and the latch closed.
B	U10-4	Do the following: <ol style="list-style-type: none"> 1. Insert a diskette into drive A. 2. Power off the system for 5 seconds. 3. Power on the system. 4. With the diskette inserted and the latch closed, a fluctuation of approximately 0.1 Vdc will occur after the beep at the end of the POST and will continue for as long as the spindle rotates.
C	P7-1 (+)	1.5 Vdc minimum across these two test points.
D	P7-2 (-)	
E	N/A	Go to Step 038.
F	TP-1	As the LED initially lights, the voltage decreases by 0.2 Vdc.
G	P9-3	3 Vdc to 12 Vdc with the LED on.
H	P4-2	Decreases from 5.0 Vdc to 0 Vdc while inserting a diskette into the drive.

Requested Voltage Reading	Minimum	Maximum
Approximately 0 Vdc	0.0 Vdc	0.8 Vdc
Approximately 0.2 Vdc	0.15 Vdc	0.25 Vdc
Approximately 0.5 Vdc	0.5 Vdc	1.0 Vdc
Approximately 5.0 Vdc	2.0 Vdc	5.5 Vdc
Approximately 12 Vdc	11.2 Vdc	12.6 Vdc

Test Point Locations

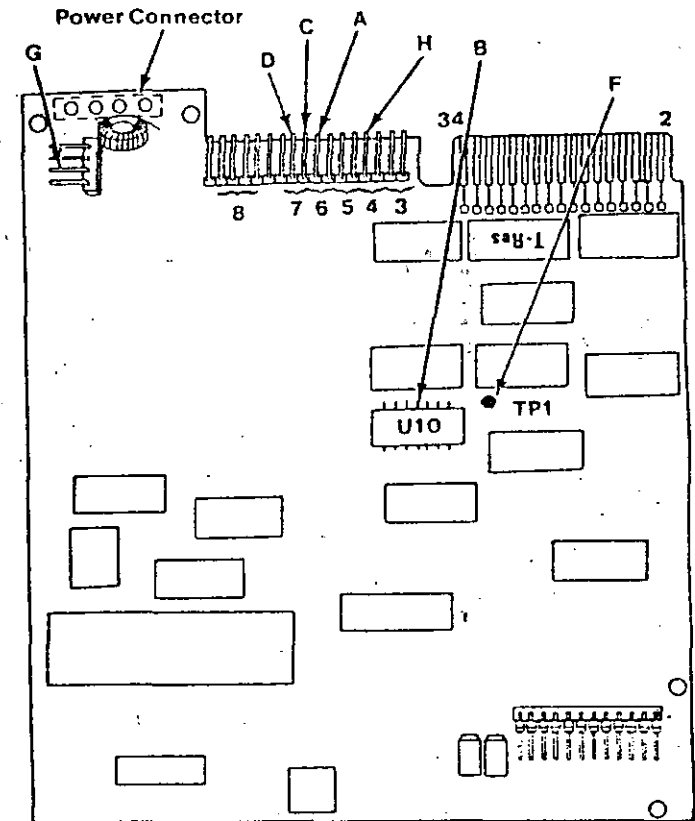

NCE PAGE

DRIVES

prefix E)

Final Speed Check

1. Power off the system.
2. Insert the Advanced Diagnostic diskette into drive A.
3. Power on the system.
4. Run the Diskette Drive and Adapter test using the (RUN TESTS MULTIPLE TIMES) option.
5. When the Diskette Diagnostic menu appears, select option 4, (SPEED TEST).
6. The speed should fall within the range displayed.

The Type 3 diskette drive monitors its own speed and compensates accordingly. There are no speed adjustments on the drive. If the speed is not correct, an electrical or mechanical problem exists. Return to the MAP to isolate the failure.

Liminary Speed Check

1. Remove the diskette drive.
2. Plug the power connector into the diskette drive logic board. Leave the signal cable disconnected.
3. Insert a scratch diskette into the diskette drive.
4. Connect a jumper between pin 16 of the diskette drive signal connector and ground (use the frame as ground).
5. Power on the system.
6. Observe the strobe marks on the drive pulley under fluorescent lighting.

Note: The outer ring is for 60 hertz and the inner ring is for 50 hertz.

7. If the speed is correct, the appropriate ring of strobe marks will appear to stand still.

The Type 3 diskette drive monitors its own speed and compensates accordingly. There are no speed adjustments on the drive. If the speed is not correct, an electrical or mechanical problem exists. Return to the MAP to isolate the failure.

MAP 0900: Parallel Port Start

Symptom Explanation	Conditions That Could Cause This Symptom
You have entered this MAP because you received a 9XX error code, or you have been directed here from another MAP.	<ul style="list-style-type: none">• The Printer Adapter is failing.• The Serial/Parallel Adapter is failing.• The printer cable is failing.

001

Find your system type in the following figure and refer to the MAP indicated.

System Type	MAP
Personal Computer	MAP 0900: Printer Adapter
Personal Computer XT	MAP 0900: Printer Adapter
Portable PC	MAP 0900: Printer Adapter
Personal Computer AT	MAP 0900: Serial/Parallel Adapter - Parallel Port

Figure 1. System Identification

001 (continued)

DID YOU RECEIVE AN ERROR MESSAGE?

Yes No

002

You have successfully completed the Advanced Diagnostic tests. If you suspect an intermittent problem, start an error log. If you need instructions, refer to the Reference manual.

003

Replace the Primary Serial/Parallel Adapter.

MAP 0900: Printer Adapter

Symptom Explanation	Conditions That Could Cause This Symptom
You have entered this MAP because you received a 9XX error code, or you have been directed here from another MAP.	<ul style="list-style-type: none"> The printer adapter is failing.

001

- Power off the system.
- Disconnect the printer cable from the adapter.
- Insert the Advanced Diagnostics diskette into drive A.
- Power on the system.
- Run the Printer Adapter tests. Use the (RUN TESTS ONE TIME) option.
- Follow the instructions on the screen. Do not power off the system during this test.

Note: Use wrap plug (IBM Part 8529228) when instructed to install the wrap plug.

DID YOU RECEIVE AN ERROR MESSAGE?

Yes No

002

You have successfully completed the Advanced Diagnostic tests. If you suspect an intermittent problem, start an error log. If you need instructions, refer to the Reference manual.

003

Replace the printer adapter.

MAP 0900: Serial/Parallel Adapter - Parallel Port

Symptom Explanation	Conditions That Could Cause This Symptom
You have entered this MAP because you received a 9XX error code, you suspect a Serial/Parallel Adapter - Parallel Port problem, or you have been directed here from another MAP.	<ul style="list-style-type: none"> The adapter assigned as the "Primary Parallel Port" is failing.

Ensure the following conditions exist:

1. An adapter is set for "Primary Parallel Port" operation.
2. If a second adapter with a parallel port is installed, it is set for "Alternate Parallel Port" operation.

001

- Power off the system.
- Disconnect the printer cable if it is attached to the parallel port set for primary operation.
- Insert the Advanced Diagnostics diskette into drive A.
- Run the Serial/Parallel - Parallel Port tests. Use the (RUN TESTS ONE TIME) option.
- Follow the instructions on the screen. Do not power off the system during this test.

Note: Use wrap plug (IBM Part 8529228) when instructed to install the wrap plug.

(Step 001 continues)



**FACULTAD DE INGENIERIA U.N.A.M.
DIVISION DE EDUCACION CONTINUA**

**MANTENIMIENTO DE PC'S XT/AT Y PERIFERICOS
PARTE II**

CIRCUITOS INTEGRADOS DIGITALES

OCTUBRE, 1992.



- Qué son los circuitos integrados
- Tecnologías de fabricación
- Breve historia
- Escalas de integración
- Cómo se fabrican los circuitos integrados
- Qué hay dentro de un circuito integrado
- Tendencias

Qué son los circuitos integrados

La principal razón para que los sistemas digitales hayan adquirido tanta popularidad y sean cada vez más sofisticados, compactos y económicos ha sido el alto grado de perfeccionamiento logrado en el desarrollo en masa de circuitos integrados.

Prácticamente, todos los equipos digitales modernos se fabrican usando circuitos integrados.


Un circuito integrado o CI es aquel en el cual todos los componentes, incluyendo transistores, diodos, resistencias, condensadores y alambres de conexión, se fabrican e interconectan completamente sobre un *chip* o pastilla semiconductor de silicio.

Una vez procesado, el chip se encierra en una cápsula plástica o de cerámica que contiene los pines de conexión a los circuitos externos.


Las cápsulas plásticas son más livianas pero las cerámicas son más resistentes y pueden trabajar a más altas temperaturas.

Una pastilla típica (figura 9) tiene aproximadamente de 2.5 a 6.5 mm de lado y 0.5 mm de espesor. Los chips digitales más pequeños contienen varios componentes sencillos como compuertas, inversores y flip-flops. Los más grandes contienen circuitos y sistemas completos como contadores, memorias, microprocesadores, etc.

La mayoría de los circuitos integrados digitales vienen en presentación tipo DIP (Dual In-line Package) o de doble hilera. El pin N° 1 se identifica mediante una ranura o un punto grabado en la parte superior de la cápsula. La enumeración de los pines se realiza en sentido contrario al de las manecillas del reloj. (figura 10).

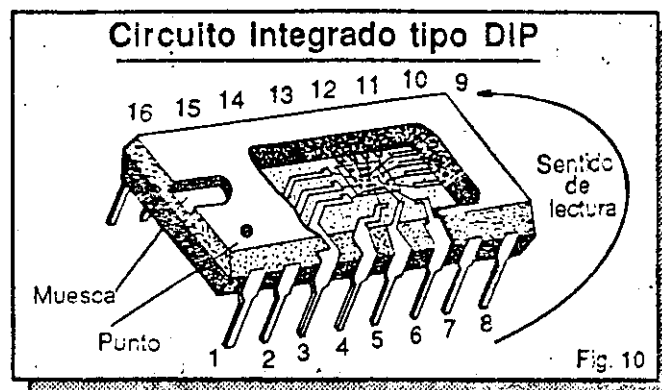

Las configuraciones más comunes de los CI digitales tipo DIP son las de 8, 14, 16, 24, 40 y 64 pines. (figura 11). Estas dos últimas contienen generalmente microprocesadores y otras funciones digitales relativamente complejas.

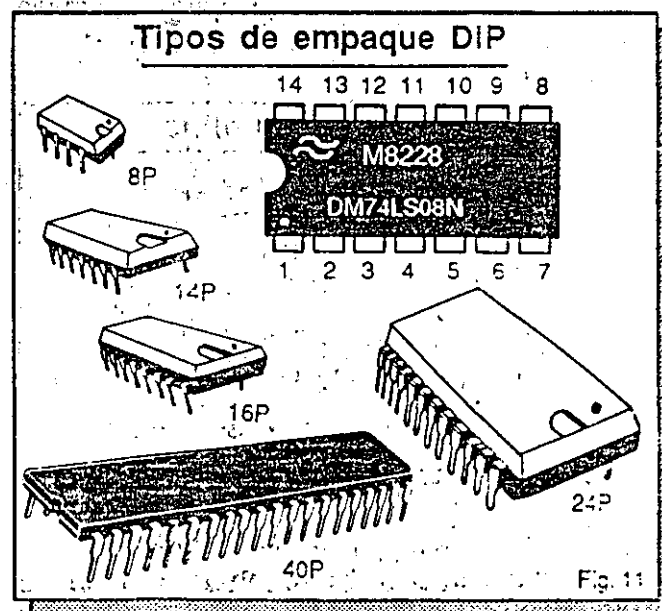

La cápsula trae impresa la información respecto al fabricante, la referencia del dispositivo y la fecha

Pastilla de silicio


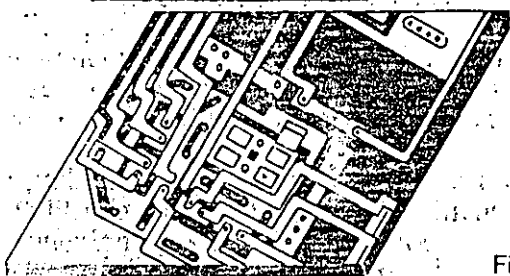


Fig. 9

Fig. 11

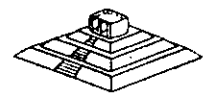

bricación. Cada fabricante de circuitos integrados (National, Texas, Fairchild, Motorola, etc.) se identifica mediante un logotipo distintivo (figura 12). La referencia (SN74LS73; CD4048B, etc.) designa específicamente al dispositivo.

Fabricantes de circuitos integrados

 AM Advanced Micro Devices	 MOTEX Thomson Components	 SAMSUNG Samsung Semiconductor, Inc.
 ANALOG DEVICES Analog Devices	 M Motorola	 signetics Signetics
 EXAR EXAR Integrated Systems	 NS National Semiconductor	 S Siliconix
 FAIRCHILD Fairchild	 NEC NEC Electronics, Inc.	 TI Texas Instruments
 intel i Intel	 RCA RCA	 TRW TRW Semiconductors
 INTERMIL Intersil	 Rockwell Rockwell International	 Zilog Zilog

Fig. 12

Otros encapsulados para CIs

TO-5

Plano

Chip-Carrier

Fig. 13

SMT o de *montaje superficial* (figura 14). Los chips SMT son casi 4 veces más pequeños que los DIP equivalentes y no requieren de perforaciones para su instalación: se sueldan directamente a los trazos de circuito impreso.

Circuitos Integrados para montaje superficial

14

8

16

SMT on PCB

Fig. 14

El código de la fecha informa cuando fue manufacturado el chip. Las dos primeras cifras indican el año y las dos últimas se refieren al mes o semana de fabricación. Por ejemplo, "8307" significa la séptima semana de 1983.

En la presentación tipo DIP, los pines de acceso están espaciados entre sí 2.5 mm. Para efectos de montaje experimental los CI pueden insertarse en un protoboard o tablero sin soldaduras.

Para los montajes definitivos en circuito impreso pueden estar soldados directamente al cobre o montados sobre una base o "socket". La utilización de bases simplifica la instalación durante el ensamble y el remplazo en caso de daño.

Además del tipo DIP, existen otras presentaciones comunes de los circuitos integrados digitales como la cápsula metálica (TO-5), la plana y la "chip carrier" (figura 13). La TO-5, aunque es muy resistente, está siendo remplazada en muchos casos por empaques plásticos, que son más livianos.

Actualmente se dispone de una gran variedad de circuitos integrados digitales que utilizan cápsulas

La miniaturización introducida por la tecnología de montaje superficial o SMT (Surface-Mount Technology) es la que ha permitido, por ejemplo, obtener calculadoras del tamaño de una tarjeta de crédito.

Este tipo de encapsulado es cada vez más popular y en el futuro será uno de los más utilizados por la sencillez de su manufactura y otras ventajas, especialmente económicas.

Tecnologías de fabricación

Los circuitos integrados digitales se pueden clasificar en dos grandes grupos de acuerdo al tipo de transistores utilizados para implementar sus funciones internas de conmutación: bipolares y MOS.

Los circuitos integrados bipolares se fabrican con transistores bipolares tipo NPN y PNP y los de tipo MOS utilizan MOSFETs (transistores de efecto de campo de compuerta aislada).

Dentro de cada categoría, los fabricantes han desarrollado una amplia variedad de familias lógicas de circuitos integrados tanto MOS como bipolares.




del transistor en los Laboratorios Bell (1947). Se trataba de un flip-flop desarrollado enteramente sobre un sustrato de germanio.

El flip-flop de Kilby contenía apenas 4 transistores, una cifra insignificante comparada con los casi 1.000.000 (!Un millón!) de transistores de un microprocesador moderno, como el 68030 de Motorola o el 80486 de Intel.


Veamos entonces, a grandes rasgos, cómo ha evolucionado la tecnología de los circuitos integrados desde sus comienzos hasta nuestros días.

La primera familia de circuitos integrados digitales comercialmente disponible fue la serie 900 de Fairchild Semiconductor, introducida en 1961. Los chips de esta familia, denominada RTL, operaban a 3.2 V y utilizaban internamente resistencias y transistores para realizar operaciones lógicas.

En la figura 16 se muestra el circuito interno de un dispositivo RTL típico. RTL es un acrónimo de Resistor-Transistor Logic (lógica de resistencia a transistor).

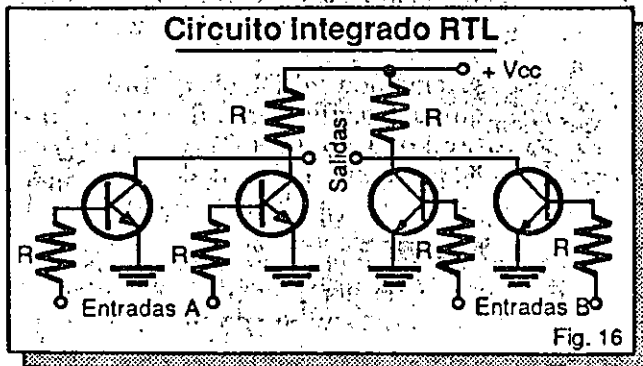


La familia RTL dio paso a otra familia de circuitos integrados digitales construidos a base de diodos y transistores. A esta nueva familia se le denominó DTL, un acrónimo de Diode-Transistor Logic (lógica de diodo a transistor). En la figura 17 se muestra el circuito de un dispositivo DTL típico.

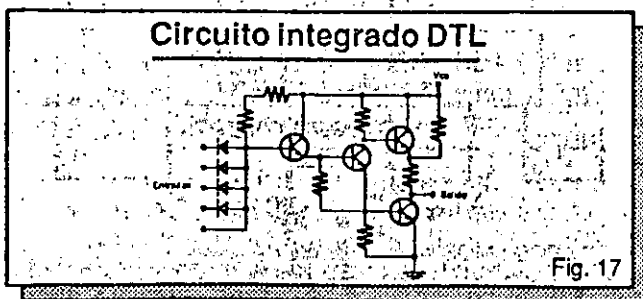

La siguiente familia en aparecer (1962) fue la TTL, que utilizaba sólo transistores y era más rápida que sus predecesoras. TTL es un acrónimo de Transistor-Transistor Logic (lógica de transistor a transistor). Los primeros trabajos en TTL fueron realizados por James Buie de Pacific Semiconductors (ahora subsidiaria de TRW).

Con el tiempo se impuso en el mercado la serie TTL 74XX, lanzada originalmente por Texas Instruments, la cual sigue siendo una de las más utilizadas y económicas. En la figura 18 se muestra el circuito de un dispositivo TTL típico.

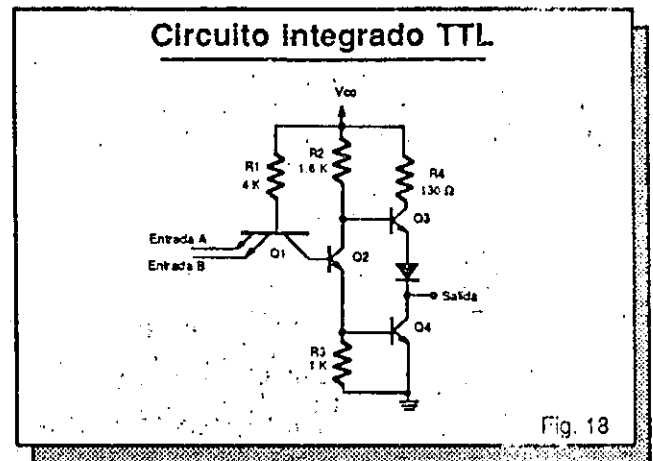


Mientras se desarrollaba la tecnología bipolar o TTL, algunos fabricantes, especialmente RCA, concentraban sus esfuerzos en los transistores de efecto de campo (FETs) y sus aplicaciones. En 1957, John Wallmark de RCA patentó el FET.

En 1962, Steven Hofstein y Frédéric Heiman, también de RCA, desarrollaron el transistor MOS o MOSFET (FET de compuerta aislada). A finales de este año, Hofstein y Heiman lograron fabricar el primer circuito integrado MOS, el cual contenía 16 transistores MOSFET distribuidos sobre una pastilla de silicio de 0.063 mm de lado.

Para 1963, RCA ya producía chips que contenían cientos de transistores MOSFET en una área muy reducida. El desarrollo del transistor MOS y su facilidad de integración permitió el surgimiento de familias como la MOS de canal P (PMOS), la MOS de canal N (NMOS) y la MOS complementaria (CMOS), todas de gran aceptación.

Dentro de las familias CMOS se impuso con el tiempo la serie 40XX, lanzada originalmente por la RCA, una de las más populares en la actualidad junto con la serie 74CXX de National. En la figura 19 se muestra el circuito interno de un dispositivo CMOS típico.

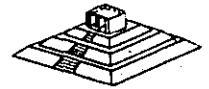

Una familia lógica es un grupo de chips o módulos funcionales, fabricados de acuerdo a la misma tecnología y eléctricamente compatibles, es decir se pueden interconectar directamente entre sí para configurar cualquier tipo de sistema digital.

Algunas veces es posible interconectar circuitos de dos familias diferentes adaptando los niveles de voltaje entre ellos mediante interfaces apropiadas.

Dependiendo de cómo se interconecten estos bloques lógicos, usted puede construir un computador, una calculadora, un sintetizador de música, un multímetro digital, un contador de eventos, un sistema de control industrial y miles más de posibilidades, limitadas únicamente por su imaginación.

Las familias bipolares más conocidas son la RTL (lógica de resistor a transistor), la DTL (lógica de diodo a transistor), la TTL (lógica de transistor a transistor), la ECL (lógica de emisor acoplado) y la I²L (lógica de inyección integrada).

Las dos primeras familias son completamente obsoletas en la actualidad pero fueron muy populares en los inicios de la electrónica digital.

Dentro de las familias bipolares, los circuitos más utilizados son los TTL. La familia ECL se utiliza principalmente en aplicaciones de muy alta frecuencia y la I²L en aplicaciones de control. Los dispositivos de esta última familia son generalmente híbridos, es decir realizan operaciones análogas y digitales en una misma pastilla.

Las familias MOS más conocidas son la CMOS (lógica de transistores MOSFET complementarios), la PMOS (lógica de transistores MOSFET canal P) y la NMOS (lógica de transistores MOSFET canal N). Los dispositivos de estas familias se caracterizan por su bajo consumo de potencia y su alta capacidad de integración.

Dentro de la familia MOS, los circuitos más utilizados son los CMOS. Las tecnologías PMOS y NMOS se utilizan principalmente en la fabricación de microprocesadores, memorias, calculadoras, etc.

Los circuitos integrados digitales TTL se caracterizan por su bajo costo, su alta velocidad, su moderada inmunidad al ruido y otros factores que expondremos más adelante.

La serie más popular de esta familia es la 74XX, constituida por los chips cuya referencia comienza por 74 como el 7400, 7404, 7447, 74LS04, 74L93, 74S181, 74ALS1035, etc.

Los circuitos integrados CMOS se caracterizan, entre otras cosas, por su amplio rango de voltajes de operación, su bajo consumo de corriente y su alta inmunidad al ruido.


Una de las series más populares de esta familia es la 40XXB, constituida por los chips cuya referencia comienza por 40 ó 45 y termina en B como 4017B, 40163B, 4522B, 4543B, etc.


Las familias lógicas TTL y CMOS se analizan extensamente en la lección 2. La mayoría de experimentos, proyectos y aplicaciones de este curso emplean circuitos integrados TTL y CMOS. Por esta razón es importante que usted conozca sus características y restricciones y los aprenda a utilizar eficientemente.

El cuadro de la figura 15 resume las dos grandes familias (bipolar y MOS) de circuitos integrados digitales y sus correspondientes subdivisiones.

Breve historia

El primer circuito integrado digital conocido fue concebido por Jack Kilby de Texas Instruments en 1959, más de una década después de la invención

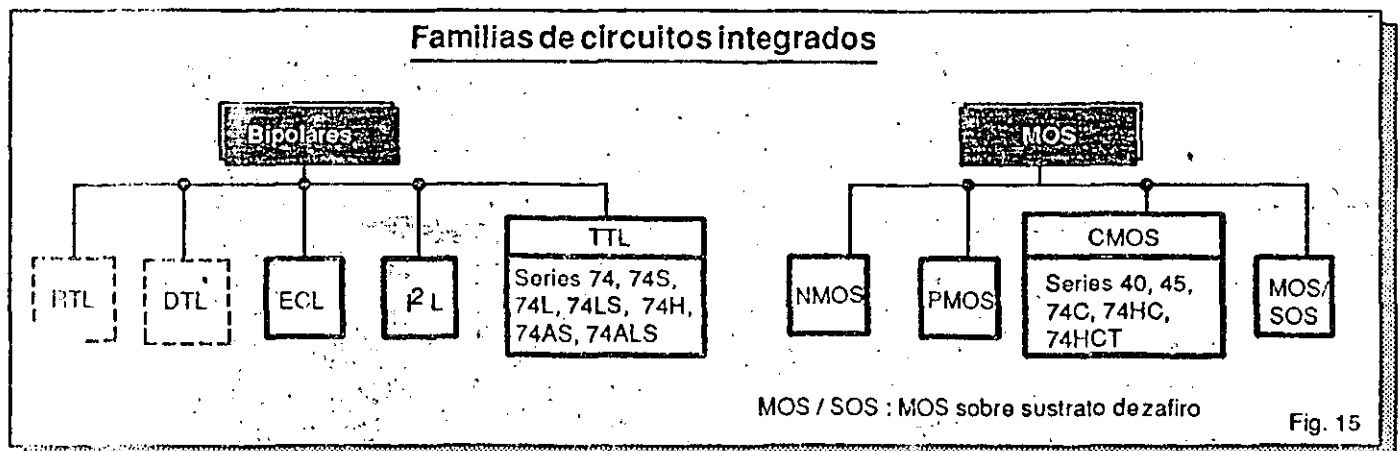

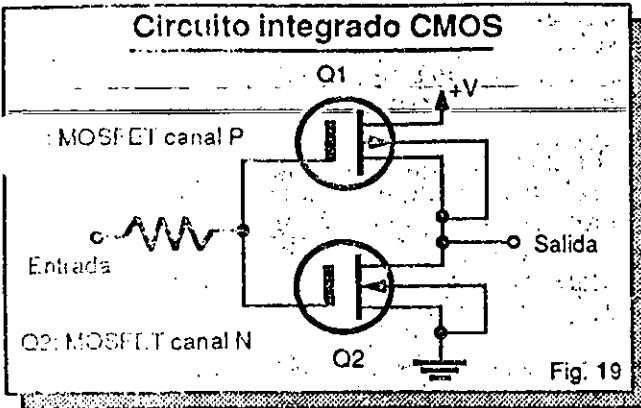

A pesar de que los circuitos integrados MOS prometían ser más simples de procesar, consumían menos potencia y permitían mayores niveles de integración que los bipolares, existían serios problemas en su fabricación, especialmente su extrema sensibilidad a la electricidad estática (ESD).

Además, los dispositivos MOS eran más lentos que los bipolares y requerían diferentes fuentes de alimentación. Debido a estos y otros inconvenientes, la tecnología MOS no tuvo mucha aceptación en sus comienzos.

Durante la mayor parte de los años 60's, sólo dos compañías, General Microelectronics y General Instruments producían chips MOS. Incluso RCA, líder de la tecnología MOS, desplazó la mayor parte de su interés hacia la tecnología bipolar, que era económicamente más rentable.


Sin embargo, la tecnología MOS resurgió con fuerza en 1967 cuando Fairchild lanzó al mercado la primera memoria MOS (una ROM de 64 bits) y se consolidó definitivamente en junio de 1971 con la introducción, por parte de Intel Corporation, del primer microprocesador (el 4004, de 4 bits).

Posteriores avances en los procesos de fabricación de los circuitos integrados aceleraron el crecimiento de una industria ya en expansión. En 1972, Mostek Corporation lanza la primera memoria de alta densidad (una RAM dinámica de 1024 bits) e Intel ofrece los primeros microprocesadores de 8 bits (el 8008 y el 8080).

En los años siguientes, otras industrias como National Semiconductor, Rockwell, AMI, Signetics, Western Digital, RCA, Motorola y Zilog producen sus propios microprocesadores (1802, TMS1000, 6800, Z80, 8048, 8086, Z8000, 68000, etc.).

Para mediados de la década de los 70's, existían cerca de 40 microprocesadores diferentes en el mercado. Actualmente, la cifra de microprocesadores disponibles es muy alta.

Escalas de integración

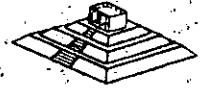

De acuerdo a su complejidad, los circuitos integrados digitales se clasifican en 4 categorías básicas llamadas SSI, MSI, LSI y VLSI. Esta clasificación se fundamenta en la cantidad de compuertas utilizadas para implementar la función propia del chip. Como sabemos, las compuertas son los bloques constructivos básicos de todos los circuitos digitales.

SSI significa Small Scale Integration (integración en pequeña escala) y comprende los chips que contienen menos de 13 compuertas. Ejemplos: compuertas y flip-flops. Los CI SSI se fabrican principalmente empleando tecnologías TTL, CMOS y ECL. Los primeros circuitos integrados eran SSI.

MSI significa Medium Scale Integration (integración en mediana escala) y comprende los chips que contienen de 13 a 100 compuertas. Ejemplos: codificadores, registros, contadores, multiplexores, decodificadores, demultiplexores. Los CI MSI se fabrican empleando tecnologías TTL, CMOS y ECL.

LSI significa Large Scale Integration (integración en alta escala) y comprende los chips que contienen de 100 a 1000 compuertas. Ejemplos: memorias, unidades aritméticas y lógicas (ALU's), microprocesadores de 8 y 16 bits. Los CI LSI se fabrican principalmente empleando tecnologías I²L, NMOS y PMOS.


VLSI significa Very Large Scale Integration (integración en muy alta escala) y comprende los chips que contienen más de 1000 compuertas. Ejemplos: microprocesadores de 32 bits, microcontroladores, sistemas de adquisición de datos. Los CI VLSI se fabrican también empleando tecnologías I²L, NMOS Y PMOS.

Cómo se fabrican los circuitos integrados

Prácticamente, todos los CI digitales disponibles en la actualidad se fabrican a partir de pastillas de silicio, aunque están apareciendo otras tecnologías como la basada en el arseniuro de galio (GaAs). El procesamiento del silicio para obtener CIs o chips es relativamente complicado pero intentaremos describirlo de una forma sencilla.

El silicio utilizado para la fabricación de chips es de una pureza del orden del 99.9999999%, y se produce químicamente a partir del dióxido de silicio (SiO₂), el principal constituyente de la arena. Una vez sintetizado, el silicio se funde en una atmósfera inerte y se cristaliza en forma de barras cilíndricas de hasta 10 cm de diámetro y 1 m de largo.

Cada barra se corta en pastillas de 0.25 a 0.50 mm de espesor y las superficies de estas últimas se

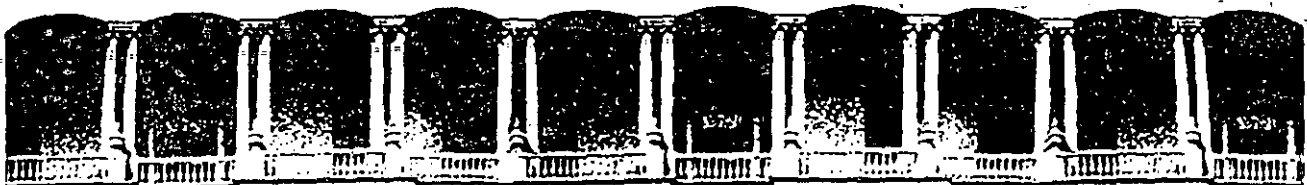

**FACULTAD DE INGENIERIA U.N.A.M.
DIVISION DE EDUCACION CONTINUA**

MANTENIMIENTO DE PC'S XT/AT Y PERIFERICOS

PARTE II

MATERIAL ANEXO

OCTUBRE, 1992.

EL BIOS COMO HERRAMIENTA DE DIAGNOSTICO

Uno de los elementos más importantes de cualquier sistema digital es, desde luego, el programa encargado de coordinar todos los elementos tanto de hardware como de software, que conforman al sistema. Genéricamente dicho programa es conocido como Monitor, IPL o BIOS.

Las funciones que realiza un programa Monitor son las siguientes:

- Configuración de Interrupciones.
- Configuración de DMA.
- Configuración de Puertos (Serie y Paralelo).
- Configuración de teclado y demás periféricos.
- Transferencia de Control hacia:

a).- Un sistema de mayor jerarquía.

b).- El usuario.

Las rutinas del Monitor deben ser eficientes y ocupar un espacio mínimo en memoria. Las rutinas básicas del Monitor están orientadas a:

- Cargado de datos en memoria.
- Lectura de datos en memoria.
- Despliegues ASCII.
- Control de Periféricos.
- Ejecución de Programas.

Haciendo un análisis de estas funciones, es posible realizar un reconocimiento del hardware instalado en la computadora, haciendo una serie de accesos a las rutinas adecuadas del BIOS. Antes de entrar a este punto es importante tratar algunos puntos básicos para una correcta asimilación de los elementos que aquí se expongan.

MAPA DE MEMORIA DEL SISTEMA.

Concretamente en las computadoras personales de IBM, el programa de inicialización se conoce como BIOS (Basis Input Output System). En la figura 1 (ver fig. página siguiente), podemos apreciar el Mapa de Memoria de una IBM PC original. Este mapa de memoria se ha respetado en su configuración para mantener compatibilidad con modelos posteriores de PC's y PS/2.

The System Memory Map

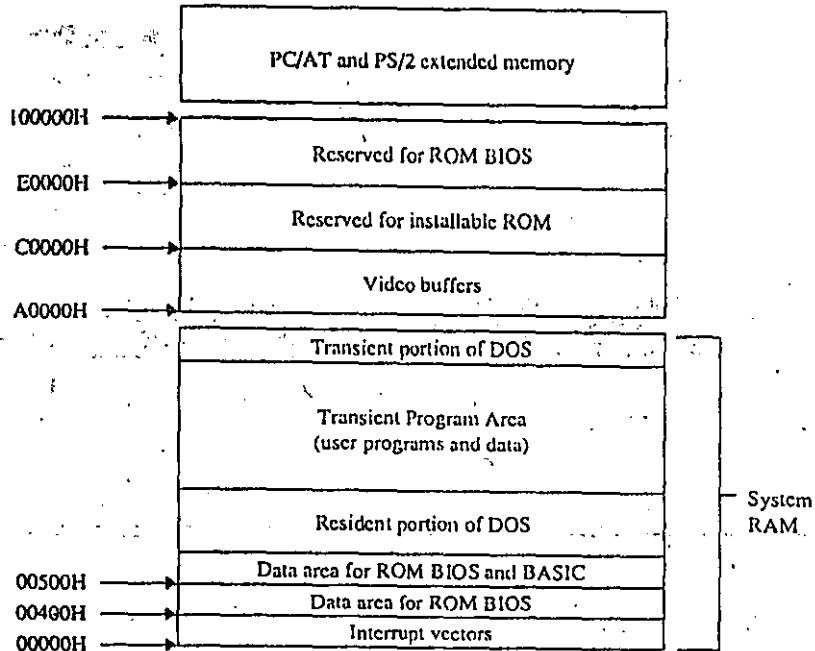


Figure 1-6. An outline of memory usage in PCs and PS/2s.

apuntes

Analizando el mapa propuesto, el espacio direccionable de 1 MBytes del 8088 fué dividido en varias áreas funcionales; la que en este momento nos ocupa es la correspondiente al BIOS. Es importante notar que cualquier sistema basado en este microprocesador debe tener memoria ROM en la parte más alta del espacio direccionable de 1 MB. debido a que cuando el sistema es encendido, el micro ejecuta el programa que inicia en la dirección FFFF0H

Así mismo, tiene reservados los primeros 1024 bytes de RAM para almacenar en él una lista de vectores de interrupción (direcciones de rutinas manejadoras de interrupciones). El resto del mapa de memoria sigue esta división general entre RAM en la parte baja y ROM en la parte alta del espacio direccionamiento.

EL MICROPROCESADOR 8088

Un microprocesador es un circuito combinacional y secuencial que va a interactuar con otros circuitos para formar en conjunto un sistema digital de cómputo.

En esencia, el microprocesador determina la capacidad del sistema ya que su velocidad establece la velocidad máxima de operación del sistema, siempre que los dispositivos que lo acompañan (memorias, puertos, etc.) trabajen a la misma frecuencia de operación; sus pines de datos y direcciones establecen la capacidad de almacenamiento y el tamaño de las palabras; sus pines de control indican el tipo de interface E/S que debe ser usada.

Entre las múltiples funciones que realiza un microprocesador, destacan las siguientes:

- 1.- Provee las señales de tiempo y control para todos los elementos del sistema.
- 2.- Búsqueda de instrucciones y datos desde la memoria.
- 3.- Transferencia de datos desde y hacia dispositivos de E/S.
- 4.- Decodificación de instrucciones.
- 5.- Realización de operaciones lógicas y aritméticas solicitadas a través de instrucciones.
- 6.- Respuesta a las señales de control de E/S tales como **RESET** e **INTERRUPT**.

Cabe señalar que la lógica interna del microprocesador no puede ser accesada externamente; los elementos del micro se accesan por software. Esto significa que podemos afectar la circuitería interna del microprocesador únicamente por el programa que ponemos en la memoria del sistema para que el micro lo ejecute.

La lógica del microprocesador la podemos dividir en tres grandes áreas funcionales:

- i) Sección de Registros.
- ii) Sección de Tiempos y Control.
- iii) ALU.

En la figura 2 (ver fig. página siguiente), podemos apreciar el Diagrama de Bloques Funcionales del 8088. Para efectos de este tema, únicamente haremos referencia a la Sección de Registros.

El 8088 fue diseñado para ejecutar instrucciones y realizar operaciones lógicas y aritméticas, así como recibir y pasar datos hacia y desde la memoria. Para hacer esto, usa varios registros de 16 bits.

Hay catorce registros en total, cada uno con una función especial. Cuatro Registros de Datos (AX, BX, CX, DX) también conocidos como (Scratch-Pad); los cuales son usados por programas para almacenar temporalmente los resultados internos y operandos de las operaciones aritméticas y lógicas. Cuatro Registros de Segmento (CS, DS, SS, ES), que retienen los valores del segmento. Cinco Registros Apuntadores e Índices (IP, SP, BP, SI, DI), los que retienen el desplazamiento (offset) que es usado en los registros de segmento para localizar datos en la memoria.

Finalmente un Registro de Banderas (FLAGS), el cual contiene nueve banderas de 1 bit las cuales son usadas para almacenar información sobre el estado y control de las operaciones del 8088, en la la figura 3 (ver fig. en la página siguiente), se muestran dichos registros.

EL BIOS

El BIOS está hecho de códigos y programas que proporcionan el control a un nivel del dispositivo para la mayor de los dispositivos de entrada y salida en el sistema. En la familia IBM PC, el BIOS está contenido en ROM en la tarjeta principal del sistema, junto con un conjunto de rutinas llamadas a POST (Power On Self Test), que verifican la máquina cuando ésta es encendida.

El BIOS crea independencia del hardware proporcionando un cierto nivel de separación de éste. Por ejemplo, cuando se hace una llamada al BIOS que envíe un carácter a la impresora, el programador no necesita conocer la dirección de E/S del puerto del impresor o como controlarlo.

El BIOS normalmente es invocado vía un conjunto de interrupciones vectorizadas en varios puntos de entrada del BIOS. Otros vectores de interrupción son usados para servir las interrupciones de hardware, tales como: "operación de discos terminada".

8088 8-BIT HMOS MICROPROCESSOR 8088/8088-2

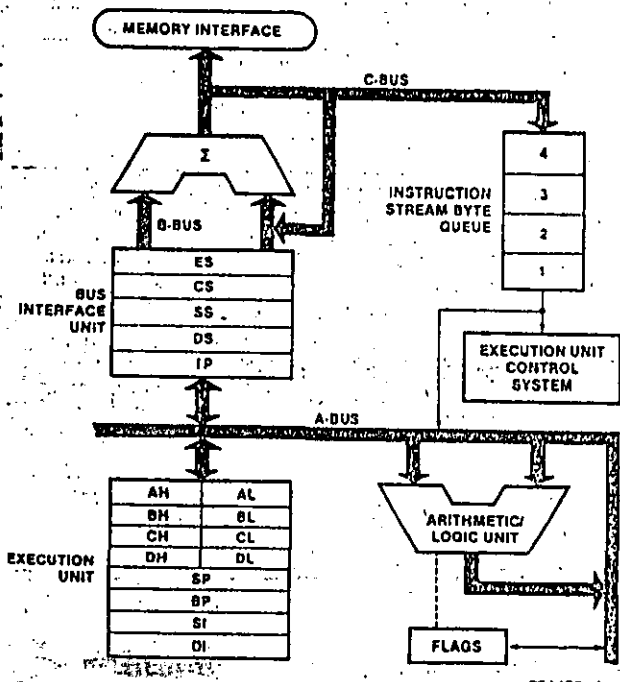


Figure 1. 8088 CPU Functional Block Diagram

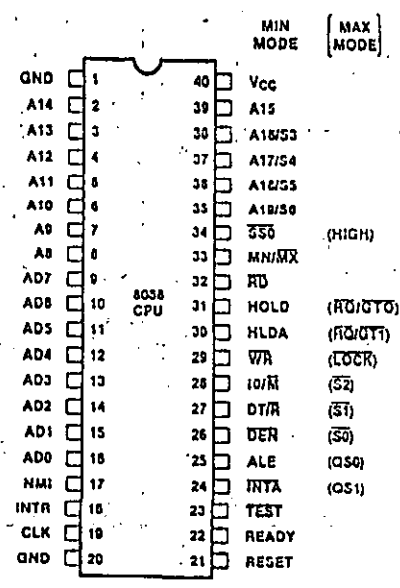


Figure 2. 8088 Pin Configuration

apuntes

En términos prácticos, el software invoca el BIOS cargando los registros apropiados en el microprocesador y usando la instrucción INT.

El BIOS es extensible. Cuando las rutinas POST se ejecutan, como parte de su operación buscan el espacio de dirección de la ROM para rutinas "add-on", las cuales entonces son invocadas así que ellas pueden instalarse por si mismas. Por ejemplo el IBM EGA, extiende la interrupción de video INT 10, como se indica en la Tabla 2 (ver fig. en la página siguiente)

La regla para las entradas del BIOS es una interrupción de software por dispositivo. Pueden ser también una o más entradas de hardware, y entradas que apunten a tablas o bloques de datos usados por el manejador del dispositivo.

Los vectores de interrupción, usados como apuntadores a datos en lugar de código, permiten alternar fácilmente el ambiente de trabajo de la computadora.

En lo que se refiere a las localidades de memoria absoluta, nótese lo siguiente: Algunas funciones han sido agregadas a los vectores de interrupción (0:0 a 3FF), pero ninguna función ha sido redefinida. Los mapas de memoria para el despliegue del video (A000:0 y B800:0) no cambiarán el modo de operación del BIOS para un modo de video dado. Si el mapa de bit es alterado, un nuevo modo es definido para soportarlo. Las áreas de datos del ROM-BIOS (iniciando de 40:0) retendrán sus definiciones actuales tanto como las funciones correspondientes estén definidas. En otras palabras, las definiciones pueden cambiar a capricho de IBM.

INTERRUPCIONES EN EL 8088

Una interrupción en un microprocesador es la suspensión temporal de la ejecución del proceso que en ese momento realiza el procesador, e inicia la ejecución de otro, que por lo general se conoce como Servidor de la Interrupción. El Controlador de Interrupciones es el encargado de determinar la causa de la interrupción, tomando la acción apropiada y regresando el control al proceso que originalmente fue suspendido.

Esto es, se salva el estado actual del sistema en el stack y se salta a una rutina de servicio a la interrupción solicitada, dicha rutina es determinada por el número de la interrupción. Después de que la rutina ha terminado, se realiza un "regreso de interrupción", lo cual causa que el programa que se trabajaba previamente resume su ejecución.

Las interrupciones son generalmente causadas por eventos externos al CPU que requieren atención inmediata. El 8088 reserva el primer KByte de memoria para almacenar en él la Tabla de Vectores de Interrupción.

The 8086 Registers

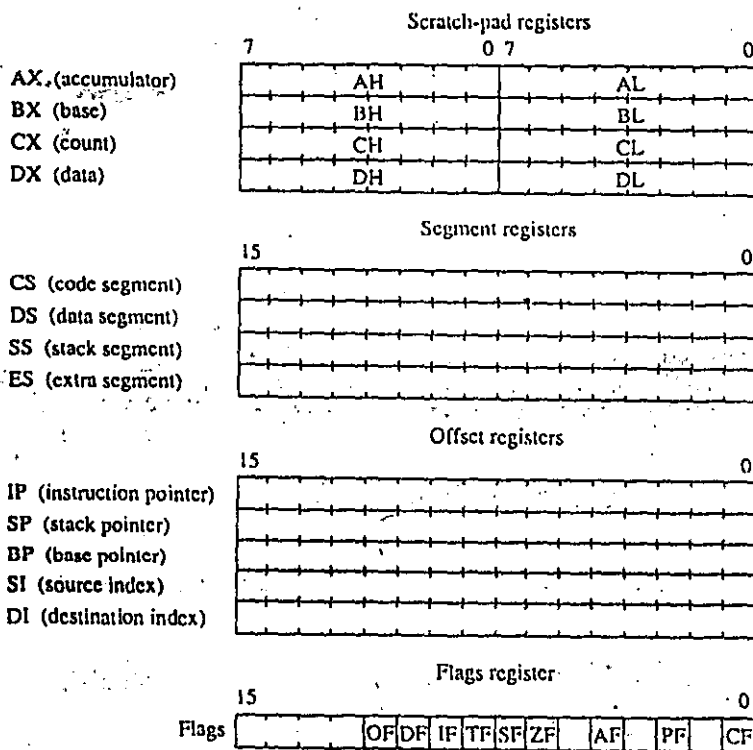


Figure 2-5. The 8086 registers and flags.

apuntes

Esta tabla contiene las direcciones de las rutinas de servicio de las interrupciones en un formato segmento-desplazamiento (segment-offset). Esto significa que cada dirección requiere 4 bytes, por lo que el 8088 soporta 256 vectores de interrupción. Estos 256 tipos de interrupciones pueden agruparse en tres categorías básicas.

+Internas de Hardware: Generadas por ciertos eventos encontrados durante la ejecución de un programa.

+Externas de Hardware: Realizadas por los controladores de los dispositivos periféricos o por coprocesadores.

+Software: Realizadas de manera asíncrona por cualquier programa al ejecutar la simple instrucción INT.

Para cada tipo de interrupción hay reservado un vector de interrupción, el cual especifica donde se encuentra localizado el programa manejador de interrupciones para ese tipo de interrupción.

El sistema operativo se divide en dos: ROM-BIOS (Read Only Memory-Basic Input Output System) y Dos (Disk Operating System). Las interrupciones 00H a 1FH, son usadas para interrupciones internas de hardware y el BIOS; en tanto que las interrupciones 20H a 3FH son usadas por el DOS; y el resto 40H a FFH, está disponible para ser usadas en aplicaciones posteriores.

La forma en que las funciones del sistema operativo son accedidas en el DOS es a través de interrupciones de software. Cada interrupción accesa a una categoría específica de funciones y éstas son determinadas por el valor del registro AH. Si se necesita información adicional, ésta es pasada en los registros AL, BX, CX y DX.

INTERRUPCIONES EN EL ROM-BIOS

Cada una de las interrupciones en ROM-BIOS está asociada con un número de opciones que pueden ser accedidas dependiendo del valor contenido en el registro AH al momento de ser solicitada la interrupción. La lista completa de las interrupciones del BIOS se da en la Tabla 1. (ver disco de interrupciones del curso).

INTERRUPCIONES EN EL DOS

La parte del sistema operativo que es cargada y ejecutada por el cargador del ROM-BIOS es llamada DOS. Contiene varias funciones que la mayor parte de las veces son de un nivel mucho más alto que las rutinas del ROM-BIOS. (Hay un cierto traslape sin embargo). Todas las funciones del DOS son accedidas a través de la interrupción 21H, la cual usa el registro AH para pasar el número de función requerido por el DOS. En la tabla 2 se muestran las principales funciones de la interrupción 21H del DOS. (ver disco de interrupciones).

RUTINAS DEL BIOS DE DIAGNOSTICO

En este momento ya tenemos los elementos necesarios para poder emplear algunas de las rutinas del BIOS más importantes y que nos permitirán realizar algunos diagnósticos sobre el funcionamiento de la computadora. Para ello se diseñará un pequeño programa que maneje algunas de las interrupciones dadas en las Tablas 1 y 2; evidentemente no es posible realizar el análisis de todas las que se plantean en dichas tablas, por lo que se ha hecho una selección de aquellas que sean más representativas del uso y manejo de las interrupciones.



**FACULTAD DE INGENIERIA U.N.A.M.
DIVISION DE EDUCACION CONTINUA**

**MANTENIMIENTO DE PC'S XT/AT Y
PERIFERICOS (PARTE II)**

MATERIAL ADICIONAL

OCTUBRE 1992.

Circuitos Integrados



Lineales : Operan con señales continuas para proporcionar funciones electrónicas como amplificadores y comparadores de voltaje.

Digitales : Operan con señales binarias y están hechos de compuertas digitales interconectadas

apuntes

Tipos de Circuitos Integrados



SSI : (Small Scale Integration) Varias Compuertas en una pastilla.

MSI : (Medium Scale Integration) de 10 a 100 Compuertas en una pastilla.

LSI : (Large Scale Integration) de 100 a 900 Compuertas en una pastilla.

VLSI: (Very Large Scale Integration) Miles de Compuertas en una pastilla.

apuntes

Familias Lógicas Digitales



Resistor
Transistor
Logic Lógica de Resistor-Transistor

Diode
Transistor
Logic Lógica de Diodo-Transistor

Transistor
Transistor
Logic Lógica de Transistor-Transistor

Integrated Injection
Logic Lógica de Inyección
Integrada

Emitter
Coupled
Logic Lógica de Emisor Acoplado

Metal
Oxide
Semiconductor Semiconductor de
Óxido Metálico

Complementary
Metal
Oxide
Semiconductor Semiconductor Complementario
de Óxido Metálico

apuntes

Niveles H y L en las familias Lógicas



Tipo de Familia de IC	Voltaje de suministro (V)	Alto nivel de voltaje (V)		Bajo nivel de voltaje (V)	
		Márgenes	Típico	Márgenes	Típico
TTL	$V_{CC} = 5$	2.4 - 5	3.5	0 - 0.4	0.2
ECL	$V_{EE} = -5.2$	-0.95 - -0.7	-0.8	-1.9 - -1.6	-1.8
CMOS	$V_{DD} = 3 - 10$	V_{DD}	V_{DD}	0 - 0.5	0



Características Típicas de las Familias Lógicas



Familia Lógica IC	Abanico de Salida	Disipación de potencia (mW)	Retardo de propagación (ns)	Márgen de Ruido (V)	Nomenclatura
TTL	10	10	10	0.4	5400
Schottk y TTL	10	22	3	0.4	7400
Baja Pot. Schott y TTL	20	2	10	0.4	9000 y 8000
ECL	25	25	2	0.2	
CMOS	50	0.1	25	3	4000

apuntes

Asignación de amplitud de señal y tipo de Lógica

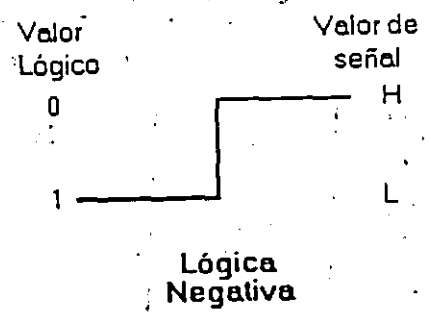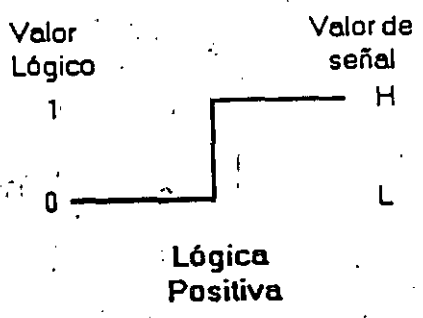

apuntes